

Passenger/Cargo Department

-Aft compartment- All loose items stowed

-Emergency Equipment – Check

a. Fire Extinguisher

b. Raft

c. First Aide Kit

d. Passenger oxygen masks, lifevests

-Emergency exit – Latched, flush with interior

-Windows – Check general condition

-Passenger sets – Check backs are upright

Flight Station

-Control locks – Remove & stowe

-Parking brake – Set

-Emergency gear controls - Check

-Oxygen – Check PSI (1k/1.5k) & ensure mask is operable

-Windshield – Check condition

-ESIS- Off

-MFD Card- Installed

-Transponder – Standby

-Environmental Controls – Off

-Prop Sync – Off

-Flaps – Correspond

-Trim – Check full range & set for T/O

-Start & Auto IGN switches – Off

-Avionics Master – Off

-Battery – On

a. Battery voltage – Check

b. Fuel quantity/current limiters – Check

1. Copy fuel quantities

c. Gear lights – check

1. Indicator lights

2. Gear handle lights – Press HD LT Test and check red bulbs

3. Wheels up lights – Press to test

-Exterior lights – As required

-Annunciator Panel – Check

-Battery – Off

-AUX Battery – Test

a. Place in test

b. Place on and ensure RTU powers on

c. Return to OFF position

-Emergency Equipment – Check

a. Oxygen masks- Check in 100% and flow indicator shows green when push-pull knob is pulled. Bleed off residual pressure.

b. Fire ext under C/P seat

c. Lifevests

-Ensure displays and components are secure