




# EXTERIOR INSPECTION


**VT10**

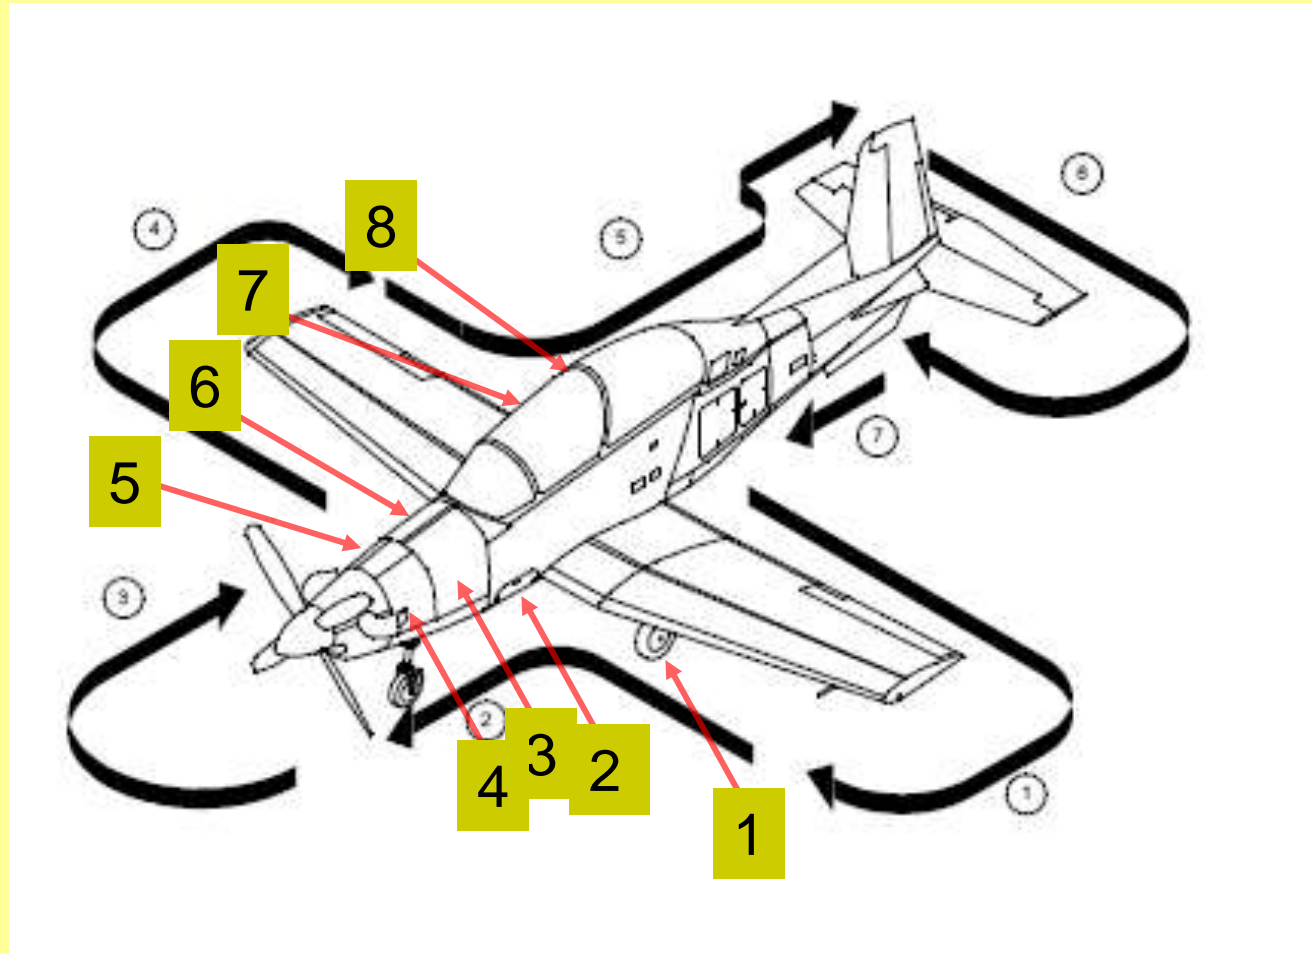



# Antennas

**VT10**

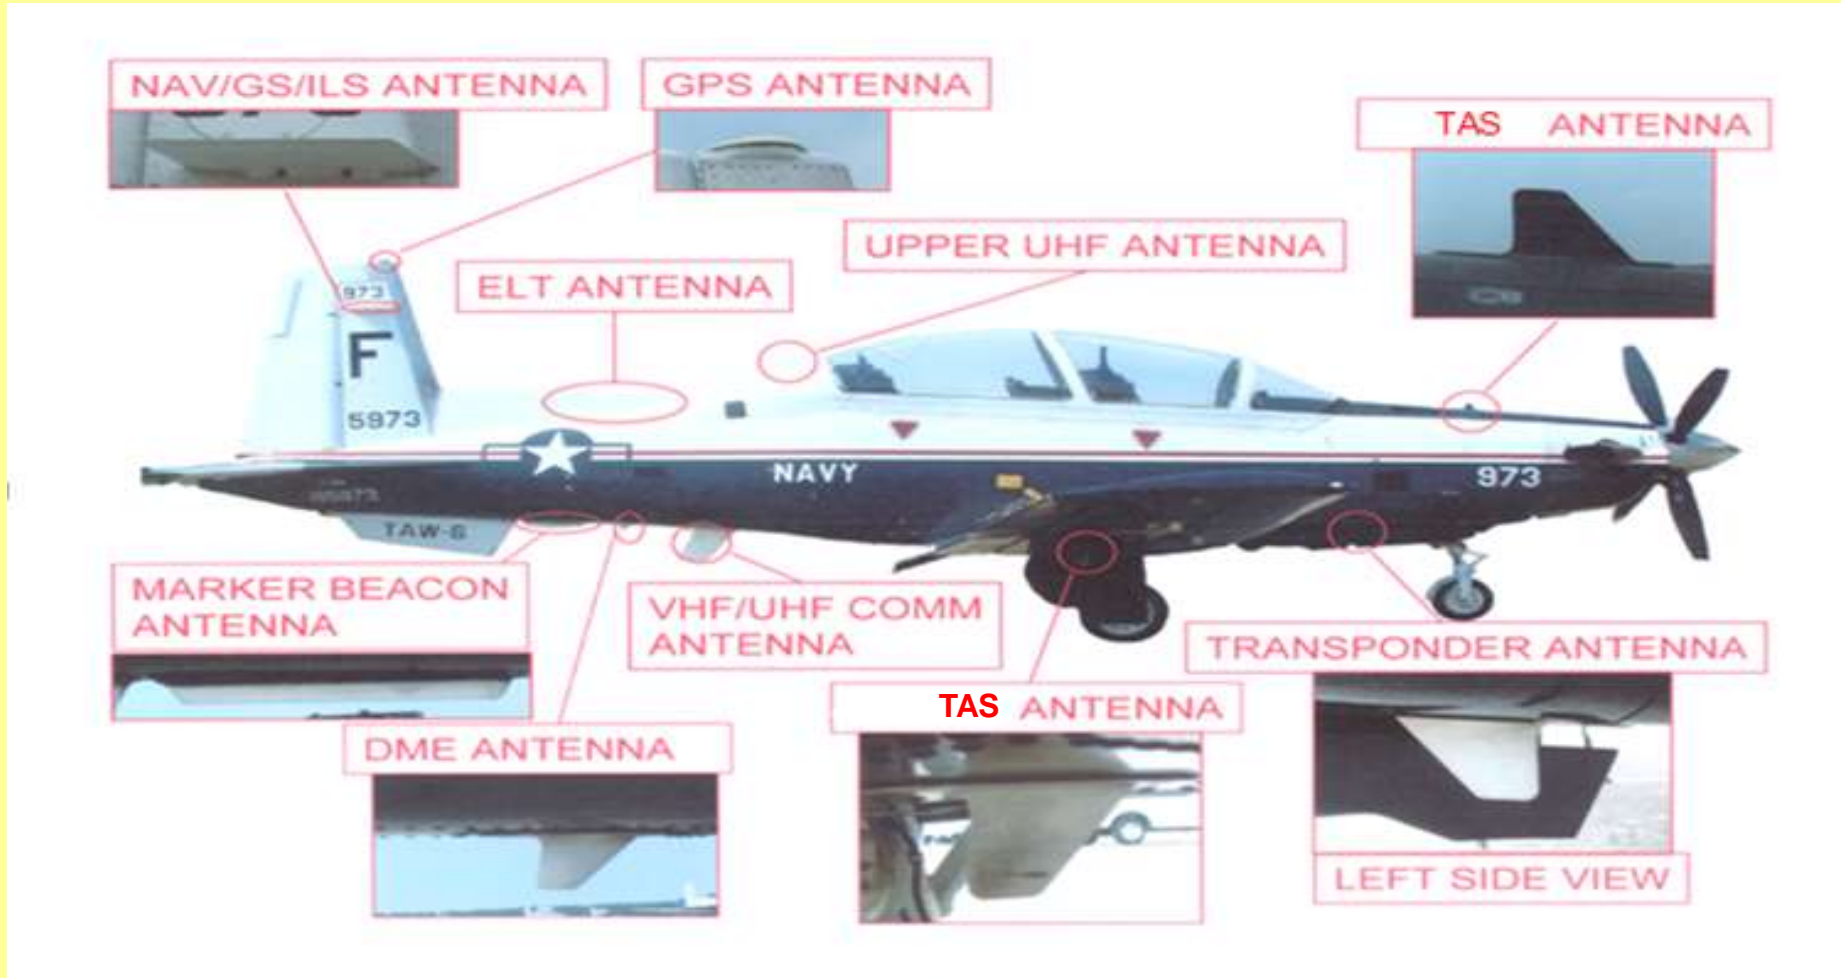




# 1. Brake Wear Indicators (2)

VT10



Strut extension

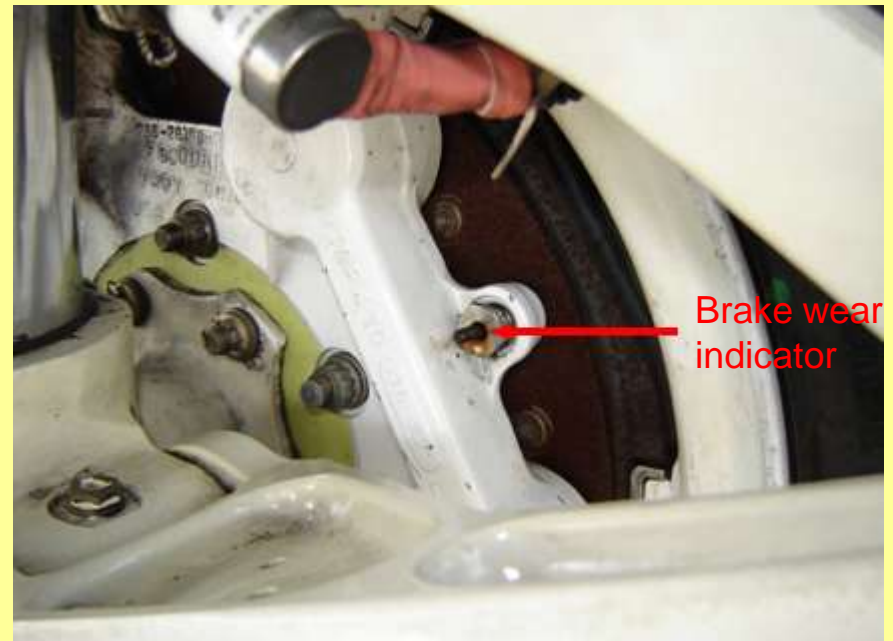

Brake wear indicator



# 1. Tire Condition (normal wear)

VT10







# 1. Tire Condition (red cord)


**VT10**





## 2. Single Point Refueling Door

VT10

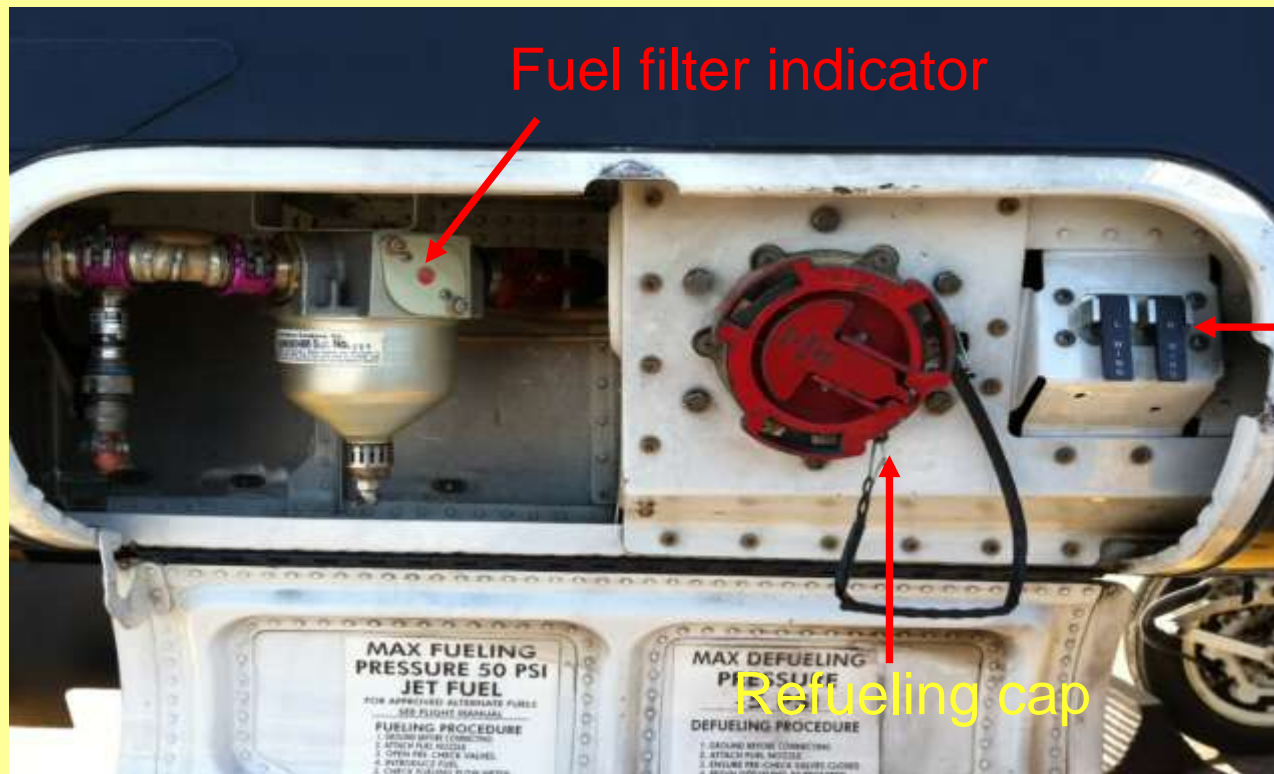

Fuel filter indicator

Pre-check valves


Refueling cap





### 3. Nose Gear Spring Strut


**VT10**

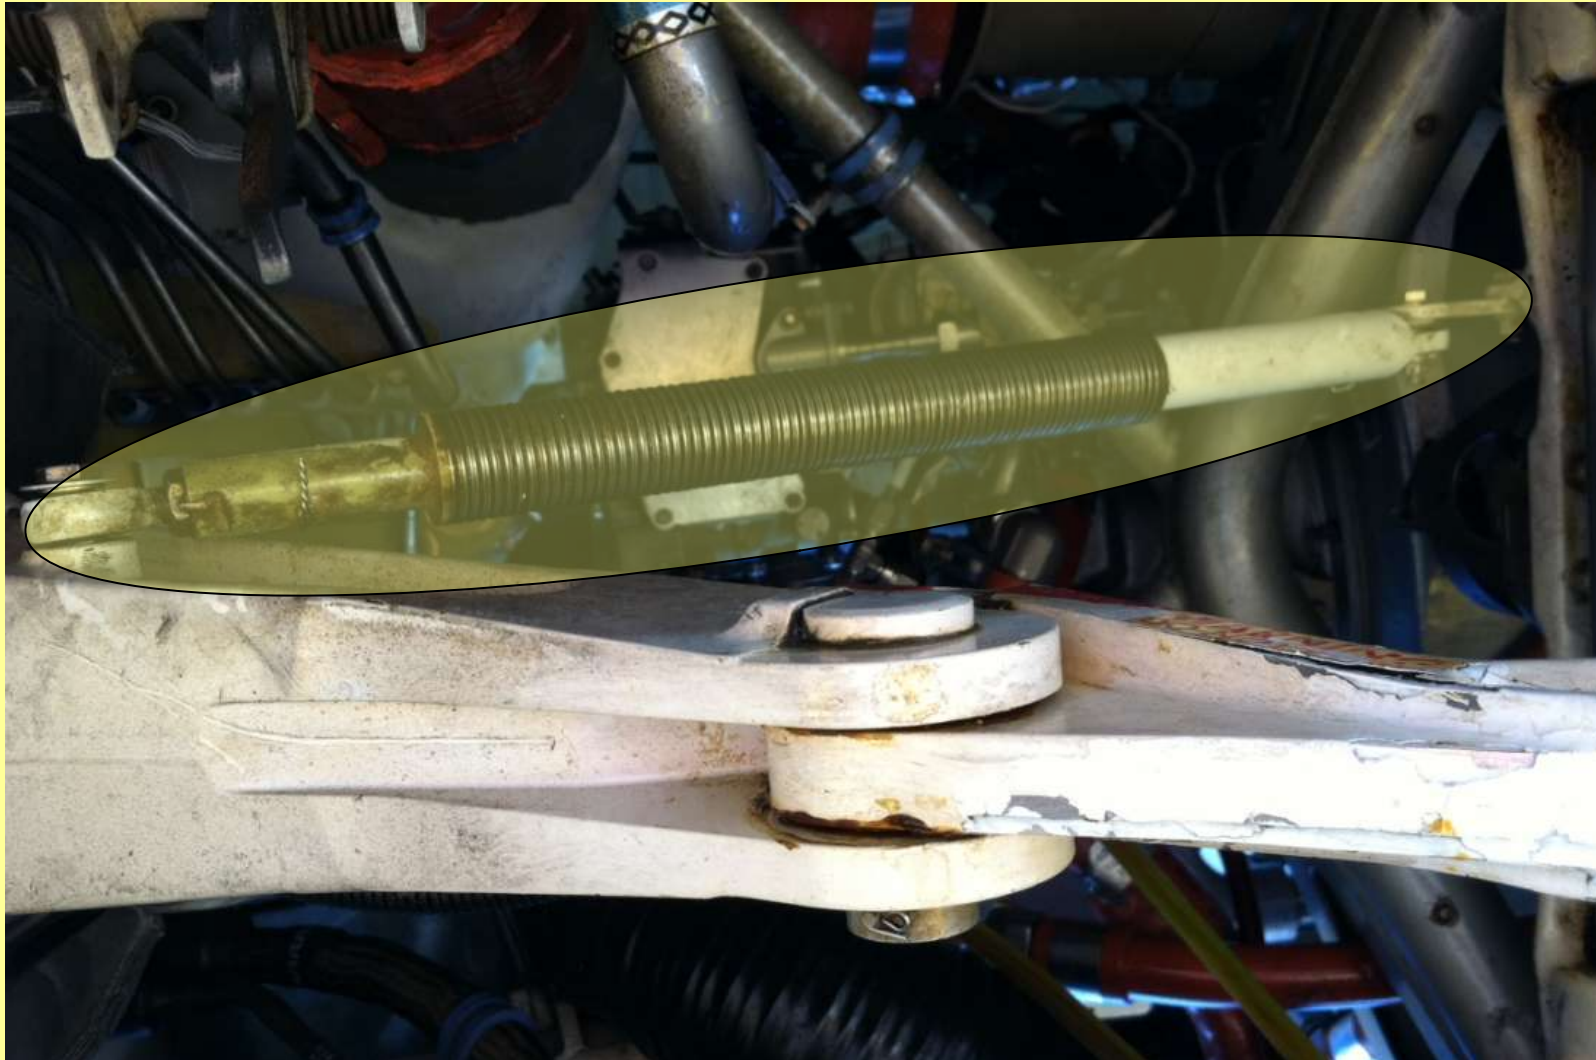



### 3. Engine Compartment (Port Side)

**VT10**

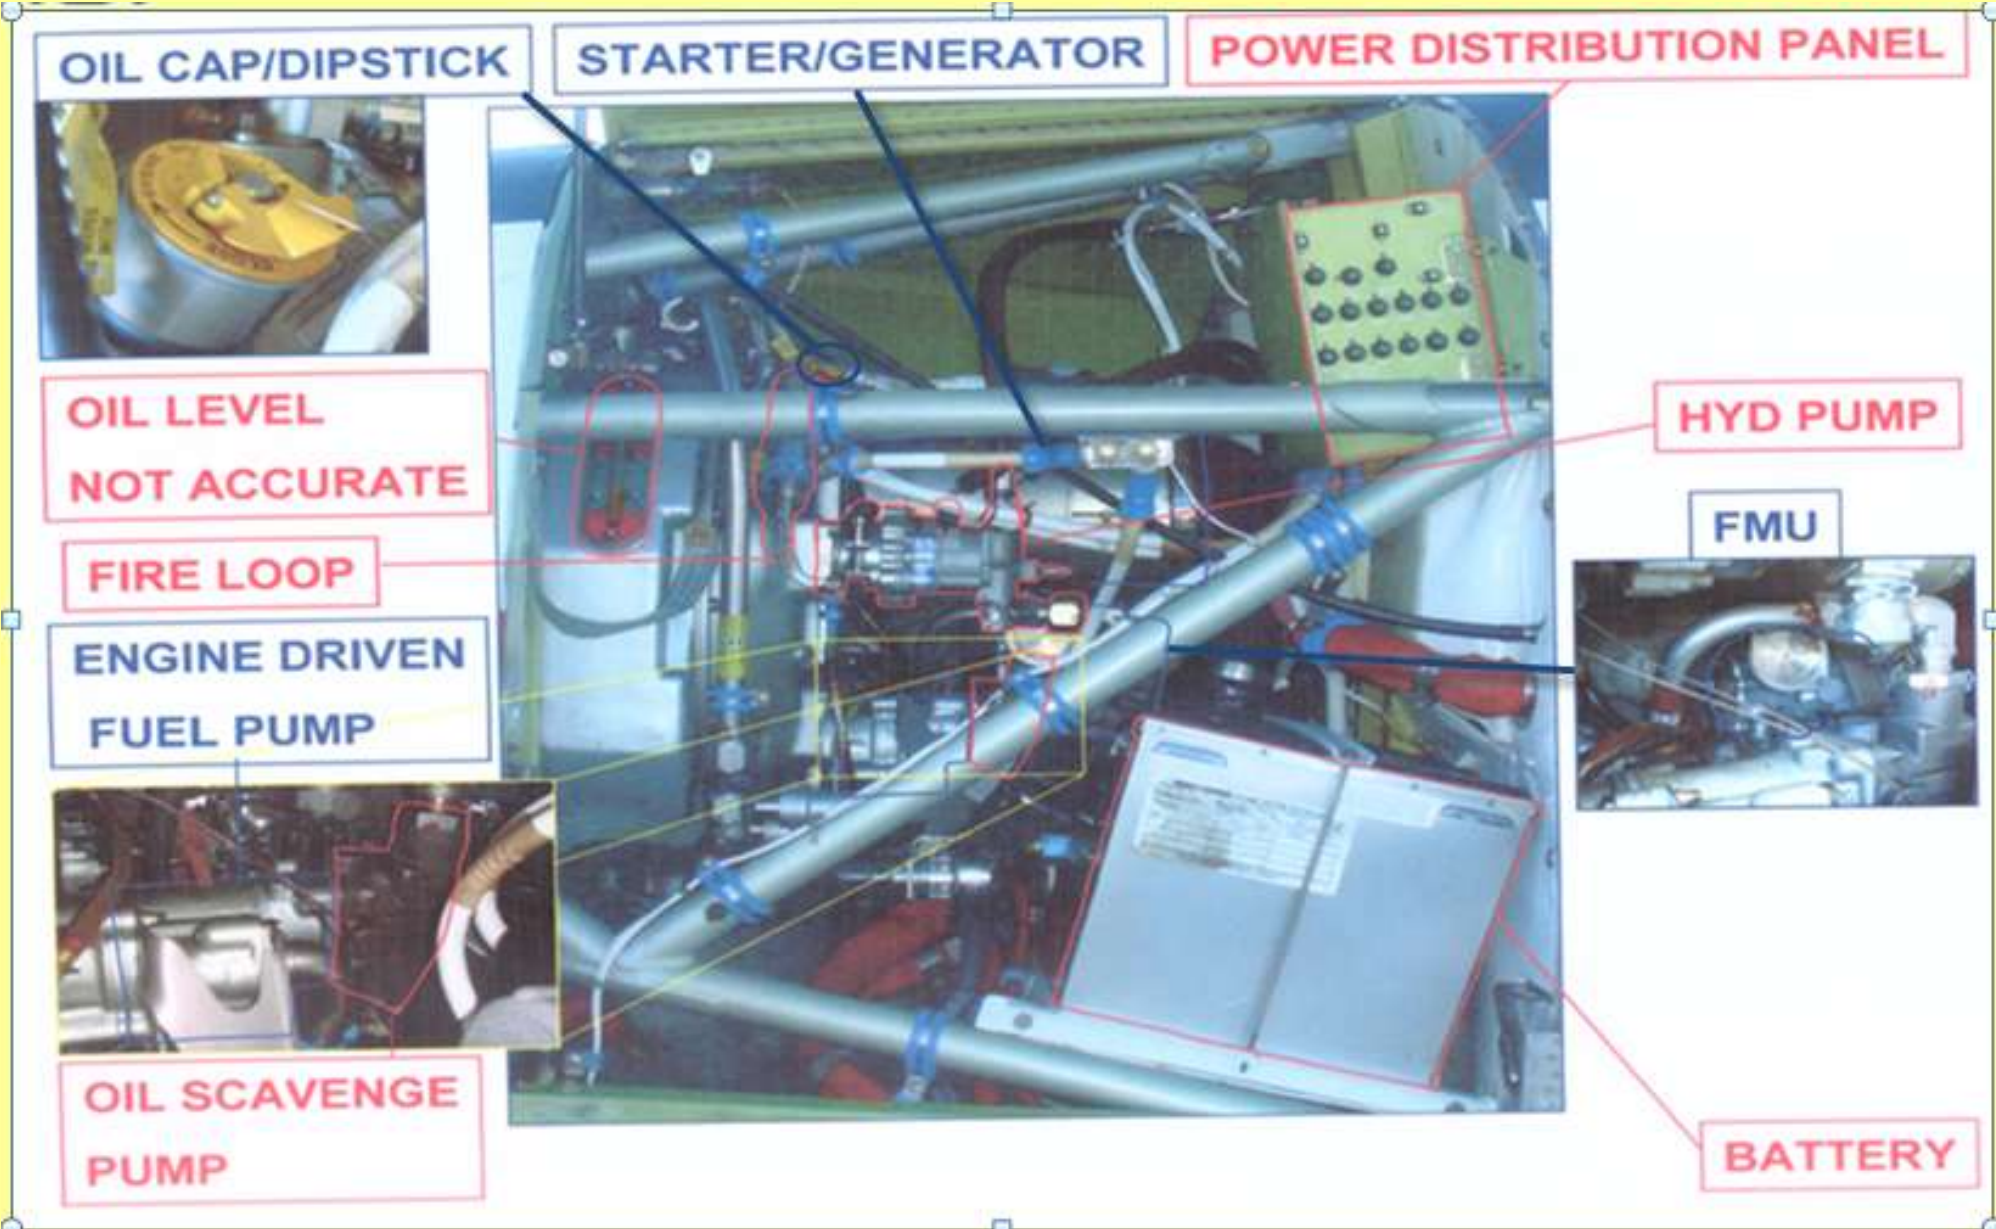




# 4. Engine (Port Side – Cowlings Removed)




**VT10**

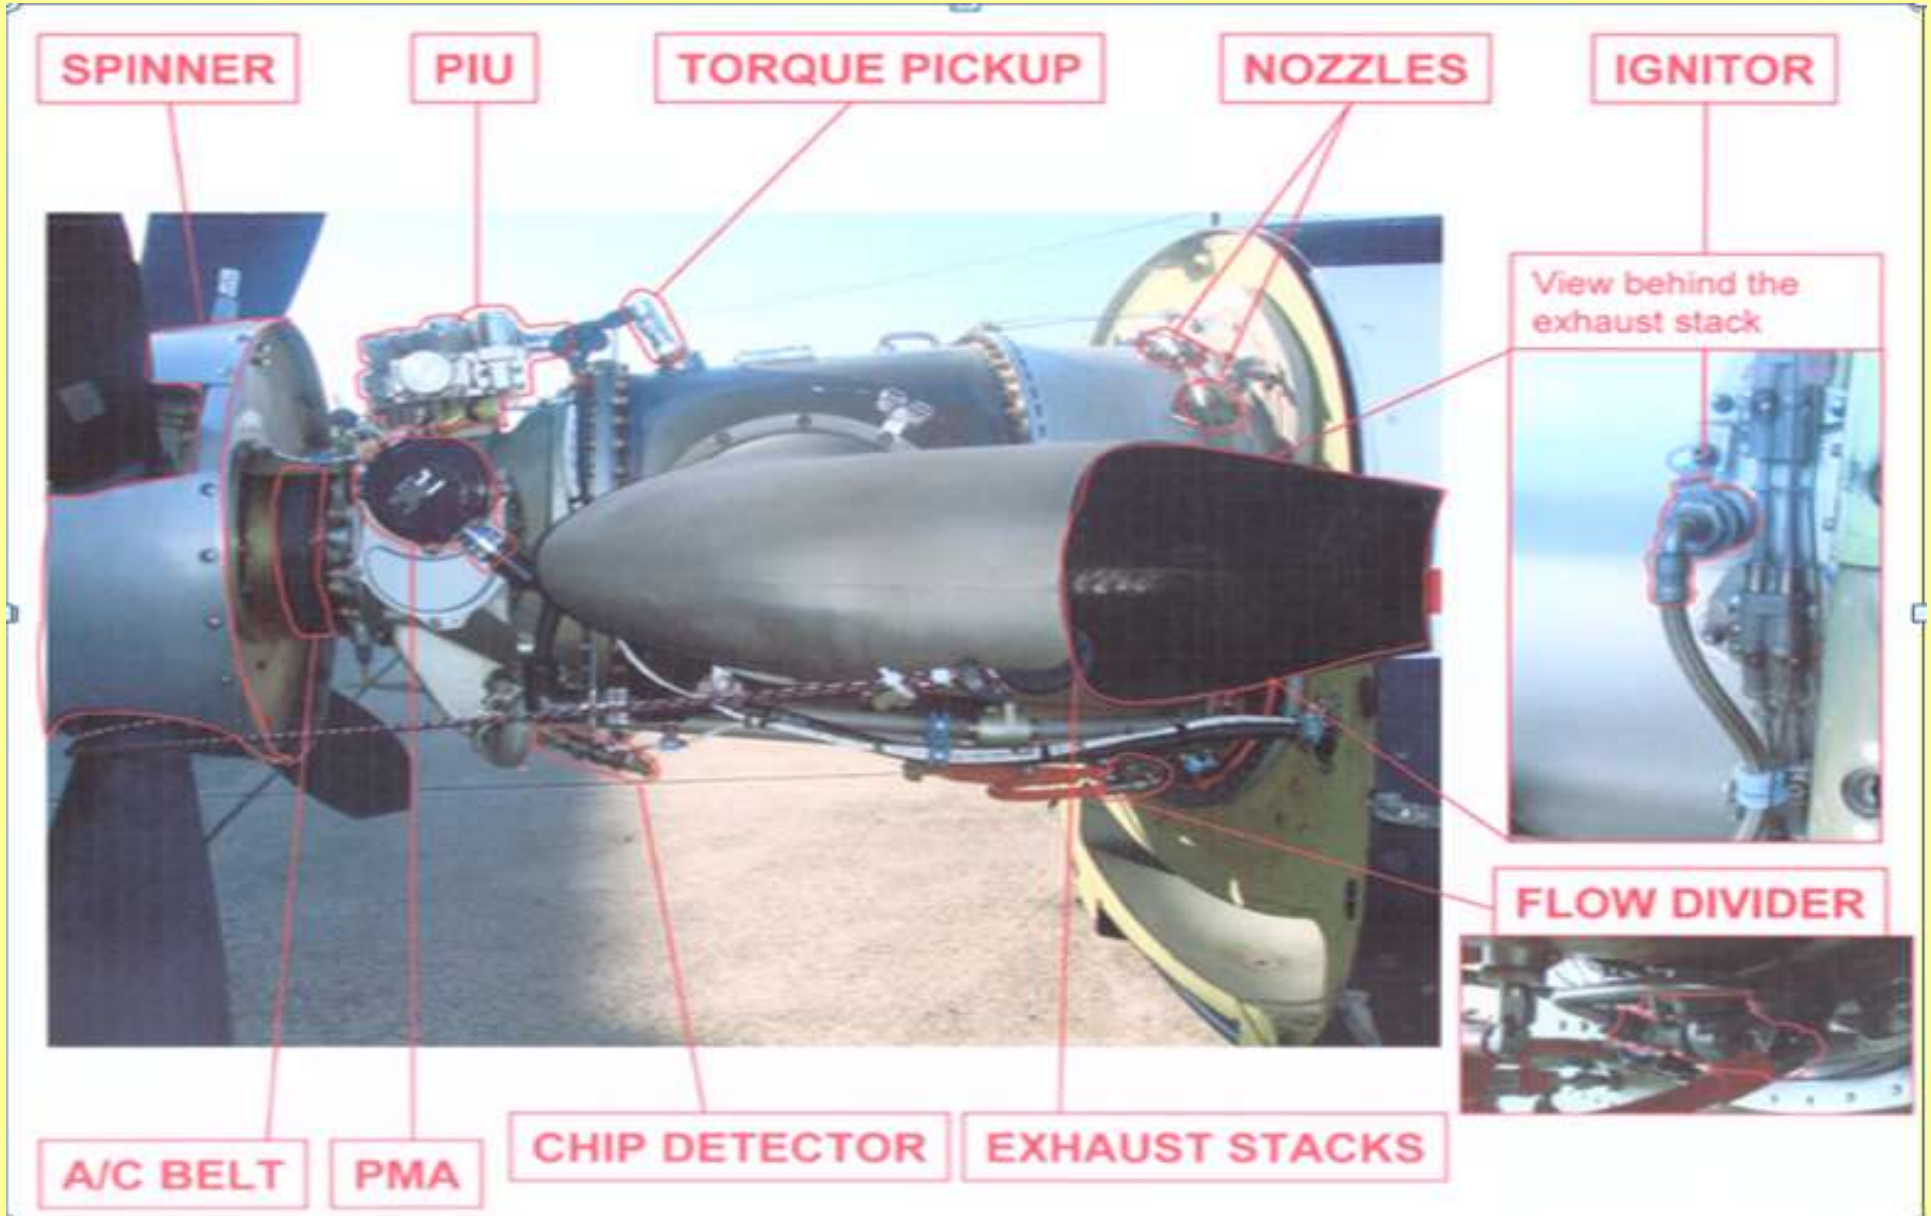



## 5. Engine (Starboard Side – Cowlings Removed)

**VT10**

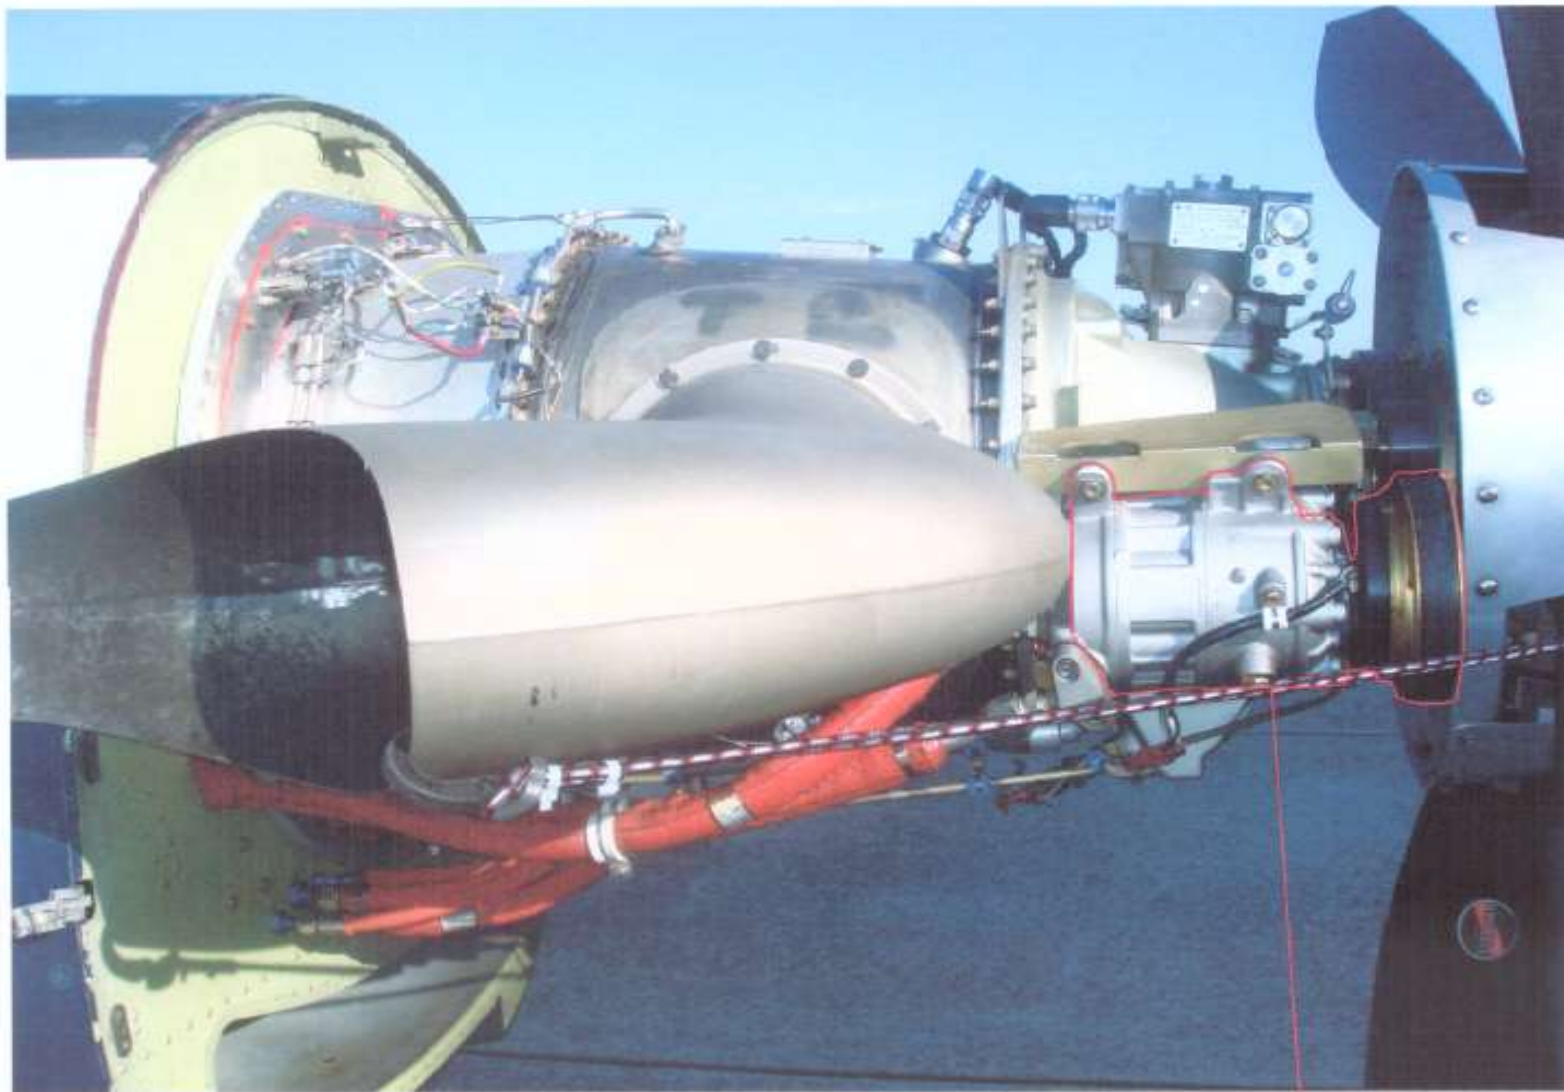


**A/C COMPRESSOR**





## 6. Engine Compartment (Starboard Side)

**VT10**

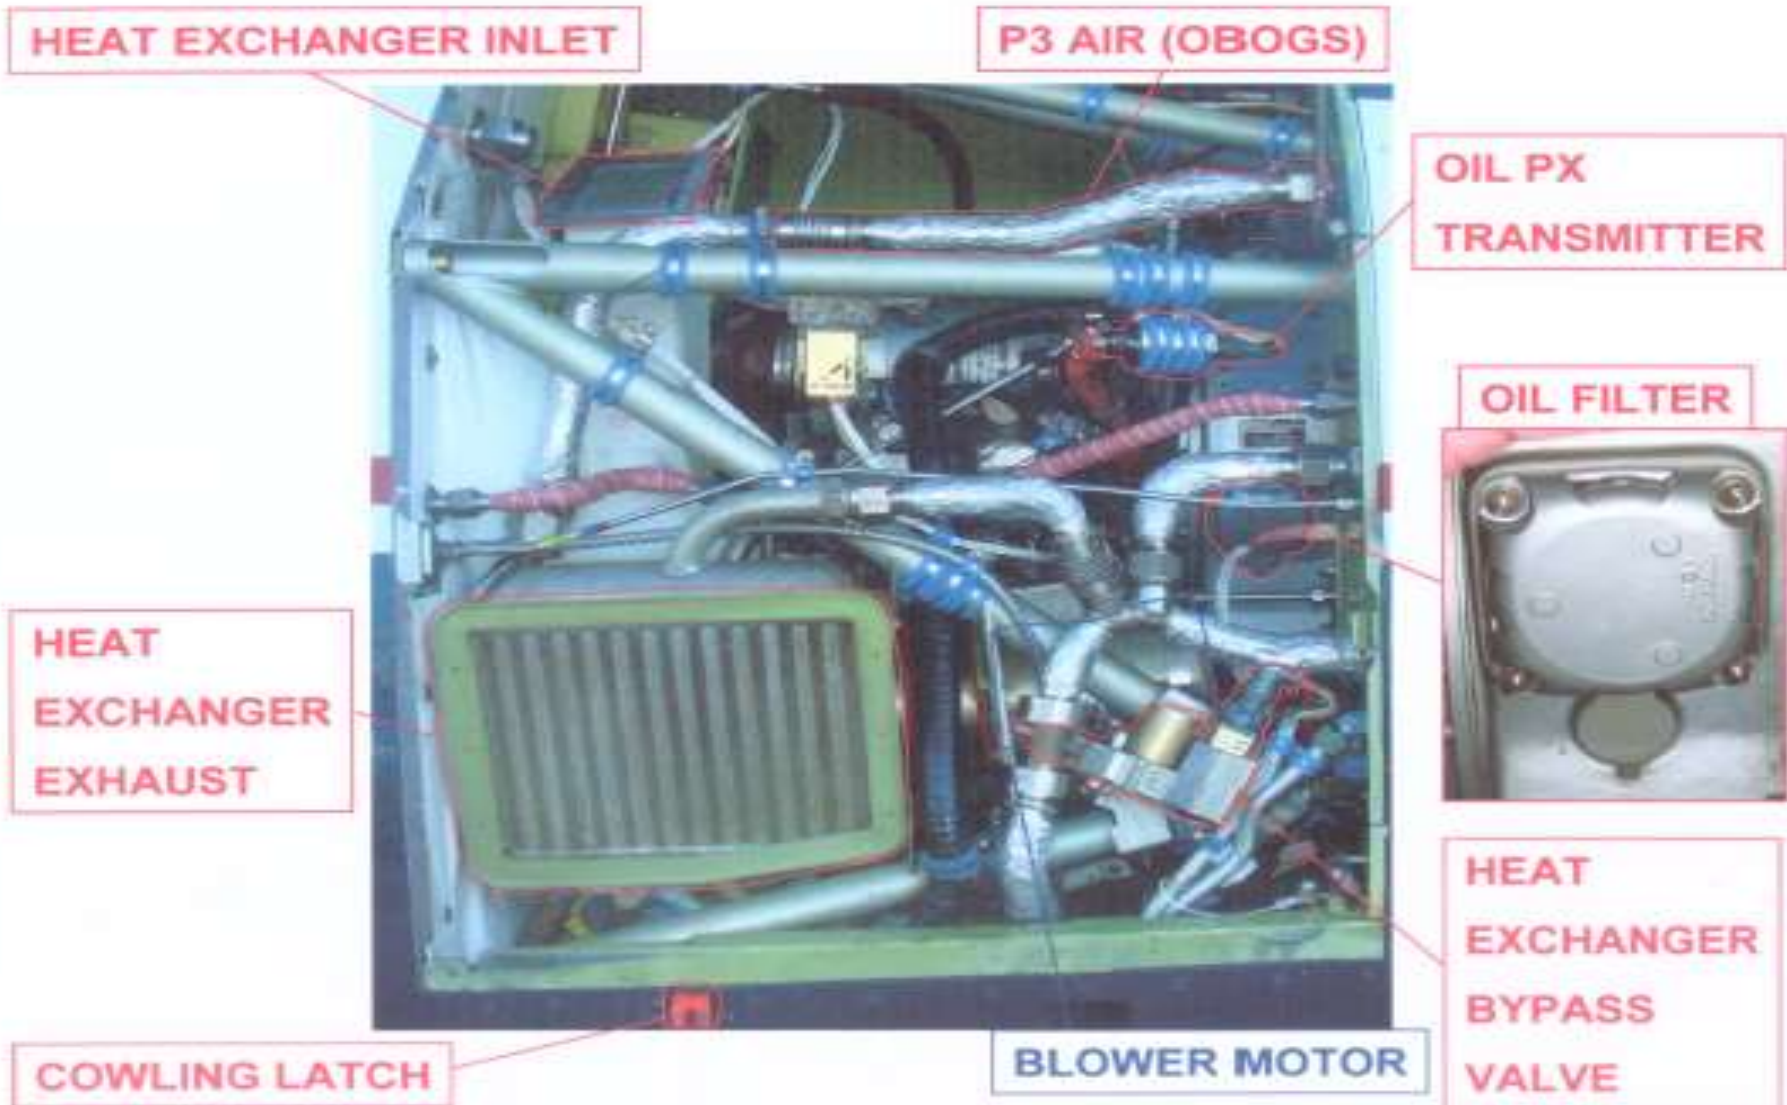





## 7. External CFS Handle Access Door

**VT10**





## 8. Hydraulic System Service Bay / Fluid Level

**VT10**

