

NAVAL AIR TRAINING COMMAND



NAS CORPUS CHRISTI, TEXAS

CNATRA P-359 (Rev. 06-03)

FLIGHT TRAINING INSTRUCTION



NAVIGATION

T-34C

2003

CNATRA P-359 (06-03)

Subject: FLIGHT TRAINING INSTRUCTION, NAVIGATION, T-34C

1. CNATRA P-359 (Rev. 06-03) PAT, "Flight Training Instruction, Navigation, T-34C" is issued for information, standardization of instruction and guidance of all flight instructors and student aviators within the Naval Air Training Command.
2. This publication shall be used as an explanatory aid to the Joint T-34C Intermediate, Navigation Flight Curriculum. It will be the authority for the execution of all flight procedures and maneuvers therein contained.
3. Recommendations for changes shall be submitted to CNATRA TCR via form CNATRA 1555/19 in accordance with CNATRAINST 1550.6E.
4. CNATRA P-359 (Rev. 11-95) PAT is hereby cancelled and superseded.

R.E.BIRD
Assistant Chief Of Staff For
Training and Operations

Distribution:

CNATRA	(10)	Plus Original
COMTRAWING FOUR	(300)	
COMTRAWING FIVE	(400)	


FLIGHT TRAINING INSTRUCTION

FOR

NAVIGATION

T-34C

Q-2A-0108

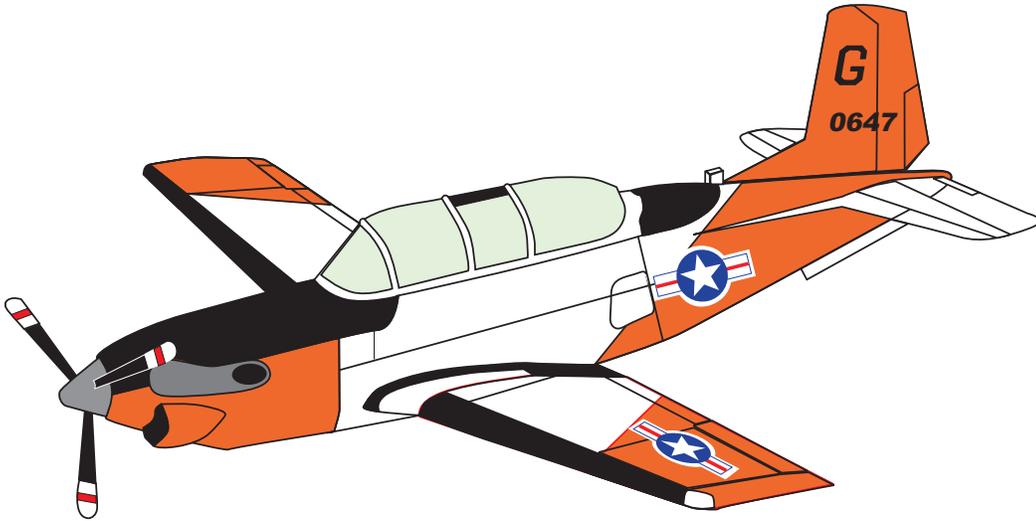

SAFTEY/HAZARD AWARENESS NOTICE

This course does not require any safety precautions other than those normally found on the flightline.

FORWARD

Terminal Objective:

Upon completion of this course, the student naval aviator will be able to navigate using visual references and appropriate navigation charts in the T-34C aircraft.

Standards:

Conditions and standards are defined in CNATRAINST 1542.140 (series).

Instructional Procedures:

1. This is a flight training course and will be conducted in the aircraft.
2. The student will demonstrate a functional knowledge of the material presented through successful completion of the flight maneuvers.

Instructional References:

1. T-34C NATOPS Flight Manual
2. Local Standard Operating Procedures Instruction
3. Aeronautical Information Manual/Federal Aviation Regulations
4. OPNAVINST 3710.7S

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:

Original...0...30 Nov 95 (this will be the date issued)

Revision 1...0...24 Jun 03

Change Transmittal...1...17 Sep 08

Change Transmittal...2...09 Jan 09

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 76 CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No.
COVER	0	5-1 – 5-4	0
LETTER	0	6-1 – 6-2	0
iii – vii	0	6-3	1
viii	2	6-4	0
ix	0	6-5	1
x (blank)	0	6-6 – 6-11	0
1-1	0	6-12 (blank)	0
1-2 (blank)	0	7-1 – 7-5	2
2-1 – 2-12	0	7-6 (blank)	0
3-1 – 3-11	0	A-1 – A-2	0
3-12 (blank)	0	B-1 – B-5	0
4-1 – 4-9	0	B-6 (blank)	0
4-10 (blank)	0		

INTERIM CHANGE SUMMARY

The following Changes have been previously incorporated in this manual:

CHANGE NUMBER	REMARKS/PURPOSE
1	Changes made per transmittal letter (9-17-08)
2	Changes made per transmittal letter (1-09-09)

The following interim Changes have been incorporated in this Change/Revision:

INTERIM CHANGE NUMBER	REMARKS/PURPOSE	ENTERED BY	DATE

TABLE OF CONTENTS

LIST OF EFFECTIVE PAGES.....	v
INTERIM CHANGE SUMMARY.....	vi
TABLE OF CONTENTS.....	vii
TABLE OF FIGURES.....	ix
CHAPTER ONE.....	1-1
100. INTRODUCTION.....	1-1
CHAPTER TWO.....	2-1
200. INTRODUCTION.....	2-1
201. VISUAL REFERENCE CHARTS.....	2-1
202. INTERPRETATION OF THE CHART LEGEND.....	2-2
203. RELIEF (HYPSOGRAPHY).....	2-6
204. CULTURAL FEATURES.....	2-7
205. AERONAUTICAL INFORMATION.....	2-9
206. INTERCHART RELATIONSHIP DIAGRAM.....	2-12
CHAPTER THREE.....	3-1
300. INTRODUCTION.....	3-1
301. CONTROLLED AIRSPACE.....	3-1
302. SPECIAL USE AIRSPACE.....	3-4
303. GENERAL FLIGHT OPERATIONS.....	3-8
304. AIRCRAFT RIGHT-OF-WAY.....	3-9
305. VFR CRUISING ALTITUDES.....	3-10
306. CLOUD CLEARANCE/VISIBILITY REQUIREMENTS.....	3-10
307. AVOIDANCE CRITERIA.....	3-11
CHAPTER FOUR.....	4-1
400. INTRODUCTION.....	4-1
401. ACQUIRING NAVIGATION AND REFERENCE MATERIALS.....	4-1
402. ROUTE SELECTION.....	4-1
403. CHART PREPARATION.....	4-2
404. JET LOG.....	4-6
405. DD 175 PREPARATION.....	4-6
406. NAV ALTITUDES.....	4-9

CHANGE 2

CHAPTER FIVE	5-1
500. INTRODUCTION	5-1
501. COCKPIT MANAGEMENT	5-1
502. GROUND PROCEDURES	5-1
503. DEPARTURE	5-1
504. NAVIGATION	5-2
505. STANDARD COURSE CORRECTION	5-3
506. WEATHER DEVIATIONS.....	5-3
CHAPTER SIX	6-1
600. INTRODUCTION	6-1
601. TOWER-CONTROLLED AIRPORTS	6-1
602. VISUAL INDICATORS AT UNCONTROLLED AIRPORTS.....	6-2
603. TRAFFIC PATTERNS.....	6-3
604. UNEXPECTED MANEUVERS IN THE TRAFFIC PATTERN	6-6
605. USE OF RUNWAYS.....	6-6
606. INTERSECTION TAKEOFFS.....	6-7
607. LOW APPROACH	6-7
608. TRAFFIC CONTROL LIGHT SIGNALS	6-8
609. APPROACH CONTROL SERVICE FOR VFR ARRIVING AIRCRAFT.....	6-8
610. TRAFFIC ADVISORY PRACTICES AT AIRPORTS WITHOUT OPERATING CONTROL TOWERS	6-9
CHAPTER SEVEN.....	7-1
700. INTRODUCTION	7-1
701. MINIMUM SAFE ALTITUDE/ROUTE-ABORT ALTITUDE.....	7-1
702. LOST AIRCRAFT.....	7-1
703. LOST COMMUNICATIONS	7-2
704. PRECAUTIONARY EMERGENCY LANDING.....	7-2
705. NIGHT ENGINE FAILURES	7-3
706. NIGHT ELECTRICAL POWER FAILURE.....	7-3
APPENDIX A	A-1
APPENDIX B	B-1

TABLE OF FIGURES

Figure 2-1	VFR Sectional Legend	2-4
Figure 2-2	VFR Sectional Legend	2-5
Figure 2-3	Relationship between Contour Lines and Terrain	2-6
Figure 2-4	VFR Sectional Chart.....	2-12
Figure 3-1	Classification Diagram	3-3
Figure 3-2	Classification Chart	3-4
Figure 3-3	Special Use Airspace on Houston Sectional Chart.....	3-6
Figure 3-4	Control Tower Frequencies on Houston Sectional Chart.....	3-7
Figure 3-5	Cloud Clearances/Visibility Requirements.....	3-10
Figure 3-6	Federal Regulations	3-11
Figure 4-1	Longitude Lines.....	4-3
Figure 4-2	Data Box.....	4-5
Figure 4-3	Single Engine Jet Log	4-8
Figure 4-4	Sample DD 175	4-9
Figure 5-1	Leg Time	5-4
Figure 6-1	Traffic Pattern Operations.....	6-2
Figure 6-2	Traffic Pattern Operations.....	6-4
Figure 6-3	Traffic Pattern Operations.....	6-5
Figure 6-4	ALDIS Lamp Signals.....	6-8
Figure B-1	Flying Pattern.....	B-2

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER ONE

NAVIGATION

100. INTRODUCTION

The primary mission of naval aviation is to locate and when necessary, destroy the enemy. Sophisticated developments in aircraft and weapons have extended the operational capabilities beyond the restriction of night or adverse weather. Yet, the military aviator must realize that radio navigation aids are not always available during wartime conditions. During these times, navigation is accomplished by utilizing a combination of dead reckoning and pilotage procedures. The purpose of this stage of training is twofold. First, VNAV flights will introduce you to VFR chart interpretation/symbology in order for you to successfully navigate without the benefit of radio NAVAIDS. Secondly, it is intended to familiarize you with the numerous types of airspace and restrictions which are involved in VFR flying.

“Visual Navigation” is the process of directing an aircraft along a desired route at various altitudes and determining its exact position along the course at any time without the aid of radio NAVAIDS.

Before commencing a flight, the pilot shall familiarize him/herself with all available information appropriate to the intended operation. This is a requirement of Federal Aviation Regulations (FAR) Section 91.103 and NATOPS 3710.7 Series, paragraph 4.3.1 (Preflight Planning). This preflight planning information should include, but is not limited to, destination weather reports and forecasts, route of flight, runway lengths at airports of intended use, fuel requirements, NOTAMS, alternatives available if flight cannot be completed as planned, and any expected delays that ATC has advised. Preflight planning becomes even more critical during VFR flying due to the more liberal routes/altitudes flown and less communications with ATC.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER TWO

CHARTS

200. INTRODUCTION

The success of any mission depends on extensive crew preflight planning. The proper charts must be selected to cover the route of flight to the target, and the course to be flown must be plotted on the chart. The aircrew must be completely familiar with the symbols used on the chart so they can interpret them, navigate the aircraft, and avoid all hazards to flight.

201. VISUAL REFERENCE CHARTS

1. **Lambert Conformal Conic Projection Charts** are the most common aeronautical charts outside Polar Regions. Listed below are some of the desirable features of this conic projection:

- a. A straight line approximates a great circle. Therefore, course and radio bearings can be plotted with a straightedge.
- b. The scale about a point is the same in all directions throughout a single chart. Hence, the scales for nautical miles, statute miles, and kilometers printed on each chart can be used on any portion of that sheet and in any direction.
- c. Since it is conformal, angles are correctly represented and small shapes are correctly proportioned. Consequently, land or water areas have the same shapes on the chart as they would appear from the air.

2. **Navigational Charts** are aeronautical charts differentiated on a functional basis by the type of information they convey. Charts for enroute navigation can be classified into two major groups:

- a. Those applicable to long-range navigation methods, such as ONCs and IFR High Altitude Charts.
- b. Those applicable to short-range navigation methods, such as TPCs, IFR Low Altitude Charts, and VFR Sectionals.

3. Common Scales and Usages

The information contained on a chart is a function of the chart's scale. The scale of a chart is the ratio between the dimensions of the chart and the actual dimensions represented. Thus, if the scale is 1:1,000,000, one inch of the chart represents 1,000,000 inches (about 14 miles) on the ground. If the scale is 1:500,000, one inch of the chart represents 500,000 inches (about 7 miles) on the ground. Note that a scale 1:500,000 is **larger** than 1:1,000,000 (a **large** scale chart gives you a **large** amount of detail and a **small** amount of area).

The choice of scale for an aeronautical chart depends mainly on two factors:

1. The size of the area to be charted, as limited by the physical size of the chart.
2. The amount of detail to be shown, as limited by the probable use of the landmarks in navigation.

The conflict between chart requirements for local and long-distance flights has led to the development of numerous special purpose charts at appropriate scales with as much aeronautical information as can be included without excessive cluttering. The scale of charts used in general planning is 1:5,000,000 or 1:1,000,000. For detailed area planning, a scale of 1:50,000 is generally used. This coverage is too small for convenient use in fast aircraft which rapidly “fly off” the chart. This necessitates frequent transfers to adjacent charts and subjects the pilot or NFO to the annoyance of having to fold and refold a large sheet in cramped quarters.

During the Visual Navigation stage of instruction, the VFR Sectional aeronautical chart with a scale of 1:500,000 will be used. Also known as “**sectionals**,” these charts are available for any location in the contiguous United States.

202. INTERPRETATION OF THE CHART LEGEND

The chart does not represent a true picture of the real world, but rather is a schematic diagram of certain characteristics of the world. When the average person is looking at a schematic diagram of a radio, he/she understands that he/she is not looking at a facsimile of the radio itself. In a similar fashion, one should realize the chart is not a facsimile of the earth’s surface. It is a simplified, generalized, and codified presentation of a selected sample of some characteristics of the earth’s surface, annotated with various names, numbers, boundaries, and reference grids. Most aviators eventually come to realize that charts are not true pictures of the real world, but they frequently assume the misrepresentation inherent in charts is due to errors on the part of the cartographer. As a result, they develop a distrust of charts. Such mistrust is not warranted; it simply reflects a lack of understanding of the schematic nature of aeronautical charts.

The discrepancies that exist between the real world and its representation on an aeronautical chart are largely the results of limitations imposed by scale. To portray the world on the sectional, the cartographer must shrink the charted area to one half-millionth of its true size. If the cartographer were simply to reduce all features on the earth’s surface equally to 1:500,000 scale, only the largest features would be visible. Roads, small towns, towers, power lines, streams, railroads, bridges, and many other features would be too small to see. The aeronautical chart would look like the familiar photographs of the earth taken from orbiting satellites. Consequently, the location of one object to another (for example, a tower that is one mile north of a primary road) will have that distance accurately displayed on the chart.

However, the sizes of symbols do **not** always conform to true scale. To give you an example, the width of a two-lane road on the sectional is shown at about 20 times its true scale. If drafted exactly to half-millionth scale, the charted road would be only about 0.0005 inch wide. The symbol for a lookout tower is about 1/2 nautical mile in diameter to scale on the sectional, even

though its counterpart in the real world is much smaller. A TACAN station is almost a mile wide as portrayed at sectional scale. The open circle denoting a minor airport has a diameter of 4,000 feet to scale on the sectional, regardless of the actual size of the field.

Standard symbols are used for easy identification of information portrayed on aeronautical charts. While these symbols may vary slightly between various projections, the amount of variance is slight. Once the basic symbol is understood, variations of it are easy to identify. A chart legend (figures 2-1 and 2-2) is the key explaining the meaning of the relief, culture, hydrography, vegetation, and aeronautical symbols. **You must be completely familiar with every symbol contained on the chart. The legends are a wealth of information that will aid you in understanding and being able to interpret the VFR Sectional.** You should have a current sectional available when studying this material; the different color schemes used on a VFR Sectional cannot be duplicated in this FTI.

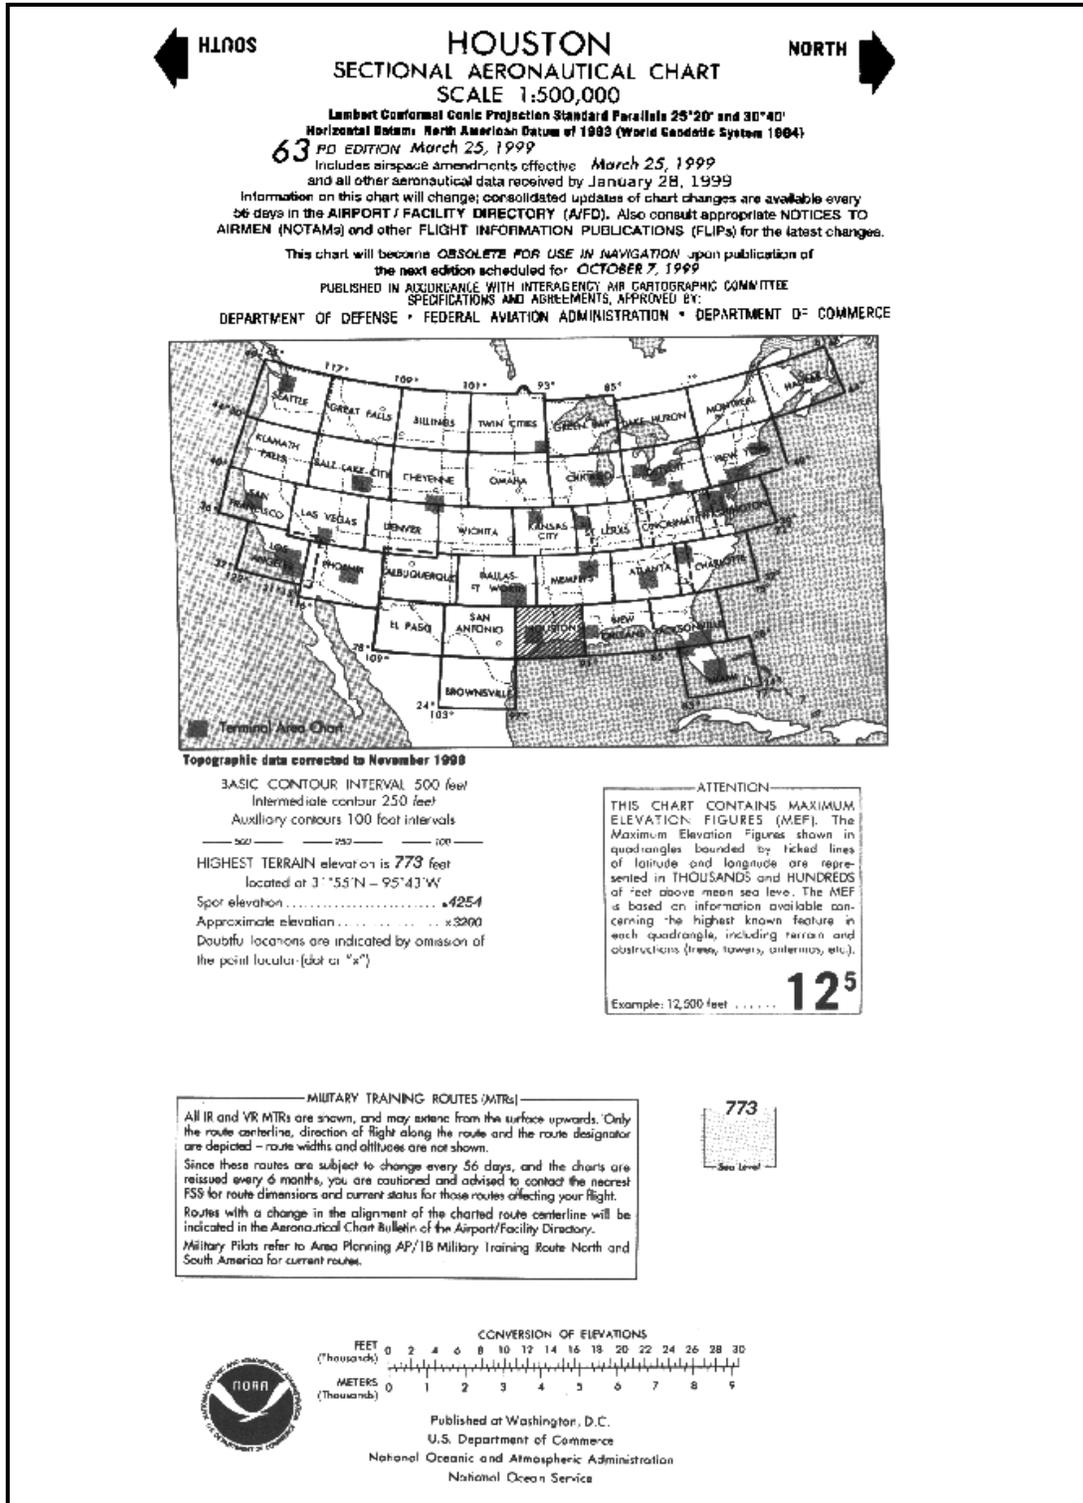


Figure 2-1 VFR Sectional Legend

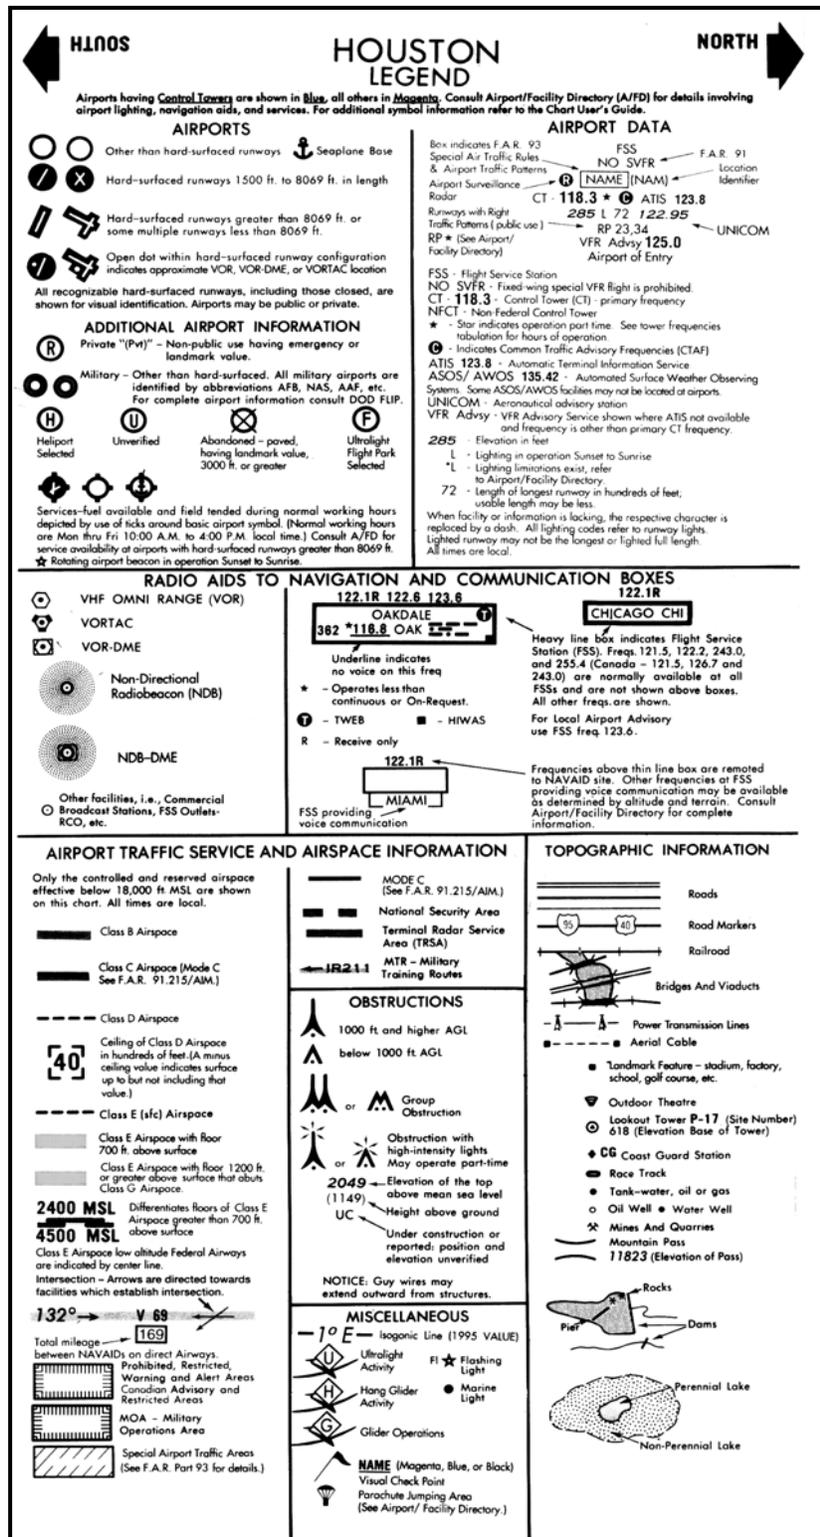


Figure 2-2 VFR Sectional Legend

203. RELIEF (HYPSOGRAPHY)

Chart relief shows the physical features related to the differences in elevation of the earth's surface. These include features such as mountains, hills, plateaus, plains, depressions, etc. Standard symbols and shading techniques are used in relief portrayal on charts; these include contours, spot elevations, variations in tint, and shading to represent shadows.

1. **Contour Lines** connect points of equal elevation. Figure 2-3 shows the relationship between contour lines and terrain. Notice that on steep slopes, the contour lines are close together and on gentle slopes, they are farther apart. The interval of the contour lines usually depends upon the scale of the chart and the terrain depicted. Depression contours are regular contour lines with spurs or ticks added on the downslope side.

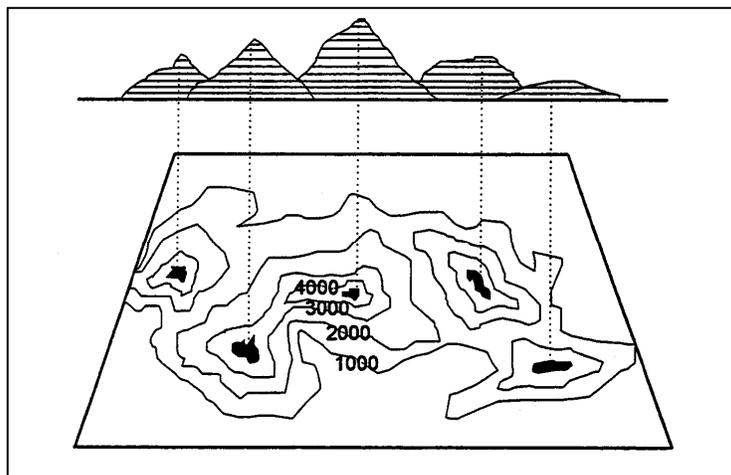


Figure 2-3 Relationship between Contour Lines and Terrain

2. **Contour Interval** are found in the chart legend (Figure 2-1). It indicates how often a contour line will be drawn on the chart. In Figure 2-3, the basic contour interval is 1,000 feet. In addition, intermediate and auxiliary contour intervals will vary depending on the scale of the chart.

3. **Highest Terrain** location for each sectional is identified by location (latitude and longitude) and elevation (mean sea level) in the chart legend.

Example: Highest terrain elevation is 773 feet located at 31°55'N 95°43'W (Figure 2-1).

4. **Spot Elevations** are the heights of particular points of terrain above an established datum, usually mean sea level (Figure 2-1).

5. **Maximum Elevation Figures (MEF)** are two or three digit numbers found throughout the charts indicate the highest elevation (in hundreds of feet MSL) within a ticked area of latitude and longitude. MEFs are based on the highest known feature, including vertical obstructions (trees, towers, antennas), and provide 100 to 199 feet of clearance over that feature. The location within the ticked area for this highest feature is **not** indicated in the legend (Figure 2-1).

Example: 12^5 means the highest feature within that grid is between 12,301 and 12,400 feet MSL.

6. **Gradient Tints** emphasize the relief of the terrain is on charts. Each color of tint is used to designate areas within a certain elevation range. These colors range from light green for the lowest elevations to brown for higher elevations.

204. CULTURAL FEATURES

All man-made structures appearing on the chart are known as cultural features. The following three main factors govern the amount of detail given to cultural features.

1. The scale of the chart.
2. The use of the chart.
3. The geographical area covered.

Populated places, roads, railroads, installations, dams, bridges, and mines are some of the many examples. The size and shape of larger cities and towns are shown. Standardized coded symbols and type sizes are used to represent the smaller population centers. Symbols denoting cultural features are usually defined in the chart legend. Some charts use pictorial symbols which are self-explanatory.

Transportation lines, consisting primarily of railroads and roads, are important features for use in obtaining time checks along your route. When used in conjunction with other features, they can help to determine aircraft position.

1. **Dual Lane Highways** are multiple-lane, hard-surfaced roads having a center median or divider. They are indicated by a **double line** and are the easiest type of transportation line to identify from the air, since they are larger and few in number in most areas. An example is an interstate highway.
2. **Primary Roads** are hard-surfaced, all-weather roads, two or more lanes in width and are portrayed as a **single thick line**. In rural areas, almost all primary roads are selected for portrayal, but in built-up areas, they are shown only wherever space will permit. They are selected to represent the characteristic configuration of the transportation network in the area.
3. **Secondary Roads** are all other roads maintained for automobile traffic and may include both hard-surfaced and dirt roads. They are shown as a **single thin line** and are selected for portrayal when they do not cause clutter. Most often, they are shown in open areas containing few checkpoints or primary roads.

4. **Tracks and Trails** are generally dirt roads not maintained for automobile traffic, portrayed with a **broken line** and shown only in areas where few roads exist. Except for dual lane highways, the road classification shown on the chart may not be a reliable indication of the visual appearance of the road (particularly true of two-lane roads which may be encoded as primary or secondary). Therefore, those roads that the aviator does see may be difficult to identify on any basis other than planned time of arrival. He should make no attempt to count roads as an orientation technique.

5. **Bridges** and viaducts **over 500 feet long** are portrayed with a bridge symbol in uncongested areas. The length of the bridge may be exaggerated on the chart, since the minimum length of scale on the sectional is 2,000 feet between abutment ticks. In general, bridge symbols will be shown where roads cross double-line streams (streams at least 600 feet wide). However, you can expect to see many bridges along the flight path that are not shown on the chart. Their presence will have to be inferred by the fact that the road crosses a portrayed stream. Because of the wide disparities among the actual widths of single-line streams, the bridges that one might infer from road crossings may vary widely from minor culverts to significant spans. In addition, the vertical development of bridges cannot be determined from the symbol. A tall bridge will appear the same on the chart as a low bridge, although it will be easier to spot from a distance. When positively identified, a bridge can be used to fix the aircraft's position.

6. **Railroads** are almost always depicted. All multiple-track railroads and most single-track railroads are portrayed. If you see a railroad during flight, you should be able to find it on the chart. Furthermore, in most parts of the world, railroads are sufficiently sparse and they can be readily identified and distinguished from each other. They can also assume added significance in the accentuation of adjacent or associated features such as streams and towns, which otherwise might have little or no checkpoint value. However, railroads are not always easy to see from low altitude, even though they are portrayed boldly on the chart.

As a rule, railroads are easier to detect in hilly or mountainous terrain than in flat populated areas. Since a locomotive must operate on gentle grades and turns, the track bed in mountainous regions will normally be characterized by numerous cuts, fills, trestles, and tunnels. It is the features associated with the track bed that lend visual significance to railroads, not the tracks alone. These features are more significant in rugged terrain. Railroad yards, since they are excellent radar checkpoints, are generally shown if they exceed 2,000 feet in length and are more than five tracks wide. Railroad stations, since they are often distinctive buildings, are generally shown in areas of sparse culture. With respect to the use of railroads for checkpoints, you should adopt the attitude, "I might not see it, but if I do, I will very likely be able to identify it on the chart."

7. **Power Transmission Lines** are generally difficult to see from the air. In addition, your chart may not indicate all transmission lines. Since trees must often be cut to install the towers and lines, you can often identify them from a distance by looking for these cutout areas.

8. **Lookout Towers** are usually located on high terrain, such as hilltops. They are generally difficult to locate due to their small size and coloring.

9. **Pipelines** installed underground obviously cannot be seen from the air. As with power transmission lines, they can often be identified by the cut out areas where trees were removed during installation. Pipelines are depicted by a broken line with the words “Underground Pipeline”.

10. **Populated Areas**, such as cities, are valuable checkpoints because they are usually prominent and can be positively identified by some unique element which differentiates one city from another in the same area. Although the shape of the built-up area of a city is shown on the chart, you should not attempt to identify a city on this basis alone. The city outline on the chart does not include recent suburban developments. The portrayed built-up area is primarily intended to identify the location where the significant vertical development of the city exists. Generally, only two categories of populated areas are shown.

- a. Those of relatively large size and known shape, which are portrayed with city outlines.
- b. Those of a small size or unknown shape, which are shown by means of a small circle.

Remember, prior to actually flying over a town, you cannot determine how the town will actually appear. Do not be surprised if the town is much smaller or larger than you expected after looking at the chart. This holds especially true for small towns, which could be anything from one store and two houses to 100 or more buildings.

11. **Coastal Hydrography** is recognized by the experienced aviator due to the importance of coastal penetration in low-level missions and the chart provides spatial orienting cues along the seaward side of the shoreline. Coastlines may be used in obtaining time checks, inbound or outbound, from the land and may be used for position determination if significant points or inlets are available.

In this category, aeronautical charts portray oceans, coastlines, lakes, rivers, streams, swamps, reefs, and numerous other hydrographic features. Open water may be portrayed by tinting, by vignetting, or may be left blank.

Vegetation is not shown on most small-scale charts. Forest and wooded areas in certain parts of the world are portrayed on some medium scale charts. On some large-scale charts, park areas, orchards, hedgerows, and vineyards are shown. Portrayal may be a solid unit, vignette, or supplemental vignette.

205. AERONAUTICAL INFORMATION

In the aeronautical category, coded chart symbols denote airfields, radio aids to navigation, commercial broadcasting stations, Air Defense Identification Zones (ADIZ), compulsory corridors, restricted airspace, warning notes, lines of magnetic variation, and special navigation grids. Some aeronautical information is subject to frequent change. For economy of production, charts are retained in stock for various periods of time. Since they may become rapidly out of date, only the more “stable” type information is on navigational charts. Aeronautical type data subject to frequent change is provided by the DOD Flight Information Publications (FLIP), Chart Updating Manual (CHUM), and Notices to Airmen (NOTAMS) documents.

1. On VFR Sectional Charts, airports having Control Towers are shown in blue, all others in magenta.

All recognizable hard-surfaced runways, including those closed, are shown for visual identification. The following symbols are used on VFR Sectional Charts:

HARD SURFACED RUNWAYS		OTHERS	
			
1500 ft to 8069 ft	Greater than 8069 ft	Other than hard-surfaced runways	Seaplane Base (SPB)

2. The following symbols portray additional airport information:


	Private "PVT" - Non-public use having emergency or landmark value		Military - Other than hard-surfaced. All military airports are identified by abbreviations AFB, NAS, AAF, etc.
	Heliport		Unverified
	Abandoned paved having landmark value		Ultralight flight Park
	Rotating light in operation sunset to sunrise		

Services, such as fuel available and field tended during normal working hours, are depicted by use of ticks around the basic airport symbol.



NOTE:


Consult the Airfield Directory (A/FD) for service availability at airports with runways greater than 8069 feet.

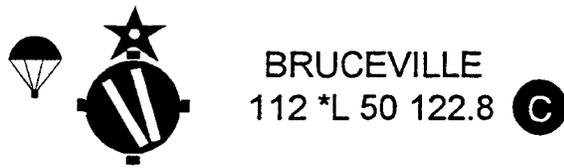

Bruceville airport has two runways, oriented NW/SE, the longest of which is 5000 ft. (50) in length. The field elevation is 112 feet MSL. The field has a rotating light with runway lighting (*L) being either available on request, part-time or pilot controlled. There is no control tower (magenta) but there is a Common Traffic Advisory Frequency (CTAF)  which is also the Unicom frequency of 122.8. There is a Parachute Jumping Area in the vicinity. The field is tended during normal working hours and fuel is available.


3. Man-made obstructions extending 200 feet or more above ground level (AGL) are depicted on charts with a symbol (refer to chart legends). Obstructions are marked/lighted to warn pilots of their presence during daytime and nighttime conditions. Most have aviation red obstruction lights. Obstructions with high intensity flashing white lights are depicted with an obstruction symbol with lightning bolts coming from the top.

Two examples of single obstructions are depicted:

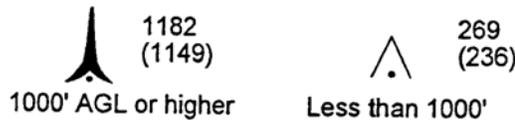

The upper number is the altitude above MSL at the top of the tower, while the lower one in parenthesis is the tower height above the ground. The elevation of the ground at the tower can be determined by subtracting the lower number from the upper. In this case, the ground elevation is 33 feet MSL.

Multiple obstructions near each other are depicted:

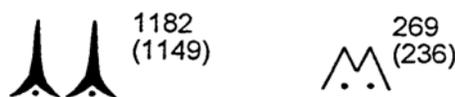

The numbers in this case indicate the same information as with single obstructions. Note that the obstruction symbols are NOT to scale. If they were, the obstructions would be over a mile high.

Obstructions with Landmark Significance. Often, an obstruction will have some landmark significance, such as the Statue of Liberty. If so, a pictorial symbol will be used along with the same MSL and AGL obstruction heights.

4. Radio Facilities have standard symbols used to depict radio aids to navigation. Refer to the chart legends and be completely familiar with the symbols for VOR, VORTAC, TACAN, VOR/DME, and other facilities such as ADFs and NDBs.
5. Special Use Airspace is airspace of defined dimensions in which aircraft flight may be restricted or which contains danger to flight operations. Special use airspace is depicted on charts unless activated only by Notices to Airmen. Letters and numerals identify each area of special use airspace and are internationally recognized. Refer to legends for examples.

By referring to FLIP Area Planning AP-1A, you can determine the coordinates (latitude and longitude) defining the area, affected altitudes, times of activation and controlling agency, if any.

206. INTERCHART RELATIONSHIP DIAGRAM

On the cover of a VFR Sectional Chart you will find an interchart relationship diagram, which identifies charts adjacent to the one you are using (Figure 2-4). *The magenta shaded boxes indicate areas where a Terminal Area Chart is available for navigation. These charts typically cover Class B airspace and provide greater detail.*

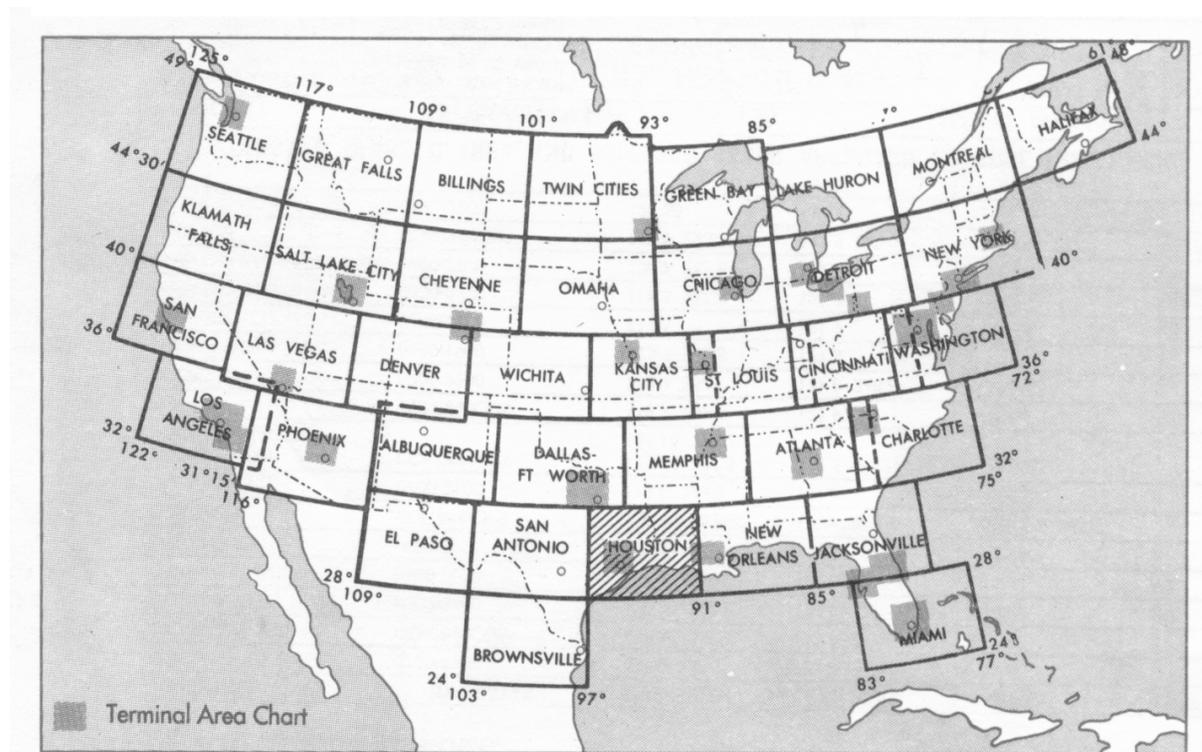


Figure 2-4 VFR Sectional Chart

CHAPTER THREE

FEDERAL AVIATION REGULATIONS

300. INTRODUCTION

The current Aeronautical Information Manual (AIM)/Federal Aviation Regulations (FAR) lists information and regulations pertinent to VFR/IFR operations. Listed are some, but not all of interest to visual navigation.

301. CONTROLLED AIRSPACE

The AIM defines controlled airspace as “a generic term that covers the different classifications of airspace (Class A, B, C, D, and E) and defined dimensions within which air traffic control service is provided to IFR and VFR flights in accordance with the airspace classification.” Safety, users’ needs, and volume of flight operations are some of the factors considered in the designation of controlled airspace. When so designated, the airspace is supported by ground-to-air communications, navigation aids, and air traffic control services.

The important point to remember about controlled airspace is to know when you are in it and when you are not. When flying a visual navigation route under VFR, visibility and cloud clearance requirements are different in controlled and uncontrolled airspace (see paragraph 306).

The following is a breakdown of airspace encountered during VNAV operations. The important point is to be able to recognize these airspaces on a sectional and know the particular requirements to operate in them.

1. *Class A consists of controlled airspace between FL 180 and FL 600. VFR flight is not permitted in Class A airspace.*

2. **Class B** consists of controlled airspace extending upward from the surface or higher to specified altitudes (generally 10,000 feet MSL), within which all aircraft are subject to the operating rules and pilot/equipment requirements specified in FAR 91.215 and FAR 91.131. Regardless of weather conditions, **an ATC authorization (i.e., clearance) is required prior to operating within Class B airspace.** For all practicable purposes, you must hold a private pilot certificate or be a designated military aviator to operate in Class B airspace. The aircraft must be equipped with an operable two-way radio capable of communicating with ATC. The aircraft must also have a radar beacon transponder with automatic altitude reporting equipment (Mode C) when within 30 NM of the primary airport, or if operating above the Class B airspace. If operating IFR, an operable VOR or TACAN receiver must be aboard. Penetration of Class B airspace without satisfying the above requirements may result in a FLIGHT VIOLATION! Class B airspace is marked with solid blue lines on sectionals.

3. **Class C** consists of controlled airspace extending upward from the surface or higher to specified altitudes (generally 4000 feet **AGL**) within which all aircraft are subject to operating rules. Class C airspace consists of two circles, both centered on the primary airport. The inner circle has a radius of 5 NM. The outer circle has a radius of 10 NM. There is an outer area

which extends out to 20 NM for the purpose of establishing communication. The airspace of the inner circle extends upward from the surface to 4000 feet above the airport. The airspace in the area between the 5 NM and 10 NM rings begins at 1200 feet AGL and extends to the same altitude cap as the inner circle. No specific pilot certificate is required to operate within Class C airspace. The aircraft must have an operable two-way radio to communicate with ATC and aircraft must also have a transponder with Mode C. Two-way communication with ATC must be established prior to entering Class C airspace (see note following). Penetration of Class C airspace without satisfying the above requirements may result in a FLIGHT VIOLATION! Class C airspace is marked with solid magenta lines on sectionals.

NOTE

Two-way communication with ATC is "established" when the controller acknowledges your call sign (i.e., "[call sign], Houston Approach, stand by"). If the controller does not use your call sign when he responds to you (i.e., "Aircraft calling Houston Approach, stand by"), you have NOT established two-way comms.

4. **Class D** consists of the airspace from the surface to 2500 feet AGL surrounding those airports that have an **operational** control tower. The horizontal boundaries of Class D may vary with published instrument approaches. The horizontal boundaries of Class D may vary from location to location and will often feature a 4.4 NM core radius. The existence of Class D airspace is indicated on sectional charts by blue airport symbols and usually a blue dashed circle surrounding the airport defining the actual boundary. Pilots must establish two-way radio contact with the control tower or approach control prior to entering Class D airspace. If IFR or receiving radar services from an ATC facility, it becomes ATC's responsibility to coordinate with the appropriate control towers for approval through the airspace. Penetration of Class D airspace without satisfying the above requirements may result in a FLIGHT VIOLATION!

5. **Class E** generally consists of any airspace not Class A, B, C, or D and defined as controlled airspace. All Federal (Victor) Airways are Class E airspace and, unless otherwise specified, extend upward from 1,200 feet AGL to, but not including, 18,000 feet MSL. Surface-based Class E airspace, depicted on sectional charts by broken magenta lines, is based on a primary airport but may include one or more airports and is configured to contain all instrument approaches. Class E transition areas provide controlled airspace extensions from the primary airport and are used to contain instrument approaches procedures within controlled airspace. This airspace extends upward from 700 feet AGL and is depicted on the sectional by shaded magenta.

6. **Class F** is NOT USED. Used ICAO only; no U.S. equivalent.

7. **Class G** consists of all uncontrolled airspace.

NOTE:

Except in the western U.S., you will not find Class G airspace above 1200 feet AGL.

8. A **Terminal Radar Service Area (TRSA)** is the airspace surrounding designated airports wherein ATC provides radar vectoring, sequencing, and separation for all IFR and participating VFR aircraft operating within the TRSA. This service provided in a TRSA is called "Stage III service" or VFR flight following. Although not mandatory for civil aviation, compliance with Stage III service is mandatory for all CNATRA aircraft. TRSAs continue to exist because of no ICAO equivalent.

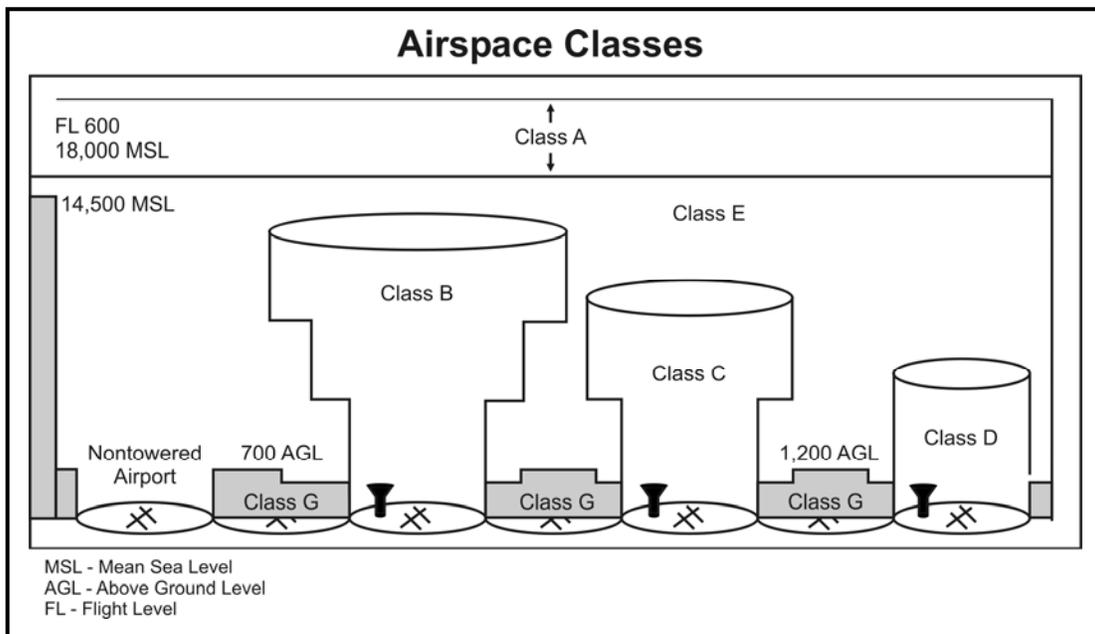


Figure 3-1 Classification Diagram

Airspace Features	Class A	Class B	Class C	Class D	Class E	Class G
Operations Permitted	IFR	IFR and VFR	IFR and VFR	IFR and VFR	IFR and VFR	IFR and VFR
Entry Prerequisites	ATC Clearance	ATC Clearance	ATC Clearance for IFR, Radio contact for all	ATC Clearance for IFR, Radio contact for all	ATC Clearance and Radio contact for IFR	None
Minimum Pilot Qualifications	Instrument Rating	Private or student certificate	Student certificate	Student certificate	Student certificate	Student certificate
Two-way Radio Communications	Yes	Yes	Yes	Yes	Yes for IFR	No
VFR Minimum Visibility	N/A	3 statute miles	3 statute miles	3 statute miles	<i>See Figure 3-5</i>	<i>See Figure 3-5</i>
VFR Minimum distance from clouds	N/A	Clear of Clouds	500' below 1,000' above and 2,000' horizontal	500' below 1,000' above and 2,000' horizontal	<i>See Figure 3-5</i>	<i>See Figure 3-5</i>
Aircraft Separation	All	All	IFR and VFR	IFR	IFR	None
Conflict Resolution	N/A	N/A	Between IFR and VFR Ops	No	No	No
Traffic Advisories	N/A	N/A	Yes	Workload permitting	Workload permitting	Workload permitting
Safety Advisories	Yes	Yes	Yes	Yes	Yes	Yes

Figure 3-2 Classification Chart

302. SPECIAL USE AIRSPACE

1. **Prohibited areas** contain airspace of defined dimensions, identified by an area on the surface of the earth within which the flight of aircraft is **prohibited**. Such areas are established for security or other reasons associated with the national welfare. For example, the White House is designated as P-56. **DON'T FLY INTO IT OR ELSE!!** Penetration of this airspace will result in, as a minimum, a **FLIGHT VIOLATION!**

2. **Restricted areas** contain airspace identified by an area on the surface of the earth within which the flight of aircraft, while not wholly prohibited, is subject to restrictions. Restricted areas denote the existence of unusual, often invisible, hazards to aircraft such as artillery firing, aerial gunnery, or guided missiles. Penetration of restricted airspace without prior permission of the controlling authority may result in a **FLIGHT VIOLATION**.

3. **Warning areas** are airspace, which may contain hazards to nonparticipating aircraft in international airspace. Warning areas are established beyond the coastal three mile limit. Warning areas may be as hazardous as restricted areas, but cannot be designated restricted areas because they are over international waters. Although not mandatory, pilots **should** obtain authorization prior to penetration of any warning areas.

3-4 FEDERAL AVIATION REGULATIONS

4. **Alert areas** are depicted on aeronautical charts to inform nonparticipating pilots of areas that may contain a high volume of pilot training or an unusual type of aerial activity. Pilots should be particularly alert when flying in these areas.

5. **Military Operating Areas (MOA)** consist of airspace of defined vertical and lateral limits established for the purpose of separating certain military training activities from IFR traffic. Pilots operating under VFR should exercise extreme caution when flying in an operating MOA. The activity status (active/inactive) of MOAs may change frequently. Therefore, pilots should contact any FSS within 100 miles of the area to obtain accurate real-time information concerning MOA hours of operation.

VFR Sectional Charts list U.S. Prohibited Areas, Alert Areas, Warning Areas, and Military Operating Areas (Figure 3-3) providing number, location, altitude, and time of use. Also listed are control tower frequencies (Figure 3-4) including the name of the control tower, its radio call (if different), times of operations, ATIS, and whether ASRs/PARs are available. Class B, Class C, TRSA, and selected Radar Approach Control frequencies are also listed.

SPECIAL USE AIRSPACE ON HOUSTON SECTIONAL CHART				
Unless otherwise noted altitudes are MSL and in feet; time is local.		The word "TO" an altitude means "To and including."		
Contact nearest FSS for information.		"MON-FRI" indicates "Monday thru Friday"		
†Other time by NOTAM contact FSS		FL < Flight Level		
		NO A/G – No air to ground communications		
U.S. P-PROHIBITED, R-RESTRICTED, A-ALERT, W-WARNING, MOA-MILITARY OPERATIONS AREA				
NUMBER	LOCATION	ALTITUDE	TIME OF USE	CONTROLLING AGENCY**
R-3801 A	CAMP CLAIBORNE, LA	1500 AGL TO 4000 NW OF LINE EXTENDING FROM 31°20'50"N-92°51'15"W TO 31°16'40"N-92°54'30"W. 500' AGL TO 4000' SE OF THE LINE.	0800-2200 MON-FRI†	ZHU CNTR
R-3801 B	CAMP CLAIBORNE, LA	TO 7000	0800-2200 MON-FRI†	ZHU CNTR
R-3801 C	CAMP CLAIBORNE, LA	7000 TO 14,000	0800-2200 MON-FRI†	ZHU CNTR
R-3803 A	FORT POLK, LA	TO FL 180	CONTINUOUS	ZHU CNTR
R-3804 A	FORT POLK, LA	TO FL 180	CONTINUOUS	ZHU CNTR
R-3804 B	FORT POLK, LA	TO 3000	CONTINUOUS	ZHU CNTR
R-3807	GLENCOE, LA	TO 15,000	CONTINUOUS	ZHU CNTR
R-6320	MATAGORDA, TX	TO 15,000	CONTINUOUS	ZHU CNTR
A-381	GULF COAST	TO 2000	DLY DAYLIGHT HOURS	NO A/G
A-632 B	CORPUS CHRISTI, TX	TO BUT NOT INCL FL 180	0700-2400	NO A/G
A-632 E	CORPUS CHRISTI, TX	6000 TO BUT NOT INCL 9000	SR-2400 MON-FRI 1400-2400 SUN†	NO A/G
A-632 F	CORPUS CHRISTI, TX	3000 AGL TO BUT NOT INCL FL 180	0700-2400 MON-SAT	NO A/G
W-59 A	GULF OF MEXICO, SW OF NEW ORLEANS, LA	5000 TO FL 500	0900-2100†	ZHU CNTR
W-59 B	GULF OF MEXICO, SW OF NEW ORLEANS, LA	5000 TO BUT NOT INCL FL 280	0900-2100†	ZHU CNTR
W-92	NEW ORLEANS, LA	TO FL 400	0700-2400	ZHU CNTR
W-147 A	GULF OF MEXICO	5000 TO BUT NOT INCL FL 230	0800-2200	ZHU CNTR
W-147 C	GULF OF MEXICO	TO FL 500	0800-2200	ZHU CNTR
W-147 D	GULF OF MEXICO	TO FL 500	0800-2200	ZHU CNTR
W-228 A	CORPUS CHRISTI, TX	TO FL 450	CONTINUOUS	ZHU CNTR
W-228 B	CORPUS CHRISTI, TX	TO FL 450	CONTINUOUS	ZHU CNTR

**ZHU-Houston

MOA NAME	ALTITUDE OF USE*	TIME OF USE†	CONTROLLING AGENCY**
JENA 1	100 AGL TO 5000	0800-2200 MON-FRI	ZHU CNTR
JONES	7000	SR-SS MON-FRI	ZFW CNTR
KINGSVILLE 5	9000	SR-2400 MON-FRI 1400-2400 SUN	ZHU CNTR
LADY	10,000	SR-SS MON-FRI	ZFW CNTR
RANDOLPH 1A	9000	SR-SS MON-FRI	ZHU CNTR
WARRIOR 1 HIGH	10,000	0400-1900 MON-FRI	ZHU CNTR
WARRIOR 1 LOW	100 AGL TO BUT NOT INCL 10,000	0400-1900 MON-FR	ZHU CNTR
WARRIOR 2 HIGH	10,000	0400-1900 MON-FRI	ZHU CNTR
WARRIOR 2 LOW	100 AGL TO BUT NOT INCL 10,000	0400-1900 MON-FRI	ZHU CNTR
WARRIOR 3 HIGH	10,000	0400-1900 MON-FRI	ZHU CNTR
WARRIOR 3 LOW	100 AGL TO BUT NOT INCL 10,000	0400-1900 MON-FRI	ZHU CNTR

*Altitudes indicate floor of MOA. All MOAs extend to but do not include FL 180 unless otherwise indicated in tabulation or on chart.
 †Other time by NOTAM contact FSS.
 **ZHU-Houston, ZFW-Fort Worth

Figure 3-3 Special Use Airspace on Houston Sectional Chart

CONTROL TOWER FREQUENCIES ON HOUSTON SECTIONAL CHART					
<p>Airports which have control towers are indicated on this chart by the letters CT followed by the primary VHF local control frequency. Selected transmitting frequencies for each control tower are tabulated in the adjoining spaces, the low or medium transmitting frequency is listed first followed by a VHF local control frequency, and the primary VHF and UHF military frequencies, when these frequencies are available. An asterisk (*) follows the part-time tower frequency remoted to the collocated full-time FSS for use as Local Airport Advisory (LAA) during hours tower is closed. Hours shown are local time. Ground control frequencies listed are the primary ground control frequencies.</p> <p>Automatic Terminal Information Service (ATIS) frequencies, shown on the face of the chart are primary arrival VHF/UHF frequencies. All ATIS frequencies are listed below. ATIS operational hours may differ from control tower operational hours.</p> <p>ASR and/or PAR indicates Radar Instrument Approach available.</p> <p>"MON-FRI" indicates Monday thru Friday.</p>					
CONTROL TOWER	OPERATES	TWR FREQ	GND CON	ATIS	ASR/PAR
ACADIANA REGIONAL	0700-2100	125.0 267.2	121.7		
ALEXANDRIA INTL NF	CONTINUOUS	127.35 269.2	121.9 372.0		
BATON ROUGE, RYAN	0500-2400	118.45 257.8	121.9	125.2	ASR
CHENNAULT INTL NF	0630-2030	124.2 286.6	121.65 275.8		ASR
EASTERWOOD	0800-2100	118.5 284.7	128.7 284.7	126.85	
ELLINGTON	CONTINUOUS	126.05 253.5	121.6 275.8	135.575 269.9	
ESLER RGNL	0700-2100	118.0 324.3	121.7	128.55	
GEORGE BUSH INTCNL/HOUSTON	CONTINUOUS	125.35 127.3 135.15 290.2	118.575 121.7	124.05	
HOBBY	CONTINUOUS	118.7 256.9	121.9	124.6	
HOOKS MEML	0700-2200	118.4 354.1	121.8 348.6	124.95	
HOUMA-TERREBONNE	0600-1900	125.3 346.3	121.8	120.25	
JEFFERSON CO	0600-2200	119.5	121.9	126.3	ASR
LAFAYETTE REGIONAL	0530-2230	118.5 257.8	121.8	120.5	ASR
LAKE CHARLES REGIONAL	0600-2200	120.7 257.8	121.8	118.75	ASR
POLK AAF	CONTINUOUS	119.0 248.2	121.8 248.0	134.85 234.3	ASR/PAR
SUGAR LAND/HULL NF	0600-2200	118.65	121.4		

CLASS B, CLASS C, TRSA, AND SELECTED RADAR APPROACH CONTROL FREQUENCIES		
FACILITY	FREQUENCIES	SERVICE AVAILABILITY
HOUSTON CLASS B	119.7 281.4 (NORTH) 133.6 257.2 (EAST) 134.45 284.0 (SOUTH) 123.8 257.7 (WEST)	CONTINUOUS
BATON ROUGE CLASS C	120.3 278.3 (WEST) 126.5 278.3 (EAST) O/T 126.35 338.25 ZHU CNTR	0500-2400 O/T Class E
LAFAYETTE CLASS C	121.1 363.0 (020°-210°) 128.7 278.5 (211°-019°) O/T 126.35 338.25 ZHU CNTR	0530-2230 O/T Class E
LAKE CHARLES TRSA	119.35 353.75 (WEST) 119.8 319.9 (EAST) O/T 124.7 317.4 ZHU CNTR	0600-2200
POLK AAF RADAR	123.7 261.3 O/T 135.7 381.5 ZHU CNTR	0800-2400 MON-FRI

O/T indicates Other times

Figure 3-4 Control Tower Frequencies on Houston Sectional Chart

In review, there are two important points to remember about airspaces:

1. How to recognize them on the VFR Sectional (depicted on the legend).
2. The requirements for operating in and around these airspaces.

As a professional aviator, it is your responsibility to stay current with all the requirements to operate in the VFR and IFR environment. To stay up-to-date with all the FAA's changes, **it is highly encouraged you obtain a current edition of the FAR/AIM.**

303. GENERAL FLIGHT OPERATIONS

1. **Altitude Restrictions**, FAR Part 91.119 states: "Under no circumstances can any pilot, VFR or IFR, fly anywhere at such a low altitude that he could cause an undue hazard to persons or property on the surface if he had a power failure and had to make an emergency landing." Over any open air assembly of persons, any congested area of a city, town or settlement, all aircraft must remain at least **1000 feet** over the highest obstacle in the area, and avoid it by **2000 feet** horizontally. The only time you can fly lower than **500 feet** AGL is when over open water or sparsely populated areas. Even then you must go over or around every person, vessel, vehicle or structure by 500 feet or more.

OPNAVINST 3710.7 series makes a more stringent requirement: "Except when necessary for landing and takeoff or when the mission of the flight requires otherwise, flight in fixed-wing aircraft shall not be conducted below an altitude of **500 feet** above the terrain or surface of the water. Additionally, flight of naval aircraft shall be conducted at all times so that persons and activities on the ground experience a minimum of annoyance. It is not enough for the pilot to be satisfied in his own mind that no person is endangered; he must take definite and particular pains to satisfy himself that he is flying in such a manner that no person could reasonably think that he or his property is endangered."

Commanding officers of aviation units shall take steps to prevent aircraft from frightening wild fowl or driving them from their feeding grounds. When it is necessary to fly over known wild fowl habitations, an altitude of at least 3000 feet AGL shall be maintained, conditions permitting. During hunting season, pilots shall avoid flying near wildlife haunts except as noted above.

2. **Speed Restrictions**

- a. As per the FARs, the maximum authorized airspeed for aircraft below 10,000 feet MSL is 250 knots.
- b. Class B - The maximum airspeed within Class B airspace is also 250 knots. If an aircraft is operating beneath the lateral limits of a Class B airspace, the aircraft's speed is restricted to 200 knots.
- c. Class C - The maximum airspeed within Class C airspace is 250 knots. **HOWEVER**, when the aircraft is within 4 NM of the primary airport **AND** at or below 2500 feet AGL, the maximum airspeed is reduced to 200 knots.

- d. Class D - The maximum airspeed within 4 NM of the primary airport inside Class D airspace AND at or below 2500 feet AGL is 200 knots. This speed restriction also applies where Class D airspace (other than the primary airport) overlaps into Class B airspace.
- e. Military training routes are established corridors where high performance military aircraft are authorized to exceed the 250 knot restriction. These routes are identified on each sectional and detailed information on each route can be found in AP/1B. Information on the activity status may be obtained from the nearest FSS or from the scheduling authority listed in AP/1B.

304. AIRCRAFT RIGHT-OF-WAY

When weather conditions permit, regardless of whether an operation is conducted under IFR or VFR conditions, vigilance shall be maintained by persons operating an aircraft so as to see and avoid other aircraft in compliance with FAR 91.113. When a rule of this section gives another aircraft the right-of-way, he/she shall give way to that aircraft and may not pass over, under, or ahead of it unless well clear.

FAR sets forth priority of aircraft as follows:

1. Balloon
2. Glider
3. Towing/Airborne refueling
4. Airships
5. Rotary and fixed wing aircraft

It further states:

1. **Converging** occurs when aircraft of the same category are converging at approximately the same altitude (except head-on or nearly so) the aircraft to the other's right has the right-of-way.
2. **Approaching Head-On** is when aircraft are approaching each other head-on, or nearly so, each pilot of each aircraft shall alter course to the right.
3. **Overtaking** is simply passing another aircraft that is headed in the same direction. Each aircraft that is being overtaken has the right-of-way and each pilot of an overtaking aircraft shall alter course to the right to pass well clear.
4. **Distressful** situations may occur with an aircraft experiencing an emergency situation. Aircraft in distress have the right-of-way over all other aircraft in all emergencies.

305. VFR CRUISING ALTITUDES

VFR cruising altitudes begin above 3000 feet AGL and are determined by magnetic course, **NOT THE AIRCRAFT'S HEADING!** Easterly courses (360 to 179 degrees) should be flown at altitudes of odd thousands plus 500 (i.e., 3500, 5500, 7500, etc). Westerly courses (180 to 359 degrees) should be flown at altitudes of even thousands plus 500 (i.e., 4500, 6500, 8500, etc.).

306. CLOUD CLEARANCE/VISIBILITY REQUIREMENTS

ALTITUDE	AIRSPACE	VISIBILITY	DISTANCE FROM CLOUDS
1200 feet AGL or less above the surface	CONTROLLED	Three Statute Miles	500 feet Below 1000 feet Above 2000 feet Horizontal
	UNCONTROLLED (DAY)	One Statute Mile	Clear of Clouds
	UNCONTROLLED (NIGHT)	Three Statute Miles	500 feet Below 1000 feet Above 2000 feet Horizontal
More than 1200 feet AGL above the surface, but less than 10,000 feet MSL	CONTROLLED	Three Statute Miles	500 feet Below 1000 feet Above 2000 feet Horizontal
	UNCONTROLLED (DAY)	One Statute Mile	500 feet Below 1000 feet Above 2000 feet Horizontal
	UNCONTROLLED (NIGHT)	Three Statute Miles	500 feet Below 1000 feet Above 2000 feet Horizontal
More than 1200 feet AGL above surface and at or above 10,000 feet MSL	CONTROLLED AND UNCONTROLLED	Five Statute Miles	1000 feet Below 1000 feet Above One Statute Mile Horizontal

Figure 3-5 Cloud Clearances/Visibility Requirements

307. AVOIDANCE CRITERIA

1. The minimum altitude for any route is 1000 feet AGL. Descent to 500 feet AGL is limited to simulated emergencies and must be in accordance with Paragraph 303.
2. Do not overfly uncontrolled airports below 1500 feet AGL. Do not penetrate any Class D airspace (i.e., operating control towers). When practicable, avoid flight within 1500 feet AGL or 5 NM of airports (FAA Handbook 7610.4).
3. Do not fly below 1000 feet AGL if within a 2000 feet horizontal radius of a congested area, such as a town or settlement (FAR 91.119).
4. Do not fly into restricted areas without clearance from the controlling agency (FLIP AP/1A).
5. Noise-sensitive areas (breeding and poultry farms, resorts, beaches, national parks, etc.) shall be avoided when at altitudes of less than 3000 feet AGL. If it is necessary to overfly wild fowl habitations, maintain at least 3000 feet AGL (OPNAVINST 3710.7 Series). See Figure 3-6.
6. Refer to current FLIP AP/1B for other restrictions.

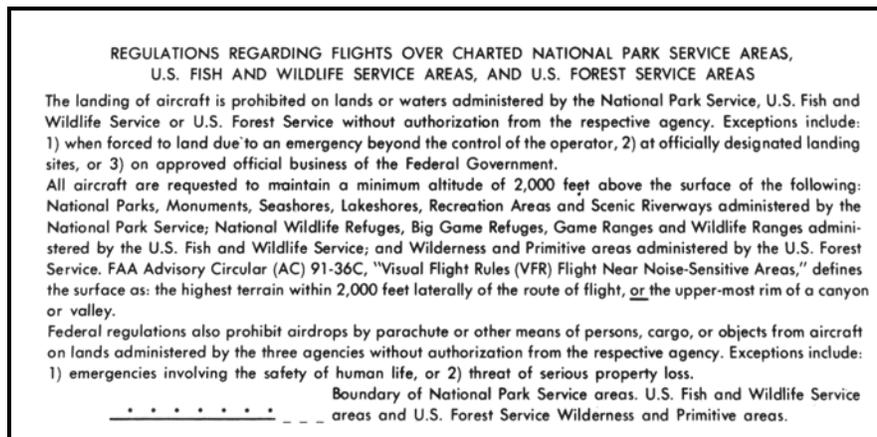


Figure 3-6 Federal Regulations

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER FOUR PREFLIGHT PLANNING

400. INTRODUCTION

There are five important steps in preflight planning:

1. Acquiring navigational material and reference publications
2. Route selections
3. Chart preparation
4. Jet log preparation
5. DD 175 preparation

401. ACQUIRING NAVIGATION AND REFERENCE MATERIALS

Prior to any cross-country flight, it is imperative the pilot thoroughly familiarize him/herself with intended routes of flight, possible alternate routes of flight, intended destination, possible alternates, and fuel requirements for each flight.

Flight planning publications that should be reviewed during the preflight planning include the Chart Update Manual (CHUM), FLIP General Planning, Area Planning, Enroute Supplement, Instrument Approach Plates, Enroute Low Altitude Charts, and VFR Sectional Charts. Check all Temporary Flight Restrictions (TFRs) from the Flight Data Center (FDC) NOTAMs and the various Air Traffic Control Center (ARTCC) NOTAMS. Ensure all publications are current prior to use.

Cross-country gas packets may be checked out prior to the flight and must be returned (with any fuel receipts) immediately after the flight. Except in emergency situations, fuel and oil shall be obtained from military activities or commercial sources with government contract fuel and oil. (If the Enroute Supplement shows "NC" before the fuel listing, this indicates NO CONTRACT and therefore not authorized for CNATRA aircraft use.)

402. ROUTE SELECTION

There are two important steps to take prior to chart preparation. The first is the selection of a destination and the second is selection of the route. The instructor, IAW the local SOP, determines the destination and route for the visual navigation flight. It is important to obtain the route early so the proper preflight planning can be completed. The choice of routes by your instructor will be made with main consideration for the weather and a secondary consideration of distance, due to the fuel limitations of the T-34C. **Routes should, at a minimum, have 8-10 checkpoints.** However, the more checkpoints along your route, the less chance you will get disoriented.

Once the destination of the flight is established, check with the weather service and acquire the terminal forecast at homefield and at the destination. Obtain all available information pertaining to enroute weather, destination weather, and the forecast weather for the return flight. A major factor controlling the route of flight is distance and fuel onboard. Fuel planning involves more than a homefield-to-destination computation. Fuel considerations must include divers to alternates along the entire route, minimum fuel along the route required to successfully divert (bingo), minimum fuel along the route to complete the mission as briefed, and emergency fuel requirements in compliance with OPNAVINST 3710.7.

403. CHART PREPARATION

Select the charts to be used for the flight and check the dates of expiration to make certain they are current. If two or more charts are required for the flight, match the features on the charts together and not the lat/long lines. (Lat/long lines do not appear on the earth's surface.) Refer to paragraph 206, Figure 2-4, and your current sectional for a discussion on using multiple charts.

The following equipment is required to properly lay out a route: dividers, nav plotter, pencil, black ballpoint pen, highlighters and template for making circles, squares, and arrows. A general rule when preparing your chart is to minimize marking up the chart to avoid possibly obscuring potential needed information. However, when planning night visual navigation routes, consideration should be given to using thicker and darker lines for routes, with larger print for all associated magnetic courses, fuel, and timing requirements.

Figure 4-1 is a sample VNAV route, simplified to show the basics. The checkpoints/airports exist on the Houston Sectional.

1. The first step is to determine the end point or destination of your route. In real world terms, this could consist of an enemy position, landing zone, drop zone, etc. For purposes of primary navigation training, your final checkpoint will be referred to as your **target**. The required time of arrival at this final checkpoint is your time on target (TOT). Once you determine your final checkpoint, you must locate checkpoints along your route of flight allowing you to navigate from your initial checkpoint to the final checkpoint. A circle should be drawn around each checkpoint for easy identification (circle should be about the size of a nickel). Recommend all marks be done initially in pencil to allow easy correction. Ballpoint black ink can be used after all work is completed and proofread.
2. Use your nav plotter to connect the points directly with a course line. Stop your course line at the edge of your circle to preclude obscuring important data over your checkpoint.
3. There are two methods to figure the magnetic course of each leg:
 - a. Use the nearest compass rose on the chart to give you magnetic course. Lay the ruler along your course line and then slide the ruler over to the center of the compass rose and read the magnetic course. This method is not as accurate as using the longitude lines for obvious reasons.

4-2 PREFLIGHT PLANNING

- b. Use of the longitude lines will give you true heading. Isogonic lines of variation are found on the chart and will be used to compute magnetic course based on the formulas shown below:
 - i. Measure the true course (TC) with your plotter directly from the chart.
 - ii. Find the average isogonic variation for the route segment from the chart.
 - iii. Compute magnetic course: $TC - \text{Variation (E)} = MC$
 $TC + \text{Variation (W)} = MC$
 - iv. Record these values on your Jet Log.

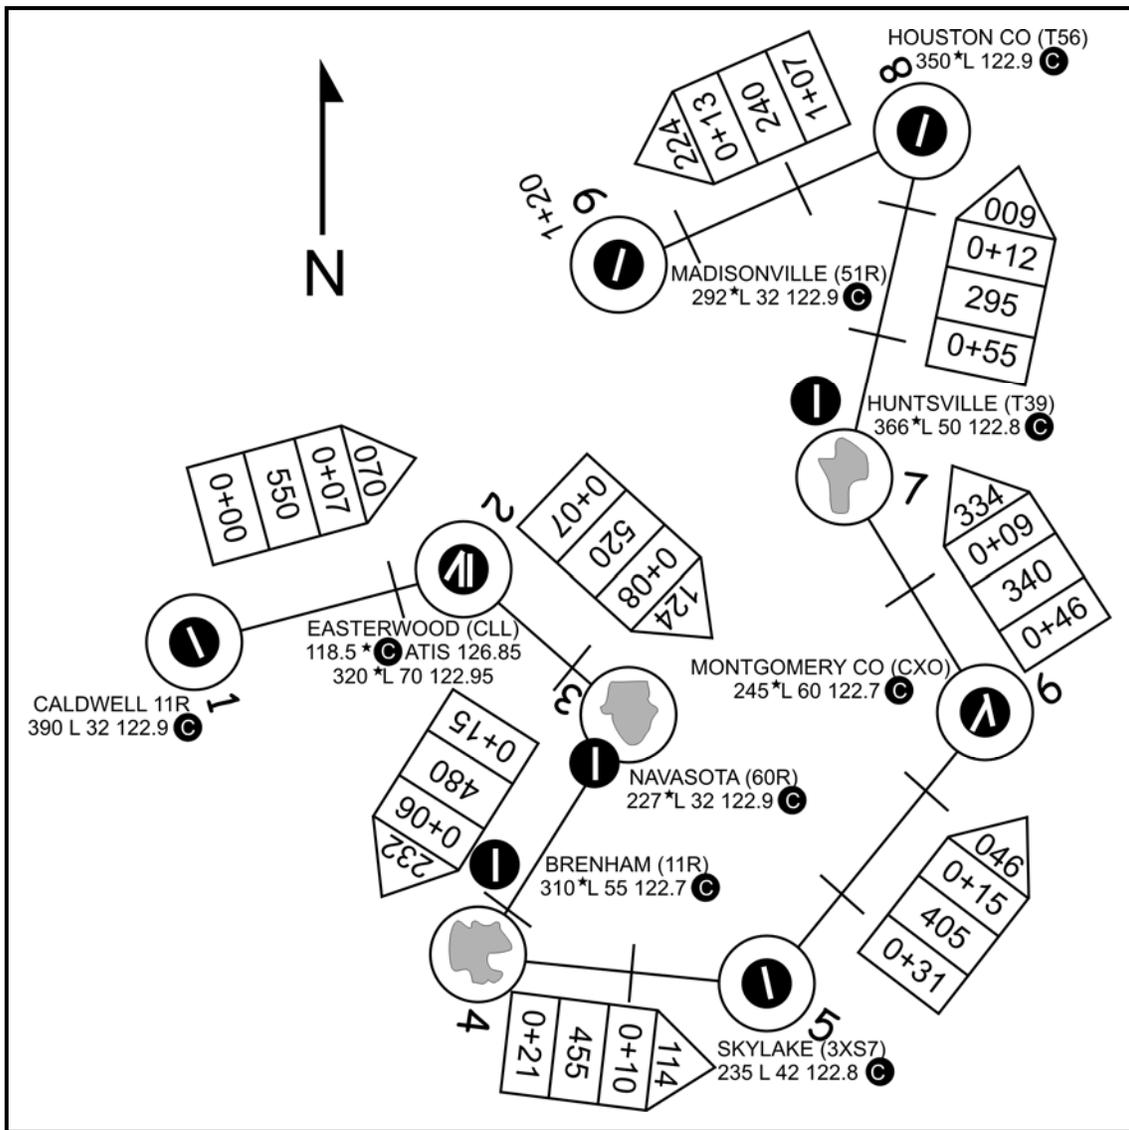


Figure 4-1 Longitude Lines

4. There are several ways you can measure the distance of each leg on the chart. Dividers or a plotter will allow you to accurately measure distance. If you do not have dividers or a plotter, recommend you use your Jet Log as a straightedge and transfer a 40 NM scale onto it (scales are located along the bottom of the sectional). The scale should be ticked at each 10 NM interval with the last 10 NM block being ticked at each 1 NM. Measure from center to center of each checkpoint and round off to the nearest one-half nautical mile. Record these values on your Jet Log.
5. Figure timing between each leg based on 180 knots ground speed (3.0 miles/minute). Next, place time tic marks perpendicular to the course line at five minute intervals (15 NM) to aid in determining position while enroute. These tic marks are a technique used to aid a pilot in verifying his/her position while using pilotage procedures. Note the interval between tic marks can be as restrictive as needed for the particular mission.
6. Calculate **minimum fuel to continue** for each checkpoint. Minimum fuel to continue is the minimum amount of fuel required at each checkpoint to continue with the planned route and proceed to the final landing destination with required reserves. When computing minimum fuel, it is important to note whether the final checkpoint is also your destination airport. If this is not the case, you will need to plan for the fuel to transit from the end of your route to the landing destination. Compute continuation fuel by working backwards along your route of flight. First, begin by adding fuel reserves (in accordance with local SOP) to the fuel required to transit from your landing destination to your final checkpoint. Next, add this amount to the fuel required to fly each leg of the flight plan from the final checkpoint back to the initial takeoff. Real world constraints may dictate a route/mission abort. For primary navigation training, modifications or termination of the route early and proceeding direct to your final checkpoint are the expected courses of action if fuel to continue will be exceeded along the route.
7. **Time on Target (TOT)** is the exact arrival time at the last checkpoint based upon the preplanned total route time. Meeting a TOT can mean the difference of mission success or mission failure when working with other military assets. In order to successfully make your TOT, prior planning will be required. Begin by placing a start time of 0+00 in the bottom of your first data box (first checkpoint). Calculate the time enroute for your first leg to be flown. Enter this time into the second data box for elapsed time. On the subsequent legs continue adding your leg time to the previous elapsed time. Your elapsed time at your final checkpoint, or Time on Target (TOT), should equal your total preplanned time enroute (see Figure 4-1). By noting the clock at the time of route commencement, a hard time, or actual arrival time can be determined for each checkpoint in advance. Sequentially number each checkpoint on the route to the right of the checkpoint.
8. It is important to arrive at each checkpoint at the planned time so that arrival at the last checkpoint with correct TOT is attained. For timing corrections along the route, cutting off or extending your route is not a good technique. A better technique is to apply ground speed corrections. Timing corrections are based on the 60-to-1 rule. Let's look at a T-34C traveling at 180 knots ground speed or 3.0 nautical miles per minute. For every ten seconds off timing, change the ground speed by ten knots for three minutes. For example, if you are 40 seconds ahead, decrease the ground speed to 140 knots for three minutes. When back on time, analyze

why you got off time and apply corrections to your ground speed. However, it is unlikely that you will be able to catch up in a T-34C if you are too far behind due to aircraft performance limitations. Note the fact that you are behind, being careful not to exceed NATOPS limitations to catch up.

9. Draw a data box along each route segment, pointing in the direction that the leg is to be flown. **Do not obscure any geographical features usable for navigation.** A data box may contain as much or as little information as necessary. For the Primary Navigation stage, fill in the information as shown in Figure 4-2 below.

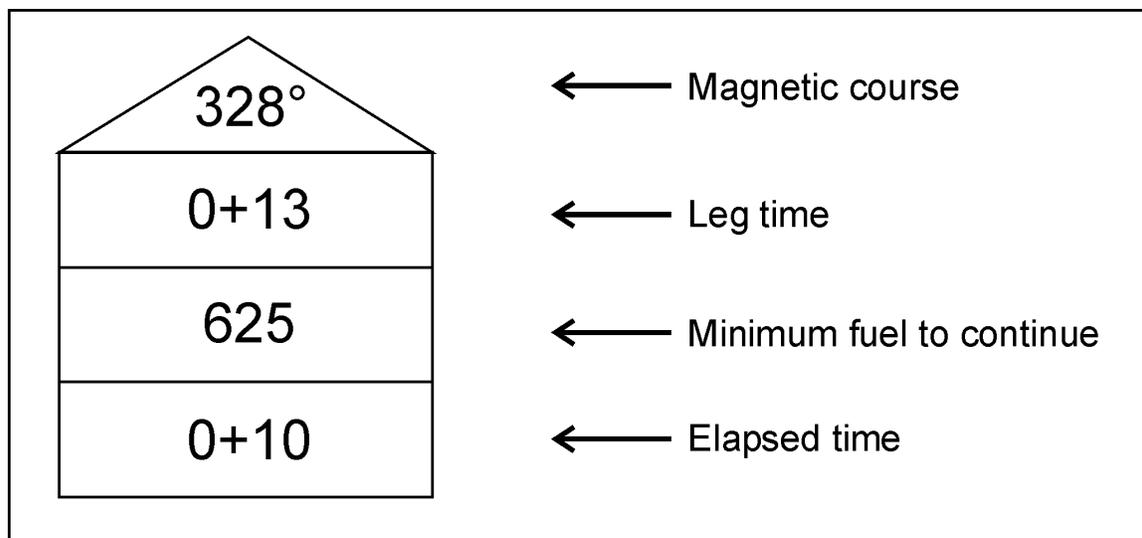


Figure 4-2 Data Box

NOTE

Do not cut or destroy any sectional chart so they may be reused on your subsequent flights! It is unauthorized for SNAs to utilize charts which are handed down from any stage complete SNA. This action would be grounds for attrition of each student.

10. Study the route! Note landmarks on your route that can be used as a time check or as a position check. There are three types of landmarks:

- a. **Positive landmarks** are features which can be positively identified and plotted at a point on the chart. A large distinctively shaped lake, an airport, or a road with a prominent bend would be some examples of positive landmarks.
- b. **Linear landmarks** are features which can be positively identified but not specifically plotted because they extend for some distance. Rivers, roads, and railroad tracks are examples of linear landmarks.
- c. **Uncertain landmarks** are features which the pilot suspects he/she can correlate with the chart but are not fully reliable. Uncertain landmarks, though they may not be

used as the basis for a heading correction, indicate to the pilot a likely position from which he/she can better anticipate future landmarks. Small lakes, farms, oil fields, or towers are examples of uncertain landmarks.

404. JET LOG

All the necessary checkpoint information (course, time and fuel) will be placed on the Jet Logs for these routes. You need only fill out fuel and alternate data on the reverse side if your flight is not a round robin. For simplicity, only the following columns will be utilized (Figure 4-3).

1. **Route/To:** Under the Route/To column, place each checkpoint description in the block.
2. **Ident/Chan:** Write the checkpoint identifier (if applicable) in the Ident block. Leave CHAN blank.
3. **Course (CUS):** Write the magnetic course (MC) for each leg in this column.
4. **Distance (DIST):** Write each leg distance in the appropriate block of the distance column.
5. **Estimated Time Enroute (ETE):** Visual navigation routes will be planned for 180 ground speed, 3.0 NM/min. Actual airspeeds flown may be changed at the discretion of the IP. Using ground speed based on forecast wind, compute a leg time. Write it in the appropriate ETE column.
6. **Estimated Time Of Arrival (ETA):** The ETA Block will be determined by inserting the elapsed time from the data box on your chart for each checkpoint. The ATA will be filled in during flight and compared with the ETA and elapsed time from your data box.
7. **Leg Fuel:** Use your CR-2 or other circular slide ruler, and the NATOPS performance charts to calculate the fuel burned for each leg. Round this number up to the nearest five pounds and write it in the appropriate block of this column.
8. **Estimated/Actual Fuel Remaining (EFR/AFR):** Compute EFR at each checkpoint and enter this figure in the EFR block. AFR will be entered in the AFR block for each checkpoint during the flight. Compare this to minimum fuel to continue from the chart data box.
9. **Additional Information:** The top and bottom of the card provide spaces for information which will be particularly useful when departing from airports or landing at airports other than your home field.

405. DD 175 PREPARATION

All VNAV flights will require submission of a VFR flight plan. Consult FLIP Planning, Chapter Four, for proper format (Figure 4-4 is a sample DD 175). Upon completion of the DD 175, pilots will receive a weather briefing IAW local procedures. Some weather offices will provide a "VFR Stamp" which states the planned flight can be accomplished under VFR (1000/3) and the pilot has received a verbal briefing.

4-6 PREFLIGHT PLANNING

A VFR flight plan is different from an IFR flight plan in that it is not a clearance. A VFR flight plan's purpose is essentially to provide flight following by FSS. When filling out the route of flight portion, approximate your route as best you can with airport, NAVAID, or intersection identifiers as per the AIM.

FSS will consider you overdue 30 minutes after your ETA based on your actual takeoff time and estimated time enroute. Any time you will be more than 15 minutes late, you should update your ETA with FSS. If you have not closed your flight plan by your ETA plus 30 minutes, FSS will start trying to locate you. This starts with phone calls, and can go as far as launching search and rescue aircraft on your flight plan route and any subsequent VFR position reports you have delivered to FSS. Always close your flight plan on arrival via phone (1-800-WX-BRIEF), or over the radio, when landing is assured, or in person if FSS is located at the airfield.

SINGLE-ENGINE JET FLIGHT LOG								
CNATRA-GEN 3760/1 (REV. 7-78) S/N0197LLCF19482								
DEP ELEV 390' (14R)		CLNC DELIV		GND CONT		TOWER		
ALT CORR		TIME OFF		TAS 180		LBS PH/PMIN 260/4.3		
CLEARANCE								
DEPARTURE								
DEST ELEV 292'		APC CONT		TOWER		GND CONT		
ROUTE	IDENT	CUS	DIST	ETE	ETA	LEG	EFR	NOTES
TO	CHAN				ATA	FUEL	AFR	
EASTER- WOOD	CLL	070	20	7	0+00	30	710	
NAVASOTA		124	22	8	0+07	35	675	
BRENHAM		232	16	6	0+15	25	650	
SKYLAKE	3XS7	114	28	10	0+21	40	610	
MNTGMRY CO	CXO	046	44	15	0+31	60	550	
HUNTSVILLE		334	26	9	0+46	35	515	
HOUSTON CO	T56	009	35	12	0+55	50	465	
MADISON- VILLE ARPT	51R	224	37	13	1+07	50	415	
			228	1+20	1+20	325		
								FRCST ALT
ALTERNATE		ROUTE		ALTITUDE		TIME	FUEL	
ALT ELEV		APC CONT		TOWER		GND CONT		

(Over)

NOTE: Fuel flow figures are fictitious. Refer to NATOPS CHARTS.

Figure 4-3 Single Engine Jet Log

NOTE

Fuel flow figures are fictitious. Refer to NATOPS CHARTS.

AUTHORITY: 10 USC 8012 and EO 9397		PRINCIPAL PURPOSE: To aid in accurate identification of personnel participating in the filed flight.		ROUTINE USES: To provide data required to process flight plans with appropriate air traffic service authorities. A file is retained by the agency processing the flight plan.		DISCLOSURE: Voluntary, however, failure to provide the SSN could result in denial of flight plan processing.		LOCAL DATE		DATE DD MM YY		AIRCRAFT CALL SIGN VV 6E123 4G700		AIRCRAFT DESG AND TD CODE T-34 T/A	
BASE OPERATIONS USE															
	TYPE FLT PLAN	TRUE AIRSPEED	POINT OF DEPARTURE	PROPOSED DEPARTURE TIME (Z)	ALTITUDE	ROUTE OF FLIGHT						TO	ETE		
	V	180	14R	1200	25	CLL, NAVASOTA, BRENHAM, 3XS7, CXO HUNTSVILLE, T56 IAW VFR SEMICIRCULAR CRUISING RULES						51R	1+20		
			AIRPORT IDENTIFIER												
REMARKS															
RANK AND HONOR CODE															
OFF DD-175-1															
164159/CTW-4/NGP															
FUEL ON BD 3+00		ALTN AIRFIELD N/A		ETE TO ALTN N/A		NOTAMS <input checked="" type="checkbox"/>		WEATHER 08-123		WT AND BALANCE N/A		AIRCRAFT SERIAL NUMBER, UNIT, AND HOME STATION 160123/CTW-5/NSE			
SIGNATURE OF APPROVAL AUTHORITY				CREW/PASSENGER LIST				ACTUAL DEP TIME (Z)		BASE OPERATIONS USE					
DUTY				NAME AND INITIALS				RANK		SSN		ORGANIZATION AND LOCATION			
PILOT IN COMMAND		JONES, I.P.				LT		N/A		VT-6/NSE					
C/P		SMITH, N.A.				2LT		N/A		VT-27/NGP					
SSN NOT REQUIRED															

Figure 4-4 Sample DD 175

406. NAV ALTITUDES

1. Daytime routes will never be flown lower than 1000 feet AGL, and normally no higher than 4500 feet AGL.
2. Nighttime routes shall not be flown lower than 2000 feet AGL.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER FIVE

NAVIGATION PROCEDURES

500. INTRODUCTION

The key to any successful flight can be directly attributed to sound procedures. Much like the Instrument Stages, a good scan, thorough preflight planning, and the 6Ts, will equip any aviator with the tools necessary for successful navigation.

501. COCKPIT MANAGEMENT

Before each flight, Crew Resource Management (CRM) will be discussed along with the NATOPS brief. It should cover the conduct of the flight and what is expected from both the instructor pilot and student.

In the training environment, the SNA will normally be the pilot at the controls and his/her responsibilities include:

1. Navigation and mission requirements.
2. Radio calls.
3. Timing between checkpoints and continuous update of time on target (TOT).
4. Landmark identification.
5. Management of all radio frequencies.

502. GROUND PROCEDURES

All checklists shall be accomplished IAW the NATOPS Manual and the Contact FTI. After the Pre-Taxi Checklist is complete and current ATIS information is obtained, the following call to Ground Control will be made:

“_____ Ground, [A/C call sign], taxi, VFR, [destination], with information _____.”

Before leaving the runup area, ensure your charts, logs and pubs are open and readily accessible for the flight. Be organized. The climbout is not the time to have to fold your chart or look for your Jet Logs.

503. DEPARTURE

Takeoff and departure will be in accordance with local course rules. Level off at altitude using normal procedures. Stabilize on heading and altitude to the first checkpoint. Trim! Cruise control procedures are very important to a successful flight. Good trim ensures accurate altitude and heading control, even fuel flow, and will minimize pilot fatigue. Maintain a continuous VFR scan of the surrounding airspace and engine instruments to ensure flight safety.

NOTE

Instructors will discuss the technique for intercepting course at airfields where you cannot depart on preflight heading.

504. NAVIGATION

The primary means of navigation used on navigation flights will be a combination of dead reckoning (DR) and pilotage. DR is a logical system in which time, velocity, and distance are combined to arrive at a position. Pilotage is flying by visual reference to features on the ground.

Visual Fixing

When flying the VNAV route, the correct procedure is to check the chart for preselected checkpoints, then look ahead on the ground for the point identified by the chart. Crosscheck this against your timing. This "**chart-to-ground**" technique will prove to be remarkably accurate when combined with careful heading control. A recommended method is to align the chart in the same relative direction as the aircraft's actual track. Do not limit yourself to crosschecking your navigation with only references off the nose of the aircraft. Exercise a scan to include as far as you can see in each direction to assist with your navigation. Further, make note to the relationship of how landmarks are arranged in correlation to one another. For example, if two small towns lie ahead, and you are unsure of which one is your next checkpoint, the existence of several towers to the east of one city may help to identify the correct checkpoint.

Checkpoint Procedures

Once positive identification of a checkpoint has been made, fly directly over the checkpoint and perform the following procedures (**6 Ts**):

1. **TIME** – Note the time at the checkpoint. This time should correspond with your leg time and elapsed time. Write your arrival time in the ATA block of your Jet Log.
2. **TURN** – Turn to the new heading and look for a landmark off the nose to aid in heading control.
3. **TIME** – Start the sweep second hand and check the timing on the chart for the next leg.
4. **TRANSITION** – Check that the altitude is in conformance with VFR cruising procedures; climb or descend as necessary using normal procedures. If operating below 3000 feet AGL, ensure your altitude is at least 1000 feet AGL for day navigation and 2000 feet AGL for night navigation.
5. **TRUE** – Check wet compass against RMI and fast slave if necessary.

6. **TALK** – Give an IGP to the instructor over the ICS; if desired (or required by the instructor), give a VFR position report to FSS using the format on the back of your IFR Supplement.

505. STANDARD COURSE CORRECTION

Prior to takeoff, estimate your course and ground speed from known data. Once in the air, be prepared to adjust your heading for winds. Crabbing into the wind may be necessary in order to stay on the planned course. A strong headwind or tailwind would cause differences in your timing and should be anticipated.

The techniques of navigation used on visual navigation flights will depend on altitude. The major difference between high- and low-level navigation is perspective. At high altitude, objects on the ground appear flat and without depth. In low-level navigation, objects have more of a vertical development and will appear to pass beneath the aircraft more quickly.

Approaching a major checkpoint, positively identify it. If off track, make the necessary corrections. When course corrections are necessary, they may be rapid or gradual, depending on the situation. For instance, if a checkpoint is seen several miles ahead but off to the right, it would be sufficient to proceed directly to the checkpoint. On the other hand, if an intermediate landmark that was supposed to be right or left of the course line were seen just ahead, it would be advantageous to S-turn early so that the feature could be crossed on the proper heading, airspeed, and time. When landmarks indicate a position some distance off course, a lateral correction must be made. When a prolonged heading error has caused the problem, remember that a similar heading change to the other side of the preplanned course will take you back on course in the same amount of time that caused the initial error (assuming negligible crosswinds exist). Another correction technique is called funneling, which follows some linear landmark until it intercepts a positive landmark along or on your route of flight. Limiting features are those prominent landmarks selected along your route of flight that prevent you from flying off course or beyond your checkpoint. For example, you might select a landmark past a checkpoint. If you are unable to locate the checkpoint and you subsequently find the chosen landmark, you know you have passed the checkpoint.

If the estimated time for a leg is up and you cannot recognize the checkpoint, turn on time to your next course, perform the checkpoint procedures, and look for landmarks that will enable you to identify your position. Once an accurate fix on your position has been determined, correct as necessary and revise your log.

506. WEATHER DEVIATIONS

Occasionally in the course of the flight, you may encounter serious weather across your proposed route. It may be necessary to return to home field, go to an alternate destination, or possibly deviate from the planned route and circumnavigate the weather. If circumnavigation is possible, the deliberate course duration method should be used. Leave the route by making a turn a number of degrees (i.e., 60°), determined by the distance and size of the obstructing weather. Noting the time, maintain the new heading until abeam the obstruction. Note the time again, turn

back toward the original course using twice the original heading change. The amount of heading change is determined by how extensive the storm is and how close your flight is to the weather. It is recommended that no angle above 70° be used. After the new heading has been determined, it is very important the heading change is made and the time of the turn is recorded on your kneeboard.

The amount of time on the outbound leg will be determined by fixing the flight's position abeam the storm. The total time on the outbound leg will be from the point of turn outbound to the point of turn inbound and the time will be recorded.

The amount of time on the inbound leg will be the same as that for the outbound leg, (assuming crosswinds to be negligible). Turn to the original heading at the completion of timing on the inbound leg. If 60° heading changes are used, it is possible to update the ETA to the next checkpoints by adding the leg time of one leg to the ETA. (If the 60° (equilateral triangle) method is not used, then all leg times will not be the same and you cannot add any leg time to the ETA.) (Figure 5-1.)

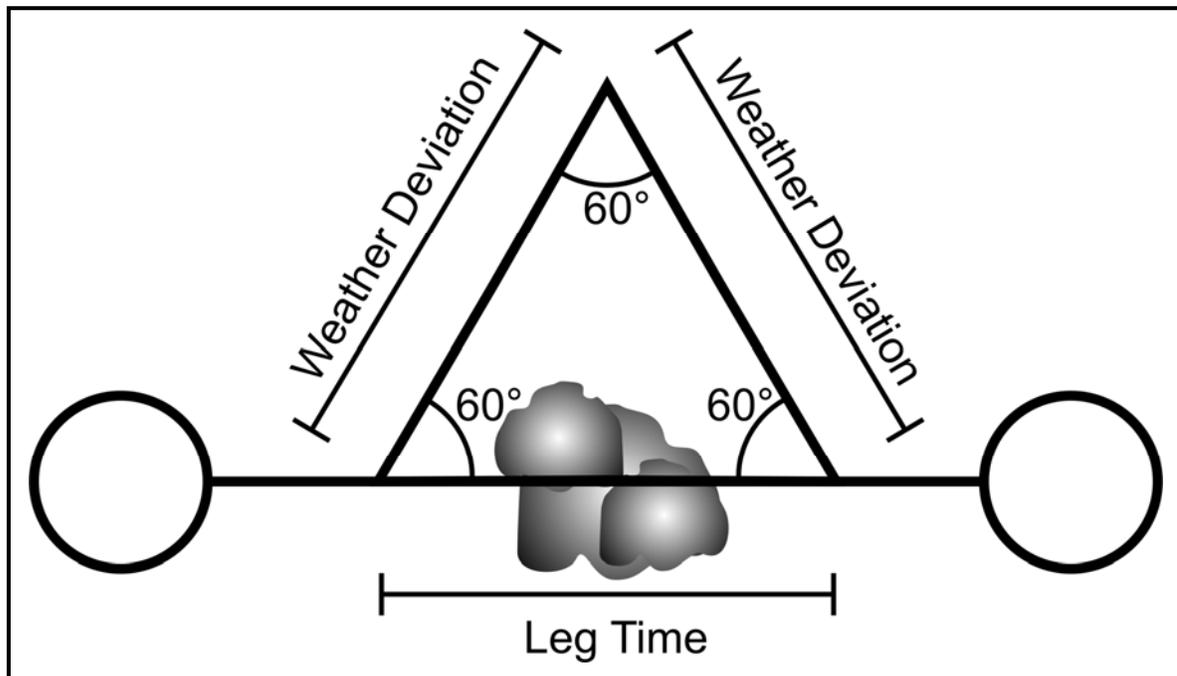


Figure 5-1 Leg Time

CHAPTER SIX

AIRPORT OPERATIONS

600. INTRODUCTION

During VNAV training, you may find yourself entering civilian fields. This chapter will assist you in civilian field operations.

NOTE

The following information is condensed from the Aeronautical Information Manual (AIM) (chapter 4, section 3) "Airport Operations."

601. TOWER-CONTROLLED AIRPORTS

1. When operating at an airport where traffic control is being exercised by a control tower, pilots are required to maintain two-way radio contact with the tower while operating within the Class B, Class C, or Class D surface area unless the tower authorizes otherwise. Initial call-up should be made about 15 miles from the airport, preferably at a VFR reporting point depicted on the VFR Sectional by a magenta flag. When reporting at other than a depicted reporting point, utilize the following format:

"_____ tower, [A/C call sign], 15 miles, [direction from airport], for landing, with information _____."

When departing, unless there is a good reason to leave the tower frequency before exiting the Class B, Class C, or Class D surface area, it is a good operating practice to remain on the tower frequency for the purpose of receiving traffic information. In the interest of reducing tower frequency congestion, pilots are reminded that it is not necessary to request permission to leave the tower frequency once outside of the Class B, Class C, or Class D surface area.

2. When necessary, the tower controller will issue clearances or other information instructing aircraft to fly a desired flight path (traffic pattern) when flying in Class B, Class C, or Class D surface areas. If not otherwise authorized or directed by the tower, pilots of fixed-wing aircraft approaching to land must circle the airport to the left. However, if an "RP" is depicted under the airport data on the sectional, pilots are expected to execute a right hand pattern (RP 23 for example, denotes a right hand pattern for runway 23). Ground Control (or tower) will provide proper taxi routes when operating on the ground.

3. The following terms for the various components of a traffic pattern have been adopted as standard for use by control towers and pilots.

- a. Upwind leg
- b. Crosswind leg

- c. Downwind leg
- d. Base leg
- e. Final approach

602. VISUAL INDICATORS AT UNCONTROLLED AIRPORTS

1. At those airports without an operating control tower, a segmented circle visual indicator system, if installed, is designed to provide traffic pattern information. The segmented circle system consists of the following components:

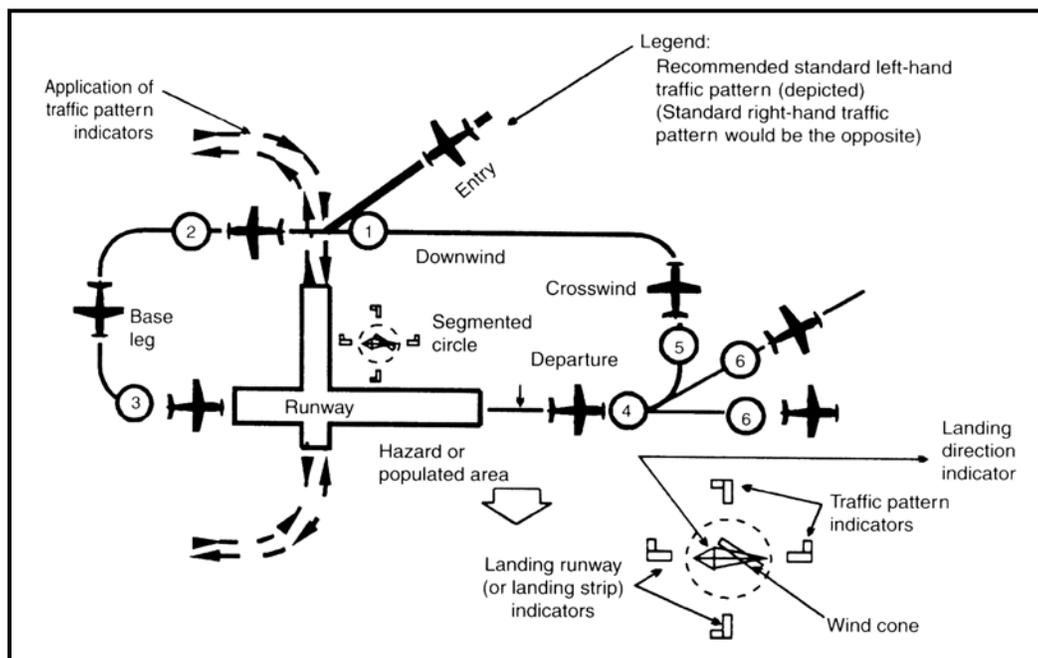


Figure 6-1 Traffic Pattern Operations

- a. **Segmented circle** is located in a position affording maximum visibility to pilots in the air and on the ground and providing a centralized location for other elements of the system.
- b. **Wind Direction Indicator** is a wind cone, windsock, or wind tee installed near the operational runway to indicate wind direction. The large end of the wind cone/sock points into the wind as does the large end (crossbar) of the wind tee. In lieu of a tetrahedron and where a windsock or wind cone is collocated with a wind tee, the wind tee may be manually aligned with the runway in use to indicate landing direction. These signaling devices may be located in the center of the segmented circle and may be lighted for night use. Pilots are cautioned against using a tetrahedron to indicate wind direction.

6-2 AIRPORT OPERATIONS

- c. **Landing Direction Indicator** is a tetrahedron installed when conditions at the airport warrant its use. It may be used to indicate the direction of landings and takeoffs. A tetrahedron may be located at the center of a segmented circle and may be lighted for night operations. The small end of the tetrahedron points in the direction of landing. Pilots are cautioned against using a tetrahedron for any purpose other than as an indicator of landing direction. Further, pilots should use extreme caution when making runway selection by use of a tetrahedron in very light or calm wind conditions as the tetrahedron may not be aligned with the designated calm wind runway. At airports with control towers, the tetrahedron should only be referenced when the control tower is not in operation. Tower instructions supersede tetrahedron indications.
 - d. **Landing Strip Indicators** are installed in pairs as shown in the segmented circle diagram (Figure 6-1) and used to show the alignment of landing strips.
 - e. **Traffic Pattern Indicators** are arranged in pairs in conjunction with landing strip indicators, and are used to indicate the direction of turns when there is a variation from the normal left traffic pattern. (If there is no segmented circle installed at the airport, traffic pattern indicators may be installed on or near the end of the runway.)
2. Preparing to land at an airport without a control tower, or when the control tower is not in operation, the pilot should concern him/herself with the indicator for the approach end of the runway to be used. When approaching for landing, all turns must be made to the left unless a traffic pattern indicator indicates that turns should be made to the right. If the pilot will mentally enlarge the indicator for the runway to be used, the base and final approach legs of the traffic pattern to be flown immediately become apparent. Similar treatment of the indicator at the departure end of the runway will clearly indicate the direction of turn after takeoff.
 3. When two or more aircraft are approaching an airport for the purpose of landing, the aircraft at the lower altitude has the right-of-way, but shall not take advantage of this rule to cut in front of another which is on final approach to land, or to overtake that aircraft.

603. TRAFFIC PATTERNS

At most airports and military air bases, traffic pattern altitudes for propeller-driven aircraft generally extend from 600 feet to as high as 1500 feet above the ground. Traffic pattern altitudes for military turbojet aircraft sometimes extend up to 2500 feet above the ground. **The FAR 91.129 defines altitudes for class D airports, while the Advisory Circular 90-66A page 3 describes the altitudes at airports without operating control towers for turbine powered airplanes as 1500' AGL.**

NOTE

Airports with a published pattern altitude for turbine powered aircraft supersede the generic 1500' AGL listed above. Always check airport facility directories to determine pattern specifics.

Pilots of enroute aircraft should be constantly alert for other aircraft in traffic patterns and avoid these areas whenever possible. Traffic pattern altitudes should be maintained unless otherwise required by the applicable distance from cloud criteria (Figures 3-2 and 3-5).

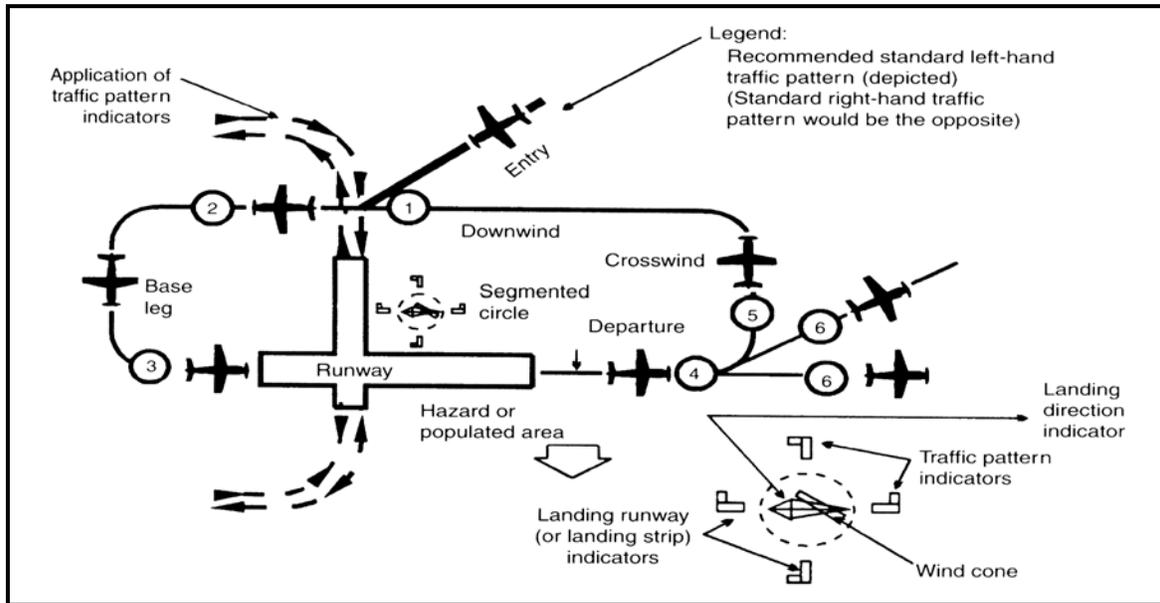


Figure 6-2 Traffic Pattern Operations

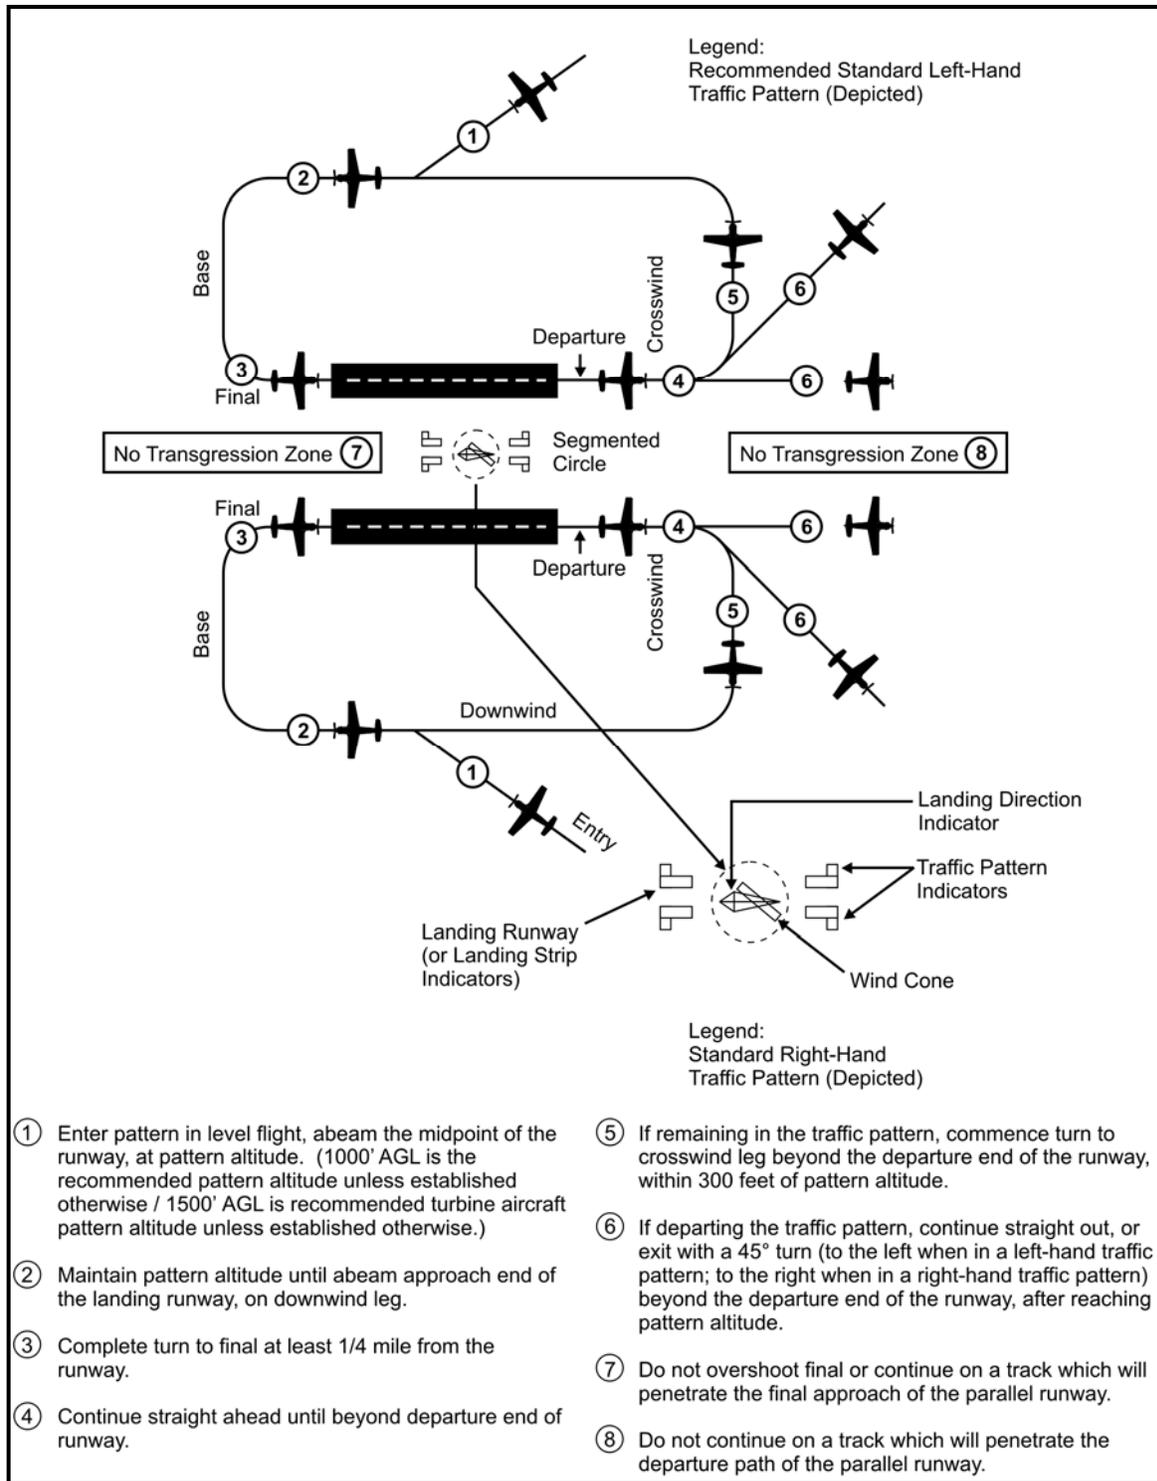


Figure 6-3 Traffic Pattern Operations

604. UNEXPECTED MANEUVERS IN THE TRAFFIC PATTERN

1. There have been several incidents in the vicinity of controlled airports caused primarily by aircraft executing unexpected maneuvers. ATC service is based upon observed or known traffic and airport conditions. Controllers establish the sequence of arriving and departing aircraft by requiring them to adjust flight as necessary to achieve proper spacing. These adjustments can only be based on observed traffic, accurate pilot reports, and anticipated aircraft maneuvers. Pilots are expected to cooperate so as to preclude disruption of traffic flow or creation of conflicting patterns. The pilot in command of an aircraft is directly responsible for and is the final authority as to the operation of his aircraft.

2. On occasion, it may be necessary for a pilot to maneuver his aircraft to maintain spacing with the traffic he has been sequenced to follow. The controller can anticipate minor maneuvering such as shallow "S" turns. The controller cannot, however, anticipate a major maneuver such as a 360° turn. If a pilot makes a 360° turn after he has obtained a landing sequence, the result is usually a gap in the landing interval and, more importantly, it causes a chain reaction which may result in a conflict with following traffic and interruption of the sequence established by the tower or approach controller. Should a pilot decide he/she needs to make maneuvering turns to maintain spacing behind a preceding aircraft, he/she should always advise the controller if at all possible. Except when requested by the controller or in emergency situations, a 360° turn should never be executed in the traffic pattern or when receiving radar service without first advising the controller.

605. USE OF RUNWAYS

1. Runways are identified by numbers which indicate the nearest 10° increment of the azimuth of the runway centerline. For example, where the magnetic azimuth is 183°, the runway designation would be 18; for a magnetic azimuth of 87°, the runway designation would be 9. For a magnetic azimuth ending in the number 5, such as 185, the runway designation could be either 18 or 19. Wind direction issued by the tower is also magnetic and wind velocity is in knots.

2. Airport proprietors are responsible for taking the lead in local aviation noise control. Accordingly, they may propose specific noise abatement plans to the FAA. If approved, these plans are applied in the form of Formal or Informal Runway Use Programs for noise abatement purposes.

- a. At airports where no runway use program is established, ATC clearances may specify:
 - i. The runway most nearly aligned with the wind when it is 5 knots or more.
 - ii. The "calm wind" runway when wind is less than 5 knots.
 - iii. Another runway if operationally advantageous.

NOTE

It is not necessary for a controller to specifically inquire if the pilot will use a specific runway or to offer him/her a choice of runways. If a pilot prefers to use a different runway than that specified or the one most nearly aligned with the wind, he/she is expected to inform ATC accordingly.

- b. At airports where a runway use program is established, ATC will assign runways deemed to have the least noise impact. If in the interest of safety, a runway different than that specified is preferred, the pilot is expected to advise ATC accordingly. ATC will honor such requests and advise pilots when the requested runway is noise sensitive. When use of a runway other than the one assigned is requested, pilot cooperation is encouraged to preclude disruption of traffic flows or creation of conflicting patterns.

606. INTERSECTION TAKEOFFS

1. In order to enhance airport capabilities, reduce taxiing distances, minimize departure delays, and provide for more efficient movement of aircraft, controllers may initiate intersection takeoffs as well as approve them when the pilot requests. If for any reason a pilot prefers to use a different intersection or the full length of the runway, or desires to obtain the distance between the intersection and the runway end, HE/SHE IS EXPECTED TO INFORM ATC ACCORDINGLY.
2. An aircraft is expected to taxi to (but not onto) the end of the assigned runway unless prior approval for an intersection departure is received from Ground Control.
3. Pilots should state their position on an airport when calling tower for takeoff from a runway intersection.

607. LOW APPROACH

1. A low approach (sometimes referred to as a low pass) is the go-around maneuver following an approach. Unless otherwise authorized by ATC, the low approach should be made straight ahead, with no turns or climbs made until the pilot has made a thorough visual check for other aircraft in the area.
2. When operating within a Class D airspace, a pilot intending to make a low approach should contact the tower for approval. This request should be made prior to starting the final approach.
3. When operating at an airport which does not have an operating control tower, a pilot intending to make a low approach should advise the FSS, UNICOM, or make a broadcast on the CTAF, as appropriate. This call should be made prior to leaving the final approach fix inbound for nonprecision approaches, or the outer marker or fix used in lieu of the outer marker for precision approaches.

608. TRAFFIC CONTROL LIGHT SIGNALS

1. The following procedures are used by Air Traffic Control Towers in the control of aircraft, ground vehicles, equipment, and personnel not equipped with radio. These same procedures will be used to control aircraft, ground vehicles, equipment and personnel equipped with radios if radio contact cannot be established. ATC personnel use a directive traffic control signal which emits an intense narrow light beam of a selected color (red, white, or green) when controlling aircraft by light signal.
2. The directions transmitted by a light signal (Figure 6-4) are very limited, since no approval or disapproval of a pilot's anticipated actions may be transmitted. No supplemental or explanatory information may be transmitted except by the use of the "General Warning Signal" which advises the pilot to be on the alert.
3. Between sunset and sunrise, a pilot wishing to attract the attention of the control tower should turn on a landing light and taxi the aircraft into a position, clear of the active runway, so that light is visible to the tower. The landing light should remain on until appropriate signals are received from the tower.
4. During daylight hours, acknowledge tower transmissions or light signals by moving the ailerons or rudder. At night, acknowledge by blinking the landing and navigation lights. If radio malfunction occurs after departing the parking area, watch the tower for light signals while monitoring tower frequency.

COLOR AND TYPE OF SIGNAL	MOVEMENT OF VEHICLE, EQUIPMENT, AND PERSONNEL	AIRCRAFT ON GROUND	AIRCRAFT IN FLIGHT
STEADY GREEN	Cleared to cross, proceed, or go	Cleared for takeoff	Cleared to land
FLASHING GREEN	Not applicable	Cleared for taxi	Return for landing (to be followed by steady green at the proper time)
STEADY RED	STOP	STOP	Give way to other aircraft and continue to circle
FLASHING RED	Clear the taxiway or runway	Taxi clear of runway in use	Airport unsafe do not land
FLASHING WHITE	Return to starting point on airport	Return to starting point on airport	Not applicable
ALTERNATING RED AND GREEN	Exercise extreme caution	Exercise extreme caution	Exercise extreme caution

Figure 6-4 ALDIS Lamp Signals**609. APPROACH CONTROL SERVICE FOR VFR ARRIVING AIRCRAFT**

1. Numerous approach control facilities have established programs for VFR arriving aircraft to contact approach control for landing information. This information includes: wind, runway, and altimeter setting at the airport of intended landing. This information may be omitted if contained in the ATIS broadcast and the pilot states the appropriate ATIS code.

6-8 AIRPORT OPERATIONS

NOTE

Pilot use of the phraseology “have numbers” does not indicate receipt of the ATIS broadcast. In addition, the controller will provide traffic advisories on a workload permitting basis.

2. Such information will be furnished upon initial contact with the approach control facility. The pilot will be requested to change to the tower frequency at a predetermined time or point, to receive further landing information.
3. Where available, use of this procedure will not hinder the operation of VFR flights by requiring excessive spacing between aircraft or devious routing.
4. Compliance with this procedure is not mandatory but pilot participation is encouraged.

610. TRAFFIC ADVISORY PRACTICES AT AIRPORTS WITHOUT OPERATING CONTROL TOWERS**1. Airport Operations Without Operating Control Tower**

- a. There is no substitute for alertness while in the vicinity of an airport. It is essential that pilots be alert and look for other traffic and exchange traffic information when approaching or departing an airport without an operating control tower. This is of particular importance since other aircraft may not have communication capability and, in some cases, pilots may not communicate their presence or intentions when operating into or out of such airports. To achieve the greatest degree of safety, it is essential all radio-equipped aircraft that transmit/receive on a common frequency be identified for the purpose of airport advisories.
- b. An airport may have a full- or part-time tower or flight service station (FSS) located on the airport. It may have a full- or part-time UNICOM station or no aeronautical station at all. There are three ways for pilots to communicate their intentions and obtain airport/traffic information when operating at an airport that does not have an operating tower: by communicating with an FSS, a UNICOM operator, or by making a self-announce broadcast.

2. Communicating On A Common Frequency (CTAF)

- a. The key to communicating at an airport without an operating control tower is selection of the correct common frequency. The acronym CTAF, which stands for Common Traffic Advisory Frequency, is synonymous with this program. A CTAF is a frequency designated for the purpose of carrying out airport advisory practices while operating to or from an airport without an operating control tower. The CTAF may be a UNICOM, MULTICOM, FSS, or tower frequency and is identified in appropriate aeronautical publications.

- b. The CTAF frequency for a particular airport is contained in the Airport/Facility Directory (A/FD), Alaska Supplement, Alaska Terminal Publication, Instrument Approach Procedure Charts, and Standard Instrument Departure (SID) Charts. Also, the CTAF frequency can be obtained by contacting any FSS. Use of the appropriate CTAF, combined with a visual alertness and application of the following recommended good operating practices, will enhance safety of flight into and out of all uncontrolled airports.

3. Recommended Traffic Advisory Practices

All inbound traffic should monitor and communicate as appropriate on the designated CTAF from 10 miles to landing. Departing aircraft should monitor/communicate on the appropriate frequency from start-up, during taxi, and until 10 miles from the airport unless the FAR's or local procedures require otherwise.

4. Airport Advisory Service Provided By An FSS

- a. Airport Advisory Service (AAS) is a service provided by an FSS physically located on an airport which does not have a control tower or where the tower is operated on a part-time basis. The CTAF for FSS's which provide this service will be disseminated in appropriate aeronautical publications.
- b. When communicating with a CTAF FSS, establish two-way communications before transmitting outbound/inbound intentions or information. An inbound aircraft should establish communications approximately 10 miles from the airport, reporting altitude and aircraft type, location relative to the airport, state whether landing or overflight, and request airport advisory. Departing aircraft should state the aircraft type, full identification number, type of flight planned (VFR or IFR) and the planned destination or direction of flight. Report before taxiing on the runway for departure. If communications with a UNICOM are necessary after initial report to FSS, return to FSS frequency for any traffic updates.
- c. A CTAF FSS provides wind direction and velocity, favored or designated runway, altimeter setting, known traffic, notices to airmen, airport taxi routes, airport traffic pattern information, and instrument approach procedures. These elements are varied so as to best serve the current traffic situation. Some airport managers have specified that under certain wind or other conditions, designated runways be used. Pilots should advise the FSS of the runway they intend to use.

CAUTION

All aircraft in the vicinity of the airport may NOT be in communication with the FSS.

5. Information Provided by Aeronautical Advisory Stations (UNICOM)

- a. UNICOM is a non-government air/ground radio communication station which may provide airport information at public use airports where no tower or FSS is available and it is primarily a VHF frequency.
- b. On pilot request, UNICOM stations may provide pilots with weather information, wind direction, the recommended runway, or other necessary information. If the UNICOM frequency is designated as the CTAF, it will be identified in the appropriate aeronautical publications.
- c. If no FSS or UNICOM is available, wind and weather information may be obtainable from nearby controlled airports via Automatic Terminal Information Service (ATIS) or Automated Weather Observing System (AWOS) frequencies.

6. Self-Announce Position And/Or Intentions

- a. Self-announce is a procedure whereby pilots broadcast their position or intended flight activity or ground operation on the designated CTAF. This procedure is used primarily at airports which do not have an FSS on the airport. The self-announce procedure should also be used if a pilot is unable to communicate with the FSS on the designated CTAF. Keep in mind that when communicating on a CTAF or UNICOM frequency, there may not be any response to your transmissions. The self-announce procedures simply alert other aircraft to your presence, and any response from another aircraft or a UNICOM ground station is advisory only.
- b. If an airport has a tower and it is temporarily closed, or operated on a part-time basis and there is no FSS on the airport or the FSS is closed, use the CTAF to self-announce your position or intentions.
- c. Pilots conducting practice instrument approaches should be particularly alert for other aircraft that may be departing in the opposite direction. When conducting any practice approach, regardless of its direction relative to other airport operations, pilots should make announcements on the CTAF as follows:
 - i. Departing the final approach fix inbound (nonprecision approach) or departing the outer marker or fix used in lieu of the outer marker inbound (precision approach).
 - ii. Established on the final approach segment or immediately upon being released by ATC.
 - iii. Upon completion or termination of the approach.
 - iv. Upon executing the missed approach procedure.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER SEVEN

EMERGENCY PROCEDURES

700. INTRODUCTION

Although emergency procedures must be handled IAW NATOPS, special provisions may exist for navigation sorties.

701. MINIMUM SAFE ALTITUDE/ROUTE-ABORT ALTITUDE

1. All VNAV routes will include a Minimum Safe Altitude (MSA) for each leg of the planned route. The MSA will be 500' higher than the highest obstacle (rounded up to the nearest 100' interval) within 10 NM of route centerline. Aircrew experiencing temporary disorientation with regard to navigation will climb to MSA until positive position is regained, climbing at 120 knots while utilizing 1015# power.
2. A Route-Abort Altitude (RAA) will be planned for the entire route of flight. The RAA will be calculated as 1000' above the highest obstacle (rounded to the nearest 100' interval) within 10 NM of route centerline. In the event of total disorientation, inadvertent IMC, or aircraft malfunction, aircraft will immediately climb to RAA at 100 knots while utilizing max available (1315#) power. In case of inadvertent IMC, aircraft will squawk 7700 and notify the controlling agency as soon as conditions permit.

702. LOST AIRCRAFT

“A naval aviator may be temporarily disoriented, but he is never lost.” A cool head is the pilot's best asset should he/she become temporarily disoriented.

1. **Determine the extent of disorientation.** "Anxiety disorientation" can occur even with the pilot exactly on course if his/her "chart-to-ground" technique fails to identify an anticipated landmark and he/she misconstrues it as proof of being lost. When disorientation occurs, the pilot must review his/her progress from his/her last known position and determine the cause and extent of error. Causes include: pilot errors in heading and airspeed control, timing, navigation chart planning; malfunction of instruments or navigation aids; wind; or deviations around weather or enemy defenses.
2. **Check the clock immediately.** Timing may be a factor in determining the extent of disorientation and required correction. Write down the time.
3. **Do not complicate the situation.** Avoid wandering aimlessly while planning what to do next. Immediately upon realizing a problem exists, decide on a temporary plan. Normally, continue flying preplanned headings and times or fly toward a charted known landmark.

4. **Check your fuel state** against the Minimum Fuel **Required** to Continue to complete the route. The disorientation may have caused more problems than just navigation if seriously disoriented; remember the "Five Cs" (confess, climb, communicate, conserve, and comply) before your fuel state becomes a significant factor.
5. **Climb to conserve fuel and to help aid in reorientation.** The pilot should consult the chart and then look outside and attempt to locate the largest landmark possible. This should be a large terrain feature such as a mountain, large lake or coastal feature. Care must be taken to avoid following a hunch or making a decision based on uncertain information.
6. Once reoriented, **correct on-course** using the techniques previously discussed. These procedures will not be possible unless the pilot's chart includes sufficient area to account for possible disorientation. At least 10 miles to either side of the course line is recommended.

| 703. LOST COMMUNICATIONS

Prior to assuming radio failure, troubleshoot your helmet hookups and the radio as you learned in the FAM stage. Check the MSTR ESSL, AUDIO, CONT TRANS, and UHF COMM circuit breakers in; check the ICS volume up and the UHF normal or EMER AUDIO mixer switch on. Also, double-check the selected frequency for transposed numbers and reselect the previously assigned frequencies (using both Manual and Preset). If using the VHF radio, ensure the VHF receive switch is on and the Radio Transmit switch is toggled to "VHF." Attempt contact on UHF Guard (243.0 Manual or Guard position) or VHF Guard 121.5. Finally, attempt contact on UHF Guard using your PRC-90 survival radio.

Once radio failure is confirmed, maintain VMC and comply with procedures listed in the Flight Information Handbook. If electing to return to homefield, conform with local lost comm procedures.

| 704. PRECAUTIONARY EMERGENCY LANDING

Some situations may dictate an unplanned stop at one of the emergency fields you marked on your chart. If possible, communications should be established with the airport, on a not-to-interfere basis with your emergency procedures. (Remember: Aviate, Navigate, Communicate). The rule of thumb for such a call is, "Who you are, where you are, and what you want."

Many small civilian airfields have VHF capability only, so ensure you communicate your intentions on the correct radio. If no communication can be established, pilots are expected to observe other aircraft and conform to the pattern in use. If no other aircraft are observed, then markings such as the segmented circle and wind indicators may be checked to find out runway and pattern direction. These markings can be checked, time permitting, while circling the airport at a safe height. A segmented circle is large enough so that a pilot can see it easily from pattern altitude as he/she flies over the airport. The L-shaped marker on the outside of the segmented circle corresponds to the base and final legs of the airport traffic pattern.

7-2 EMERGENCY PROCEDURES

705. NIGHT ENGINE FAILURES

Comply with the NATOPS Flight Manual, section V and the NATOPS Pocket Checklist.

1. **Engine Failure at or above 2000 feet AGL** - If a restart is not attempted or unsuccessful, and a lighted runway is not immediately available, abandoning the aircraft is highly recommended. Review the NATOPS Flight Manual, section V and the NATOPS Pocket Checklist.

2. **Engine Failure below 2000 feet AGL** - If the engine fails below 2000 feet AGL (minimum recommended night bailout altitude), abandoning the aircraft is not recommended. If a lighted runway is not immediately available and your engine fails below 2000 feet AGL, NATOPS does not specify what action should be taken. Therefore, expeditious headwork will dictate what action should be taken. If the engine failure occurs at approximately 2000 feet AGL, the decision to bail out should be made quickly to allow sufficient time for egress. In any case, **DO NOT SECURE THE BATTERY**.

NOTE

Remember, airspeed can be exchanged for altitude.

706. NIGHT ELECTRICAL POWER FAILURE

Electrical power is of great importance at night because of the need for interior and exterior lighting, two-way communications, navigational equipment, flight instruments, landing gear and flaps. An aircraft with no electrical power is virtually invisible at night. In this case, it is only the pilot who can maintain his/her own aircraft separation. For our purposes, we will discuss only two types of electrical failure: generator failure and complete electrical failure.

1. **Generator Failure** - If the generator becomes inoperative the indicators will be a flashing master caution light, a generator annunciator light, an ammeter discharging, a voltmeter reading 24 volts or less, and slight dimming of cockpit lights when the voltage drops from 28 volts to below 24 volts. When the generator light comes on, execute the generator failure procedures in section V of the NATOPS Flight Manual. If you are unable to restore generator power, then the primary consideration is to conserve battery power. The following procedures shall apply to the appropriate situation.

- a. **Landing Pattern** - If unable to reset the generator while in the landing pattern, make your next approach to a full stop. Time permitting, advise tower of your difficulty.
- b. **NAV Route** - If unable to reset the generator, take out your flashlight and turn it on. Reduce all nonessential electrical loads using the acronym '**N-TV LAST**' (**N**ACWS, **T**ACAN, **V**OR, **L**anding Lights, **A**ir-conditioning, **S**trobes, and **T**ransponder). If applicable, turn off the GPS in addition to the above items; however, consideration should be given to leaving it on as a means to navigate for a short period of time. Proceed direct to the nearest suitable airfield. If flight greater than 10 minutes is

anticipated, maintain VFR and secure your battery until you are approximately 15 miles from the field. Once within 15 miles, contact the appropriate agency (Approach, FSS, Tower) with the nature of your emergency. Request them to coordinate an emergency landing to the duty runway. Execute a PEL to the duty runway in accordance with NATOPS, current SOP and the Contact FTI. (To conserve battery power, recommend the gear be hand-cranked down.)

NOTE

Remember, with the exterior lights off, only you can maintain aircraft separation, since you will be invisible to other aircraft. Also, even with both battery and generator off, your pitot static instruments (airspeed indicator, altimeter, VSI) and wet compass will still function. Engine instruments that will also function are ITT, N1, and prop RPM. The remaining electrical systems including the attitude gyro, caution panel, RMI, turn and bank, torque, fuel flow, fuel quantity, oil pressure and oil temperature indicators will not operate.

2. **Complete Electrical Failure** - An immediate failure of the entire electrical system is rare. Most complete electrical failures occur due to a generator failure and the subsequent exhaustion of battery power.
 - a. **Landing Pattern** - If a complete electrical failure occurs in the landing pattern, recheck gear handle down and make your next approach to a full stop landing. Without exterior lighting, only the pilot can maintain aircraft separation. Be sure to maintain proper interval. Be sure to taxi clear of the duty runway on a lighted taxiway, shut down the aircraft and stand by with your flashlight to mark your position for emergency crews and taxiing aircraft. Do not taxi without lights; shut down your aircraft when clear of the duty runway.
 - b. **NAV Route** - If a complete electrical failure occurs while on the nav route, you should first turn on your flashlight in order to monitor your pitot-static instruments. Secure all unnecessary electrical equipment as in the generator failure. When established comfortably in level flight, turn toward the nearest suitable airfield. Overfly the airfield and determine the duty runway. Use your emergency radio to broadcast in the blind that you are over the field with a complete electrical failure and will be making an emergency landing.

Execute a PEL to the duty runway in accordance with current SOP, NATOPS, and Contact FTI. With a total electrical failure, the gear position indicators will indicate unsafe even when the gear is full down. Proceed with your pattern as in the lost comm procedures and execute a full stop landing. Remember, the torquemeter is inoperative during a complete electrical failure so make sure you use nose attitude to maintain airspeed and power for rate of descent. If you receive a flare from the wheels watch, or waveoff lights from tower, wave off, and make sure the gear are fully cranked down, remain clear of other aircraft, and attempt another approach. When landing

is elected, anticipate the possible collapse of landing gear upon touchdown and execute appropriate NATOPS procedures. Taxi clear of the duty runway and shut down. Mark your position with a flashlight.

NOTE

The torquemeter is inoperative with a complete electrical failure. AT 100 KIAS and the gear down, a VSI indication of 1000-1200 FPM rate of descent will equate to approximately 200 ft-lbs of torque.

THIS PAGE INTENTIONALLY LEFT BLANK

APPENDIX A
SAMPLE VOICE REPORTS

The following are examples of voice reports encountered during VNAV flights. As always, if in doubt of the “right” words, use the format: **WHO** you are, **WHERE** you are, and **WHAT** you want.

INITIAL CALL TO GROUND

"TALLAHASSEE GROUND, NAVY (CALL SIGN), TAXI VFR TO NORTH WHITING WITH " _____ " INFORMATION."

INITIAL CALL TO TOWER

"DOTHAN TOWER, NAVY (CALL SIGN), TAKEOFF, VFR TO THE EAST, 2500."

INITIAL CONTACT WITH FSS WHEN AIRBORNE

The term "initial contact" (or "initial call-up") means the first radio call you make to a given ATC facility. As per the AIM (§4-44a), in order to expedite communications, state the frequency being used and the aircraft location during initial call-up.

“GAINESVILLE RADIO, NAVY (CALL SIGN) ON 255.4, OVER TALLAHASSEE.”

ACTIVATING VFR FLIGHT PLAN

"MACON RADIO, NAVY (CALL SIGN), ON 255.4, OVER VALDOSTA."

RESPONSE FROM FSS: "(CALL SIGN), MACON RADIO, GO AHEAD."

YOU RESPOND WITH: "MACON RADIO, (CALL SIGN), I WOULD LIKE YOU TO ACTIVATE THE FIRST LEG OF MY VFR FLIGHT PLAN FROM VALDOSTA REGIONAL TO NORTH WHITING AT 1304 ZULU."

RESPONSE FROM FSS: "(CALL SIGN), I HAVE YOUR VFR FLIGHT PLAN ACTIVATED AT 1305 ZULU."

It is a good practice to give ATC a courtesy call prior to transmitting a long message. This gives the controller a chance to focus his/her attention on your call. The likelihood of the controller missing part of the call is greatly reduced.

"TALLAHASSEE APPROACH, NAVY (CALL SIGN)."

"NAVY (CALL SIGN), TALLAHASSEE APPROACH, GO AHEAD."

"NAVY (CALL SIGN) IS A SINGLE T-34, 2500 FEET, VFR, 20 MILES NORTH OF TALLAHASSEE, FOR LANDING AT TALLAHASSEE WITH " _____ " INFORMATION."

AFTER HAND-OFF TO TOWER

"TALLAHASSEE TOWER, NAVY (CALL SIGN) IS ENTERING A LEFT BASE FOR RUNWAY 27, FULL STOP."

APPENDIX B

OPERATIONS AT NONTOWERED AIRPORTS

The following appendix is a condensed version of "Safety Advisor: Operations and Proficiency No. 3" copyrighted 1997 by the Aircraft Owners and Pilot's Association (AOPA). It expands on the information presented in Chapter Six.

Nontowered airports are uncontrolled airfields not served by operating air traffic control towers, and includes most of the airports in the United States. At present, over 12,000 airports are nontowered, compared to approximately 400 that have FAA towers. Millions of safe operations in all types of aircraft are conducted at non-towered airports in a variety of weather conditions. It works because pilots put safety first and use commonly known procedures.

There are several sources of information that explain Official FAA recommended procedures at non-towered airports and you should review them in detail to gain a full understanding. FAR 91.113 cites basic right-of-way rules and FAR 91.126 and 91.127 establish traffic-flow rules at non-towered airports. The AIM expands on these regulations. Together, these documents define procedures for non-towered flight operations.

Regulations and procedures can't cover every conceivable situation, and the FAA has wisely avoided imposing rigid operating regulations at non-towered airports. What is appropriate at one airport may not work at the next. Some airports have special operating rules due to obstacles or hazards, while other rules may promote a smooth and efficient flow of traffic or keep aircraft from overflying unsympathetic airport neighbors. But, overall, the general procedures that apply for controlled and uncontrolled airfields exist for one main purpose....TRAFFIC SEPARATION.

At military OLF's and civilian fields with military Letters of Agreement, you entered the VFR landing pattern via the Break Maneuver. This maneuver is the exception, not the norm at civilian non-towered airports. Therefore, this appendix is dedicated to familiarizing you with the standard operating procedures at non-towered airports.

1. The Traffic Pattern

Safe flight operation begins with knowing the structure of a standard traffic pattern. A standard pattern is comprised of six legs to create a logical, safe flow at a non-towered airport (Figure B-1).

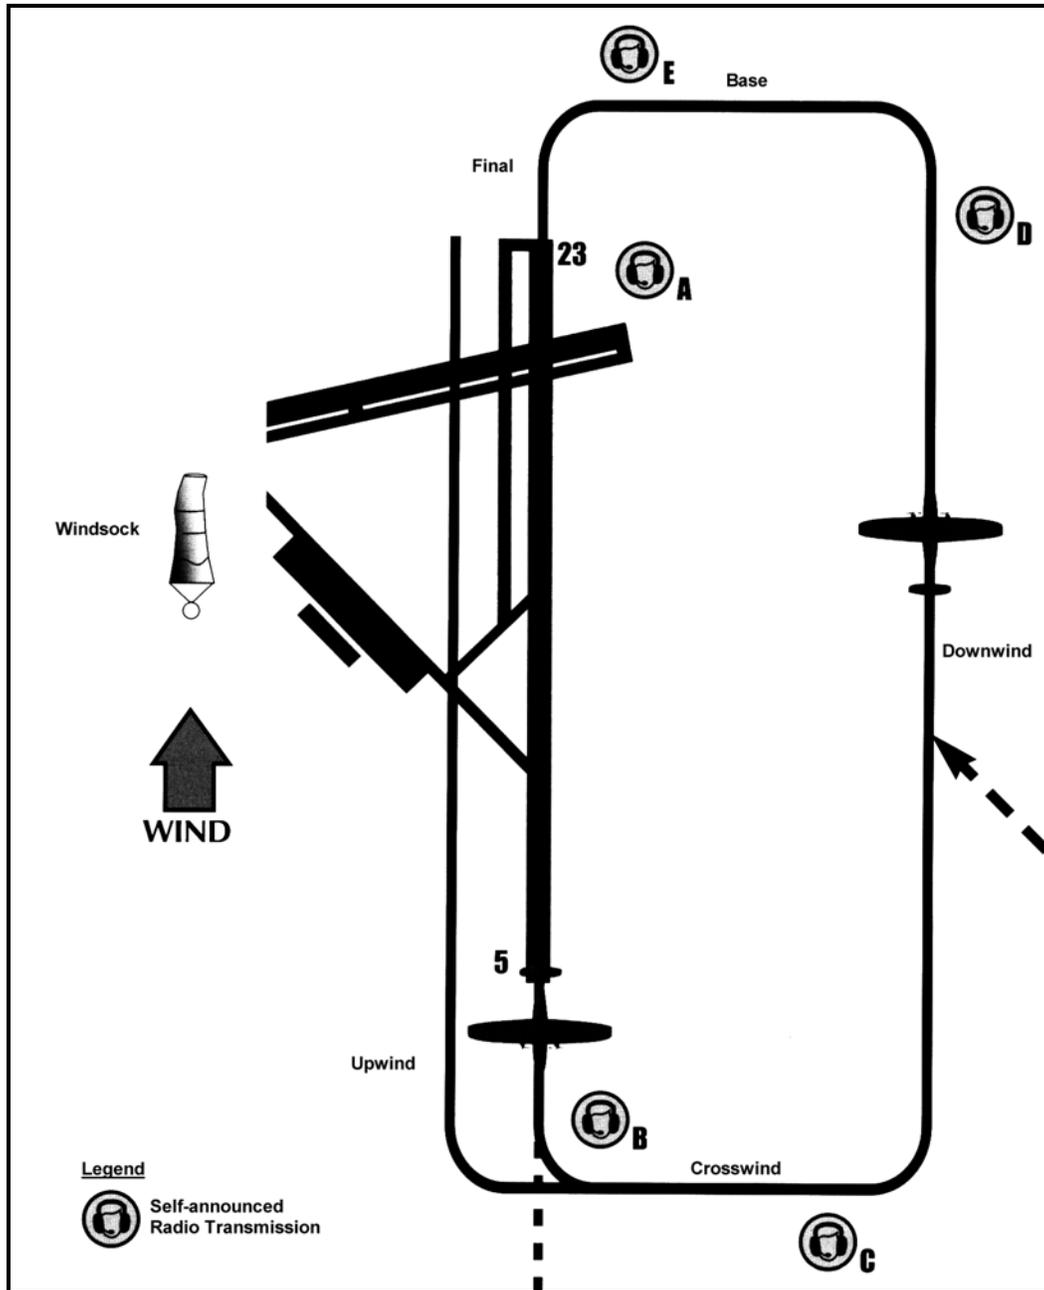


Figure B-1 Flying Pattern

2. Let's take a trip around the pattern. We'll begin in the runup area at the end of Runway 23 at Frederick, Maryland (Figure B-1). The Takeoff Checklist is complete down to the last three items and our aircraft is positioned at the hold short line, where we can see the downwind, base, and final legs. The radio is tuned to the CTAF frequency, and we've heard traffic in the pattern.
 - a. Scanning the pattern for traffic, we see a Cessna on downwind and determine that we have enough room to safely take off.

B-2 OPERATIONS AT NONTOWERED AIRPORTS

- b. When communicating on a CTAF frequency, you must self-announce your intentions to other aircraft. This broadcast is for information purposes only and does not require a response from anyone. Multiple airports may be using the same CTAF frequency, so it is important that you begin and end each transmission with the name of the airport at which you are operating.
- c. Announce - **“Frederick traffic, Navy 6E123 departing Runway Two-Three, remaining in the pattern, Frederick.”** 
- d. Scan for traffic once again in both directions, taxi onto the runway completing the takeoff checklist and take off according to FAM FTI procedures.
3. Complete the Departure Leg by:
- a. Climbing on the extended runway centerline to within 300 feet of traffic pattern altitude. Since Frederick airport is 303 feet MSL, our traffic pattern will be 1800 feet MSL (1500 feet AGL for turbine powered aircraft).
- b. When 300 feet below pattern altitude, look left and right to be sure there is no traffic conflict and announce - **“Frederick traffic, Navy 6E123 turning crosswind Runway Two-Three, Frederick.”** 
4. The Crosswind Leg will usually be a left standard traffic pattern unless the airport requires right traffic. Continue climb to pattern altitude (1500 feet AGL) and level off as per the FAM FTI.
- a. Continue on crosswind until approximately 1/2 mile from the extended runway centerline. Civilian traffic patterns are rectangular in shape so try to conform to their traffic pattern. To help visualize this distance, many general aviation runways are about 1 mile long, so use half the runway length as a guide for the turn to downwind.
- b. As you approach the checkpoint, scan for traffic on downwind and announce - **“Frederick traffic, Navy 6E123 turning left downwind Runway Two-Three, Frederick.”** 
5. Establish yourself on the Downwind Leg and complete the landing checklist down to flaps. Be especially vigilant by scanning and listening for traffic entering the pattern on the downwind leg. This could occur anywhere on downwind but will usually happen at midfield.
- a. Continue on downwind and begin the turn to the base leg to achieve a 1/2 to 3/4 mile final. As a general rule, begin your turn to base when the runway is 45° behind your wingtip.
- b. Approaching the checkpoint, scan for conflicting traffic, reduce your power and lower your flaps as required, and announce - **“Frederick traffic, Navy 6E123 turning left base Runway Two-Three, Frederick.”** 

6. The Base Leg is flown perpendicular to the runway centerline.
 - a. Finish the Landing Checklist and adjust power to continue a normal descent rate. Scan and listen for traffic on an opposite base leg or an extended final. Also, scan the runway for traffic that may be taking off in the opposite way of your final approach! Remember, at non-towered airports, there is no such thing as a duty runway.
 - b. Approaching the checkpoint for final, announce - **“Frederick traffic, Navy 6E123 turning final, full stop Runway Two-Three, Frederick.”**
7. On the Final Leg, continue a normal descent and recheck proper configuration (“Gear down, negative paddles”).
 - a. Continue scanning and listening for conflicting traffic on the runway. After rollout, expeditiously exit the runway at the nearest taxiway.
 - b. Announce - **“Frederick traffic, Navy 6E123 clear of Runway Two-three, Frederick.”**



Departing the Pattern

1. Before taxiing onto the runway, listen to the CTAF and scan the entire airport traffic area. Announce - **“Frederick traffic, Navy 6E123 departing Runway Two-Three to the west, Frederick.”**
2. After takeoff, climb on the extended runway centerline to within 300 feet of pattern altitude. At this point, you can continue straight ahead or make a 45° heading change in the direction of the landing pattern (to the left in this case).
3. If you will be departing opposite the traffic pattern, wait until you are at least 500 feet above pattern altitude before making your turn, and announce - **“Frederick traffic, Navy 6E123 departing the pattern Runway Two-Three, right turn westbound, Frederick.”**

Arriving at a Non-towered Airport

1. Approximately 15 miles out, tune the appropriate VHF frequency for ATIS, AWOS or ASOS and copy the weather, if available. Then, tune the appropriate CTAF frequency and begin listening for traffic in the landing pattern at your destination airport.
2. If automated weather services are unavailable, tune in the appropriate FSS (if located at the field), UNICOM or CTAF frequency and request airport advisories. Announce - **“Hammond traffic, Navy 3E123 is a T-34 10 miles to the east, request airport advisories, Hammond.”** Listen for and respond to any advisories given and begin setting up for a normal entry to the landing pattern.

3. If automated weather services are unavailable and there is no response to an advisory call on FSS, UNICOM or CTAF, overfly the field 500 feet above pattern altitude (turbine powered aircraft at 1500 feet AGL, so overfly at 2000 feet AGL). Locate the segmented circle if available for information on wind direction, landing direction and pattern direction.
4. When well clear of the pattern (approximately two miles), descend to pattern altitude and turn inbound to the airport. Perform the landing checklist and enter the pattern at midfield at a 45° angle of intercept. Announce - **“Hammond traffic, Navy 3E123 entering left downwind Runway One-Eight, Hammond.”**
5. The remaining traffic pattern and appropriate radio calls are the same as discussed previously.

THIS PAGE INTENTIONALLY LEFT BLANK