

NAVAL AIR TRAINING COMMAND



NAS CORPUS CHRISTI, TEXAS

CNATRA P-1288 (Rev 10-12)

FLIGHT TRAINING INSTRUCTION



TACTICAL FORMATION T-45 STRIKE

2012



DEPARTMENT OF THE NAVY
CHIEF OF NAVAL AIR TRAINING
250 LEXINGTON BLVD SUITE 102
CORPUS CHRISTI TX 78419-5041

CNATRA P-1288
N715
9 Nov 12

CNATRA P-1288 (REV 10-12)

Subj: FLIGHT TRAINING INSTRUCTION, TACTICAL FORMATION T-45
STRIKE

1. CNATRA P-1288 (Rev 10-12) PAT, "Flight Training Instruction, Tactical Formation T-45 STRIKE" is issued for information, standardization of instruction, and guidance to all flight instructors and Student Military Aviators in the Naval Air Training Command.
2. This publication is an explanatory aid to the T-45 STRIKE curriculum and shall be the authority for the execution of all flight procedures and maneuvers herein contained.
3. Recommendations for changes shall be submitted via CNATRA TCR form 1550/19 per CNATRAINST 1550.6E.
4. CNATRA P-1288 (Rev 07-09) PAT is hereby cancelled and superseded.


C. HOLLINGSWORTH
Chief of Staff


Distribution:
CNATRA Website

FLIGHT TRAINING INSTRUCTION

FOR

TACTICAL FORMATION

T-45

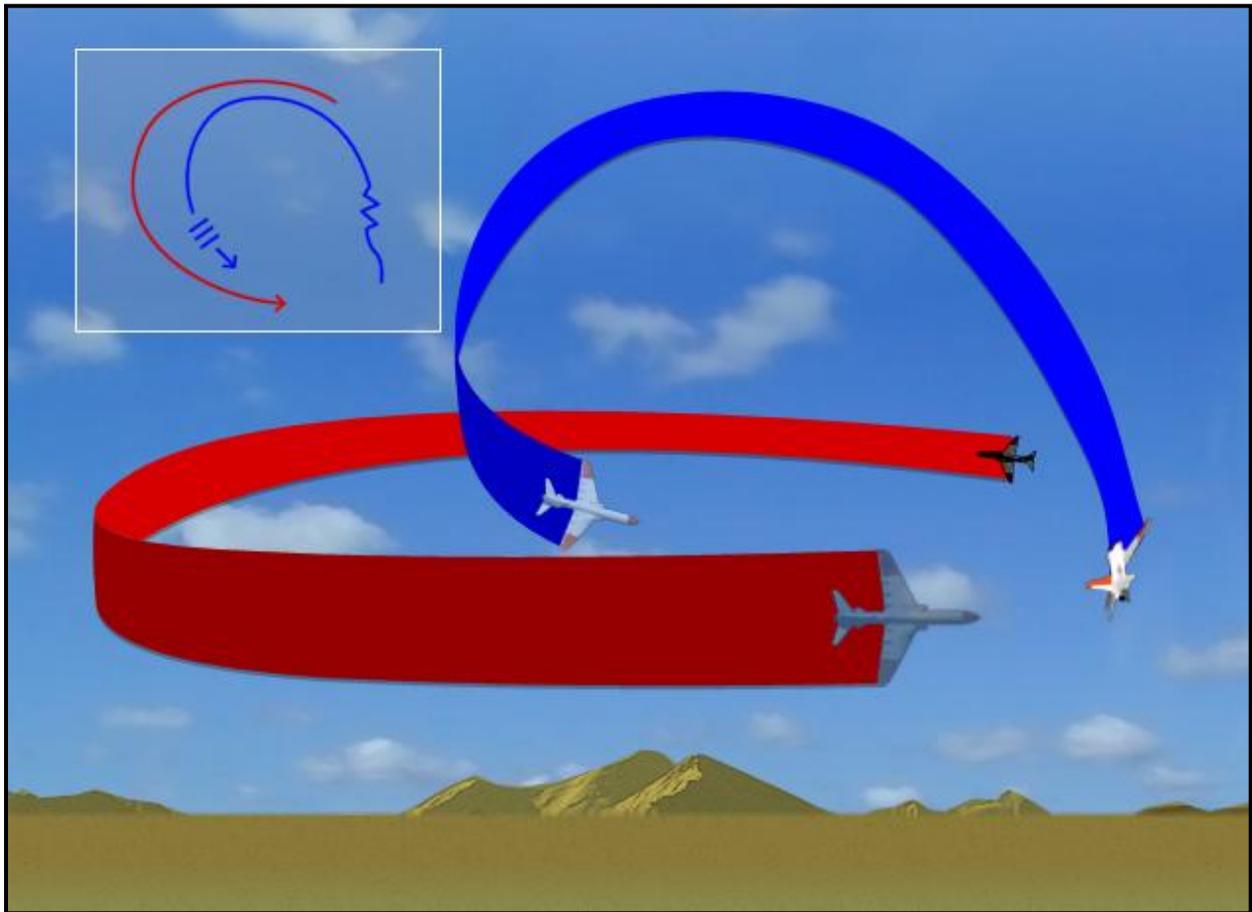

HOW TO USE THIS FTI

This Flight Training Instruction (FTI) is your textbook for the Tactical Formation (TACFORM) stage of your Jet Pilot Training and is the source document for all procedures related to TACFORM. It includes suggested techniques for performing each maneuver and making corrections.

This FTI focuses on three major areas relating to your TACFORM flights: background knowledge, specific briefing items, and flight procedures. Read and understand your NATOPS and the CONCEPTS & DEFINITIONS (C&D) portion of this FTI prior to studying the follow-on sections related to flight procedures. In general this FTI is laid out in a manner that will roughly outline a TACFORM flight brief in a building block approach. ***It is imperative that you reference the current TACSOP for additional guidance while studying this FTI.***

Use your FTI to prepare for and to review following the Lecture and CAI lessons, as well as syllabus flights. Know all of the procedures ahead of time so you will be prepared to ask questions of your instructors in the brief. This will allow you to focus on where the real learning will take place: in the jet!

Note that this FTI also contains information on emergencies related to this stage. This section of the FTI amplifies but does not replace NATOPS. The end of stage exam will be based on course objectives. Complete the required reading prior to each lesson or lecture.

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:

Original...0...10 Oct 08 (this will be the date issued)

Revision 1...0...10 Aug 09

Revision 2...0...09 Nov 12

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 74 CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No
COVER	0		
LETTER	0		
iii – x	0		
1-1 – 1-18	0		
2-1	0		
2-2 (blank)	0		
3-1 – 3-5	0		
3-6 (blank)	0		
4-1 – 4-4	0		
5-1 – 5-14	0		
6-1 – 6-14	0		
7-1 – 7-2	0		
A-1	0		
A-2 (blank)	0		
B-1 – B-2	0		

INTERIM CHANGE SUMMARY

The following Changes have been previously incorporated in this manual:

CHANGE NUMBER	REMARKS/PURPOSE

The following Interim Changes have been incorporated in this Change/Revision:

INTERIM CHANGE NUMBER	REMARKS/PURPOSE	ENTERED BY	DATE

TABLE OF CONTENTS

LIST OF EFFECTIVE PAGES	v
INTERIM CHANGE SUMMARY	vi
TABLE OF CONTENTS	vii
TABLE OF FIGURES	x
CHAPTER ONE - TACTICAL FORMATION	1-1
100. INTRODUCTION	1-1
101. CONCEPTS AND DEFINITIONS.....	1-1
CHAPTER TWO - ADMIN	2-1
200. INTRODUCTION	2-1
201. PREFLIGHT/START/MARSHAL/TAXI/TAKEOFF	2-1
202. INITIAL RENDEZVOUS	2-1
203. TACTICAL REJOIN	2-1
CHAPTER THREE - TACADMIN (TACTICAL ADMINISTRATION)	3-1
300. INTRODUCTION	3-1
301. CALL SIGNS.....	3-1
302. WEAPONS SYSTEMS	3-1
303. COMBAT CHECKLIST.....	3-2
304. PUSHING TO SPREAD.....	3-2
305. G-WARM.....	3-3
306. FENCE IN.....	3-4
307. “KNOCK-IT-OFF” (KIO)	3-4
308. FENCE OUT.....	3-5
CHAPTER FOUR - BASIC POSITION-KEEPING AND CORRECTIONS	4-1
400. INTRODUCTION	4-1
401. MAINTAINING POSITION	4-1
402. POSITION CORRECTIONS.....	4-1
403. CORRECTING FOR A SUCKED POSITION	4-2
404. CORRECTING FOR AN ACUTE POSITION	4-2
405. ABEAM DISTANCE CORRECTIONS.....	4-4
406. ALTITUDE CORRECTIONS	4-4
CHAPTER FIVE - TACFORM PROCEDURES	5-1
500. INTRODUCTION	5-1
501. CHECK TURNS	5-1
502. CHECK TURNS INTO WING.....	5-1
503. CHECK TURNS AWAY FROM WING	5-3
504. SHACKLES	5-3
505. OFF-HEADING SHACKLES	5-5
506. CRUISE TURNS	5-6
507. CRUISE TURNS INTO WING.....	5-7

508.	CRUISE TURNS AWAY FROM WING.....	5-8
509.	CRUISE TURN CORRECTIONS.....	5-8
510.	TAC TURNS.....	5-9
511.	TAC TURNS INTO WING.....	5-9
512.	TAC TURNS AWAY FROM WING.....	5-10
513.	IN-PLACE TURNS.....	5-10
514.	IN-PLACE TURNS INTO WING.....	5-11
515.	IN-PLACE TURNS AWAY FROM WING.....	5-11
516.	CROSS TURNS.....	5-11
517.	TAIL CHASE EXERCISE.....	5-13

CHAPTER SIX - ADVANCED TACFORM PROCEDURES AND MANEUVERING 6-1

600.	INTRODUCTION.....	6-1
601.	FORCED COCKPIT LOADING.....	6-1
602.	RANDOM TACFORM MANEUVERING.....	6-1
603.	OFFENSIVE COMBAT SPREAD.....	6-2
604.	UNCALLED TURNS.....	6-3
605.	LOOSE DEUCE EXERCISE.....	6-3
606.	HIGH COVER.....	6-5
607.	LOW COVER.....	6-5
608.	TRANSITIONING BETWEEN HIGH AND LOW COVER.....	6-5
609.	REVERSALS.....	6-5
610.	REVERSALS IN LOW COVER.....	6-6
611.	REVERSALS IN HIGH COVER.....	6-6
612.	ROLE SWAPS.....	6-6
613.	ROLE SWAP WITH WING IN HIGH COVER.....	6-7
614.	ROLE SWAP WITH WING IN LOW COVER.....	6-7
615.	GUNSIGHT TRACKING EXERCISE.....	6-8
616.	GST ENTRY AND EXECUTION.....	6-8
617.	GETTING TO THE CONTROL ZONE AND ATTACK WINDOW ENTRY.....	6-11
618.	MISSING THE CONTROL ZONE.....	6-11
619.	STAYING OFFENSIVE.....	6-11
620.	MISALIGNED TURN CIRCLES.....	6-11
621.	EXCESSIVE RANGE OR STUCK IN LAG.....	6-12
622.	EXCESSIVE CLOSURE OR TOO LITTLE RANGE.....	6-12
623.	METHODS FOR TAKING GUNSHOTS.....	6-12

CHAPTER SEVEN - SAFETY/EMERGENCY SITUATIONS 7-1

700.	EMERGENCY.....	7-1
701.	RELATIVE MOTION/EXCESSIVE CLOSURE.....	7-1
702.	SPATIAL AWARENESS.....	7-1
703.	LOST SIGHT/LOOKOUT.....	7-2
704.	AIRSICKNESS.....	7-2

APPENDIX A - GLOSSARY	A-1
A100. GLOSSARY – N/A.....	A-1
APPENDIX B - FOLLOW-ON BFM DISCUSSION	B-1
B100. FOLLOW-ON BFM DISCUSSION	B-1

TABLE OF FIGURES

Figure 1-1	Shorthand Symbology	1-2
Figure 1-2	Defensive Combat Spread	1-3
Figure 1-3	Offensive Combat Spread	1-4
Figure 1-4	Lookout Responsibilities	1-5
Figure 1-5	Angle-Off-Tail (AOT).....	1-7
Figure 1-6	Pursuit Curves In-Plane.....	1-9
Figure 1-7	Control Zone.....	1-10
Figure 1-8	Attack Window.....	1-11
Figure 1-9	Misaligned Turn Circles.....	1-12
Figure 1-10	Low Yo-Yo.....	1-13
Figure 1-11	High Yo-Yo.....	1-13
Figure 1-12	Flight Path Overshoot.....	1-14
Figure 1-13	In-Close Overshoot	1-14
Figure 1-14	3/9-Line Overshoot.....	1-15
Figure 1-15	CNATRA Weapons Envelope.....	1-16
Figure 3-1	G-Warm (Into Wing).....	3-3
Figure 4-1	Acute Correction.....	4-4
Figure 5-1	Check Turn Into Wing	5-2
Figure 5-2	Shackle	5-4
Figure 5-3	Off-Heading Shackle.....	5-6
Figure 5-4	Cruise Turn into Wing	5-7
Figure 5-5	Cruise Turn Away from Wing.....	5-8
Figure 5-6	Tac Turn into Wing	5-9
Figure 5-7	In-Place Turn into Wing	5-10
Figure 5-8	Cross Turn.....	5-12
Figure 6-1	Loose Deuce Entry	6-4
Figure 6-2	Set-up for GST	6-9
Figure 6-3	The Gun Reticle and Associated Ranges	6-14

CHAPTER ONE TACTICAL FORMATION

100. INTRODUCTION

The Navy's tactical doctrine for Combat has at its heart a section of Fighters operating in Combat Spread. This FTI will attempt to teach you the basics of TACFORM flying, which is fundamentally how sections maneuver while in Combat Spread. The procedures in these pages will give you fundamentals of how to maneuver the aircraft. Each TACFORM instructor might have slightly different techniques for keeping position or making corrections. You should draw from their experience and techniques to find what works for you. The FTI is a starting point and you should strive to know it to the maximum extent possible. You will gain more knowledge about TACFORM from the instructors you fly with than can be written in any FTI.

101. CONCEPTS AND DEFINITIONS

Communications:

As in basic formation flights, an ATC call sign will be used for ATC purposes. As a reminder, use Lead's call sign if talking with ATC regardless of who is in the Lead. Use your actual call sign (side number) when talking with Tower. Intra flight communications become a little more 'fleet style' at this stage in our training, and Wing will be expected to keep up. To start with, all acknowledgements of Lead's comm will reference your full tactical call sign (i.e., "Hammer 12"). In close formation, Lead may back up frequency switches with hand signals or simply look to Wing for a head nod affirming that he/she heard Lead transmitting on the new frequency.

Environmentals:

All flight members shall assess and record the environmentals (sun azimuth and elevation, cloud decks in operating area, and winds at altitude in operating area). These should be drawn on the white board post flight by the student in preparation for debrief.

Fighter:

The term Fighter in this FTI refers to either aircraft that is a member of the friendly section.

Flight Lead, Wingman and their Responsibilities:

The Flight Lead (or simply Lead) is the Fighter responsible for all navigation, external comm, and mission/training objectives, and is the default for all tactical decisions. The wingman (Wing) is responsible for *maintaining sight* and *staying in position*. Both Fighters are responsible for good lookout doctrine, internal communications, and flight safety.

Bandit:

The term Bandit refers to a threat that may or may not be employing maneuvers/weapons in a hostile manner.

Bogey:

A Bogey is an unidentified aircraft or an aircraft of known type but unknown origin.

Shorthand Symbology:

The figures in this FTI use shorthand symbology which is common to all air-to-air engagements, and will be utilized in your follow-on Basic Fighter Maneuvering (BFM) training. The horizontal tick marks represent a descent, and the zig zag “peaks” represent a climb. The numbers of marks represent a magnitude of descent or climb, as appropriate. Each line or “peak” represents approximately 20 degrees of nose position.

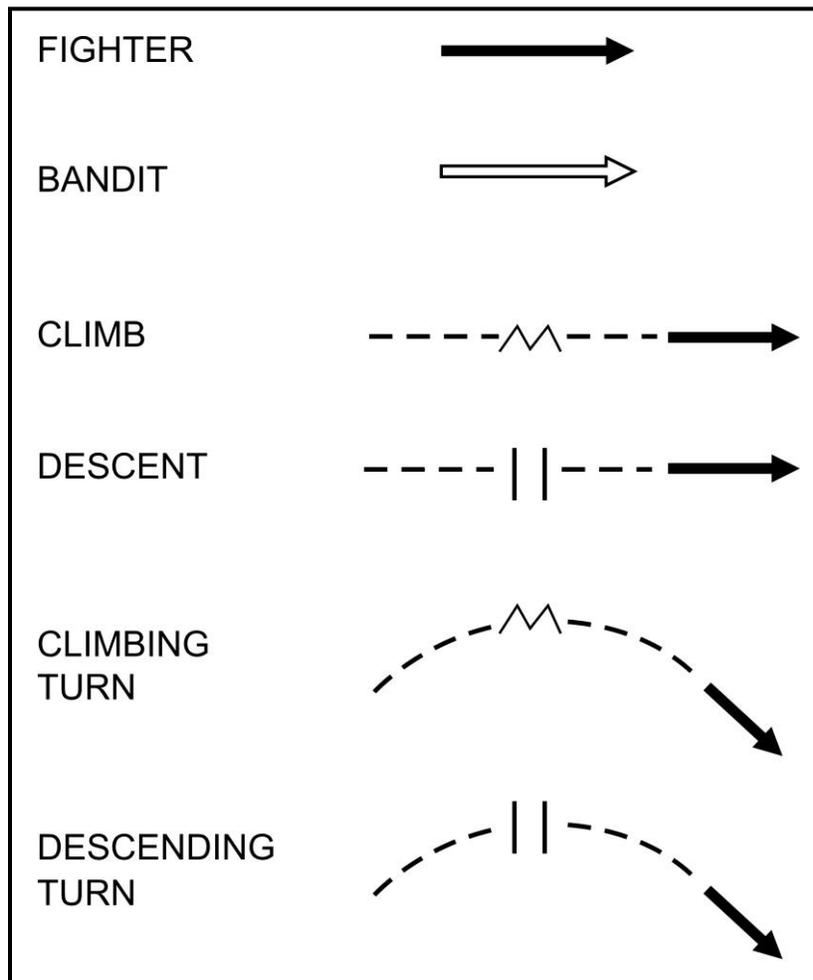


Figure 1-1 Shorthand Symbology

Defensive Combat Spread (DCS):

Defensive refers to the potential of a section to be reacting defensively to threats from any axis. Wing will fly on Lead's 90-degree bearing line (abeam) at a distance of .8 to 1.0 nm, and 1,000 ft stepped up from Lead's altitude (Lead at 15,000 ft/Wing at 16,000 ft during your syllabus TACFORM flights) at 300 KIAS. The two Fighters are spaced far enough abeam to still be maneuverable, but allowing aircrew the ability to devote more time to cockpit tasks and visual lookout. Realize that although Wing will fly a stepped-up DCS position in training here, the option to fly stepped down may be used later in the fleet for various reasons.

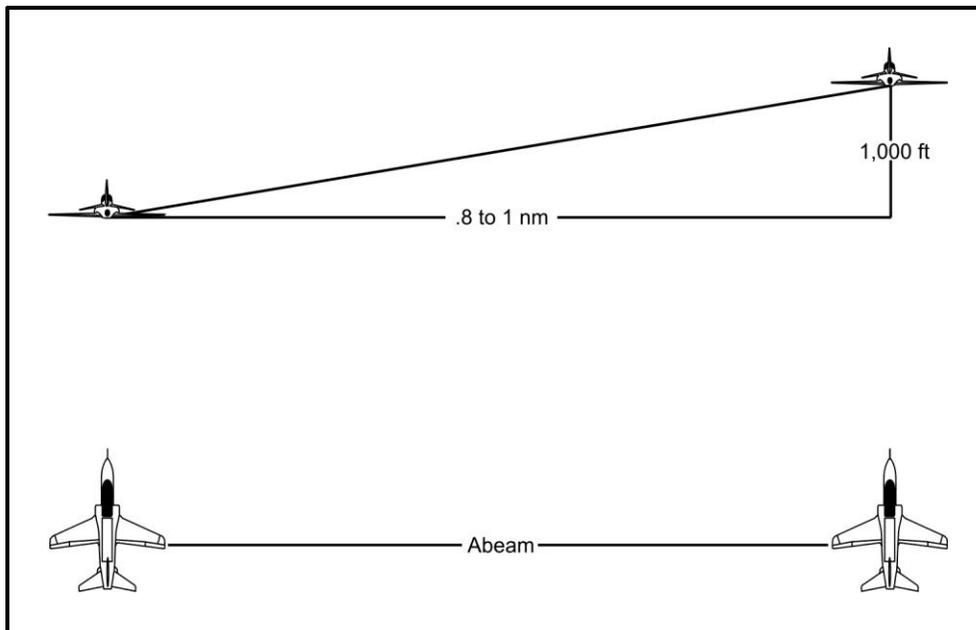


Figure 1-2 Defensive Combat Spread

Offensive Combat Spread (OCS):

Offensive refers to a section employing offensively to known threats from a specific axis. Wing will fly abeam, 1.2 to 1.5 nm, up to 3,000 ft *above or below* Lead's altitude at 300 KIAS. The combination of these parameters may be varied based upon environmental factors (sun angle, atmospheric, terrain, etc.) so the Fighters can remain mutually supportive, and hopefully diminish the ability of the Bandit to gain sight of either or both of the Fighters.

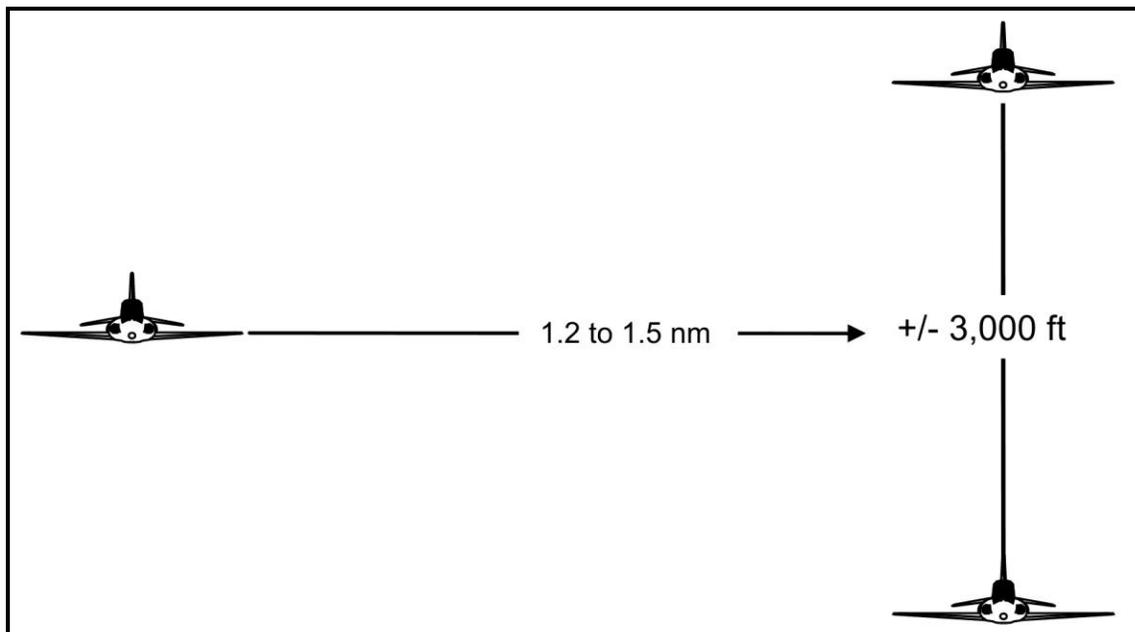


Figure 1-3 Offensive Combat Spread

“Visual/Tally” and “Blind/No Joy”:

‘Visual’ and ‘Blind’ refer to whether or not you can see a friendly aircraft. ‘Tally’ and ‘No Joy’ mean the same thing respectively, but are applied to bandits or bogeys.

Lookout Doctrine:

An effective lookout doctrine is the cornerstone of mutual support, requiring each pilot to develop and employ a thorough visual scan pattern inside and outside of the cockpit. Coordinated scan patterns between Lead and Wingman in Combat Spread ensure maximum visual coverage, while allowing sufficient reaction time to engage a threat. The threshold of visual detection depends on numerous factors, such as aspect, environmental conditions, etc. Starting with your eyeball as your primary sensor (in the T-45 anyway), focus on a distant point (cloud formation, terrain feature, etc.) to give your eyes a depth of vision from one mile out to infinity. This technique greatly aids in detection of potential threats at distance before they get close enough to become a factor.

Lead and Wing’s primary scan region starts 30 degrees outside of the formation, sweeping through the formation to the aft visual limit for roughly 75% of the time. Visual search beyond 30 degrees outside the formation is a secondary responsibility for both Lead and Wing and requires the pilot’s attention roughly 25% of the time. Don’t limit this scan to just the horizon, but include scans both above and below the horizon such that the combined scan of both Fighters covers as much of the 3-dimensional airspace surrounding the section as possible. Finally, be disciplined with your scan pattern because searching random points in the sky tends to result in poor detection rates.

1-4 TACTICAL FORMATION

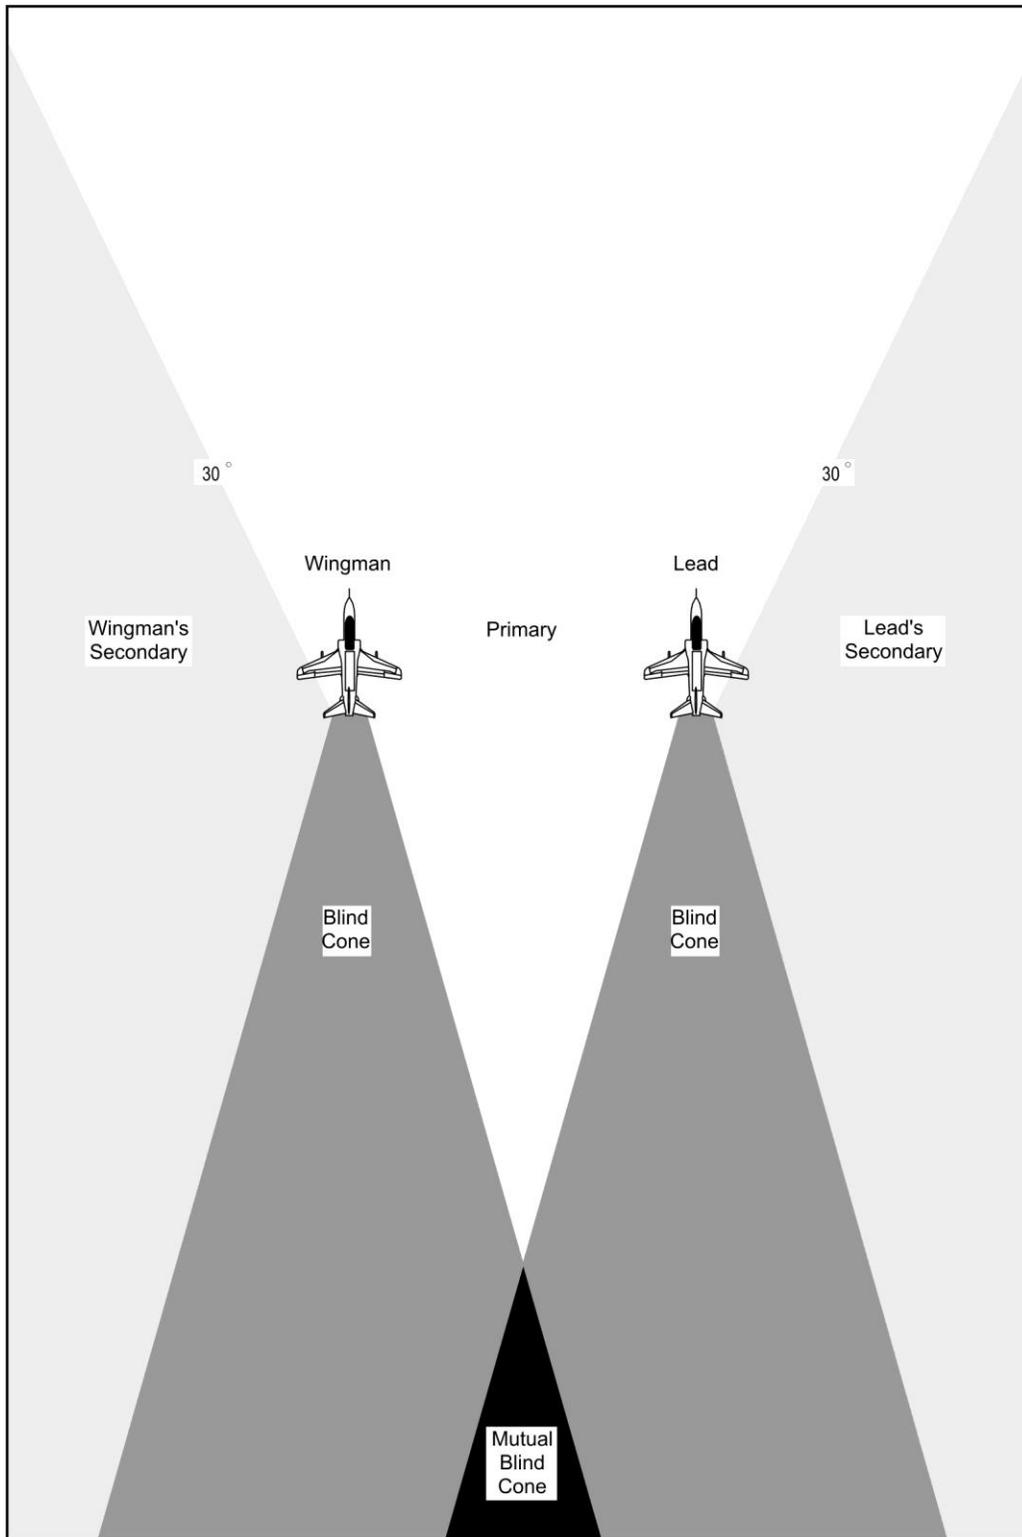


Figure 1-4 Lookout Responsibilities

Directly behind each Fighter is a small unseen area (to that specific pilot) referred to as the 'blind cone'; we are in section so that each Fighter's scan includes the other Fighter's blind cone, so as to cover each other's 'six-o'clock.' This scan pattern does however result in a mutual blind area formed at the intersection of each aircraft's visual limit, between 1.5 and 2 nm astern, in between the section, depending on lateral separation between Fighter aircraft.

As the above discussion goes to mutual support via your eyeballs, good lookout doctrine doesn't do any good if members of the flight are not *communicating* what they see or do not see. You will use clock codes and degrees above or below the horizon when referencing other aircraft. By practicing making these calls, it will come easier in the jet when your brain is task saturated.

Engaging Turns:

An Engaging Turn is an energy-sustaining turn performed at 14 units AOA, 300 KIAS, and is the most common turn you will use during TACFORM. It allows the section to be maneuvered quickly without a large energy penalty so as to maintain airspeed while conserving fuel.

Hard Turns:

A Hard Turn is a compromise between turn performance and energy depletion. Hard turns are flown at 17 units AOA (nibble of buffet), and 300 KIAS, and are used when the section is not defensive, but desires to expeditiously orient itself to a threat.

Break Turns:

A Break Turn is a maximum performance turn executed at 19-21 units AOA (roughly the maximum lift a T-45 can generate), but not to exceed 7.33 Gs (T-45 G-limit above 5,000 ft). A break turn gives the best instantaneous turn performance, but at a large energy penalty. A break turn may be used offensively to gain a shot opportunity, or defensively to defeat an incoming missile or a Bandit's firing solution. It is important to note max-performing the aircraft does not mean to use erratic or jerky aircraft control inputs. You will probably encounter pitch buck in the T-45; if so, ease off the G a little bit, and then smoothly reapply G as required until within the rate airspeed band.

Significant Airspeeds:

The T-45's Best Sustained Turn Rate Airspeed Band is 240-330 KIAS. At the lower end of the rate band the aircraft yields a small advantage in turn rate (0.5° higher at 240 KIAS, compared to 330 KIAS). The T-45's ability to trade airspeed for angles (energy excursion) is however reduced below 300 KIAS; at slower airspeeds the aircraft becomes more difficult to handle as it is more prone to stall/pitch buck. *Initially, targeting the upper portion of the rate band (300-330 KIAS), until an energy excursion is necessary, is prudent in most cases.*

Corner Airspeed is 410 KIAS. This airspeed yields the aircraft's best instantaneous turn performance, but also sustains the highest airspeed bleed rates.

Engaged Fighter:

The Engaged Fighter is either the *most defensive* or the *most offensive* Fighter, in that order. If you are about to get shot, you are by default engaged defensively. If you find yourself within visual range with a valid shot on a Bandit, or are maneuvering for a shot and no other Fighter is engaged defensively with that Bandit, you are engaged offensively. Anyone in the flight can designate the engaged role (including the Bandit) based upon who is attempting to be engaged.

Free Fighter:

The Free Fighter is the Fighter that is not engaged and, having achieved separation from the Engaged Fighter, is responsible for flight deconfliction.

Lift Vector:

The Lift Vector is an imaginary line that extends upward (relative to your body), and perpendicular to the plane of your wings, regardless of pitch or roll angle. In the T-45, the lift vector is visualized by looking straight up between the canopy MDC cords. If you roll inverted your lift vector would be pointing toward the ground. In a pure vertical climb, your lift vector would be on the horizon.

Angle-Off-Tail (AOT):

Angle-Off-Tail is a descriptive position relative to an aircraft's longitudinal axis, with 0 degrees being directly behind the aircraft's tail, and 180 degrees being directly ahead of the aircraft's nose. Intermediate angles between 0 and 180 degrees are not specific to just the top, bottom or sides of an aircraft; any AOT can be described at any one point around an aircraft that lies on a cone of that angle.

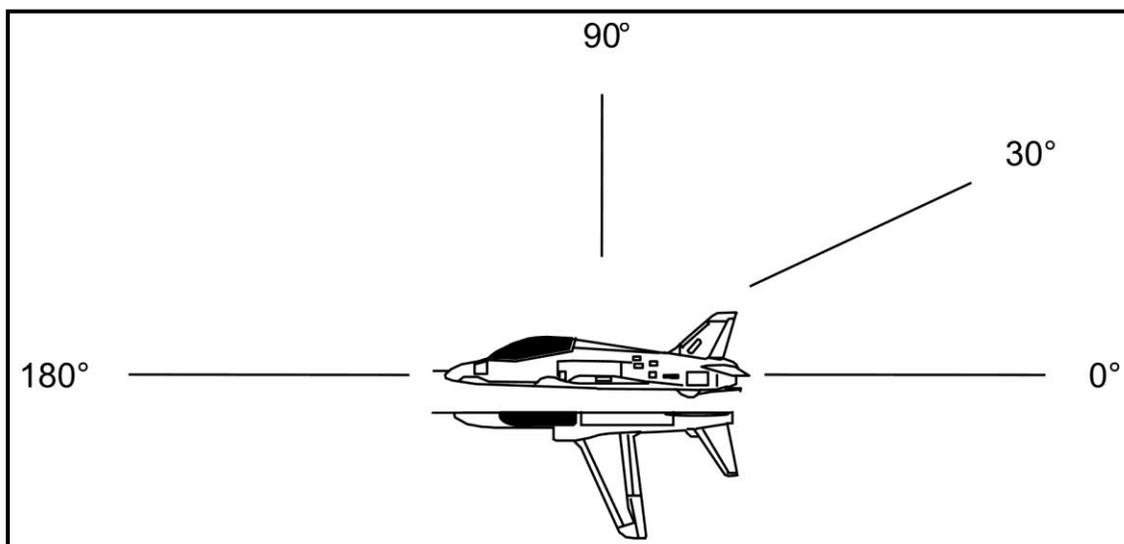


Figure 1-5 Angle-Off-Tail (AOT)

Aspect:

Aspect quantifies (in general terms) where your aircraft is positioned relative to another aircraft, such as the Bandit, and is generally defined by three separate ranges of AOT with respect to the other aircraft. Low aspect arises when you are looking, more or less, at another aircraft's tail (0-45 deg AOT); medium aspect as we approach the other aircraft's planform or wing line (45-90 deg AOT); and high aspect is forward of the other aircraft's planform or wing line (90-180 deg AOT). Aspect change describes how an object appears to pivot in our canopy.

Line of Sight (LOS):

Line of sight is just what it sounds like. It's the line from a pilot's eyeball to something that he/she may be looking at. 'LOS rate' describes how an object appears to move across your canopy.

Closure:

Closure is the rate at which separation between two aircraft is decreasing. A negative closure would describe a separation that is increasing, or opening.

Pursuit Geometry:

The concept of pursuit geometry between attacker and defender is basic to every tactical maneuver. The type of pursuit can be determined by the attacker's nose position when in the same plane of motion as the defender, and lift vector placement when not in the same plane of motion. There are three basic types of pursuit:

1. Lead pursuit: used to decrease nose-to-tail separation, or solve for a gun solution, often at the cost of generating high AOT and closure.
2. Pure pursuit: used primarily to gain an IR missile lock. Pure pursuit is achieved by putting your nose (velocity vector) right on the bandit. While not as rapid as lead pursuit, pure pursuit can be used to close nose-to-tail distance if the pursuing Fighter is at least co-air speed with the Bandit.
3. Lag pursuit: used to maintain or increase nose-to-tail separation. Lag pursuit allows the Fighter to maintain his energy while keeping AOT and closure under control.

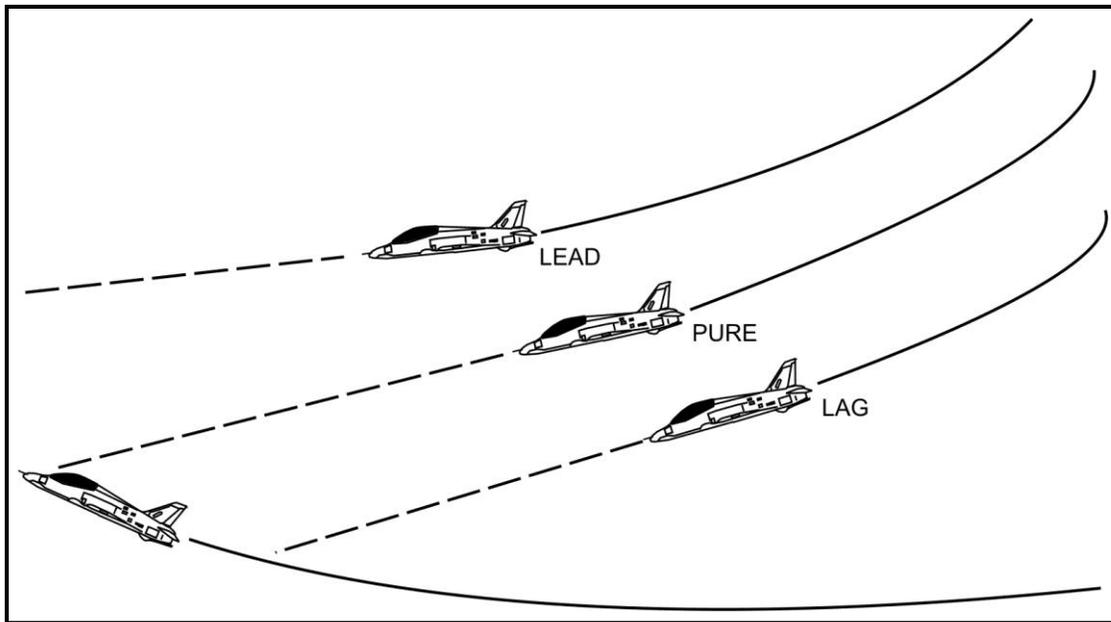


Figure 1-6 Pursuit Curves In-Plane

We can expand the concept of pursuit geometry from the two-dimensional discussion above, to three dimensions. For example, an attacker that is flying in a different plane of motion can orient his *lift vector* ahead of, on, or behind a defender to achieve many of the same goals as would be achieved with nose position if flying in the same plane of motion.

Turn Circle:

A Turn Circle is an imaginary two-dimensional circle that an aircraft is scribing through the sky, defined by the aircraft's performance parameters at any instance in time. In a horizontal turn, the turn circle is, more or less, just a circle. In the vertical plane, such as an aircraft in a constant-G loop, gravity will shrink an aircraft's turn radius at the top and widen its turn radius at the bottom.

Bubble:

The Bubble is a three-dimensional representation of an aircraft's turn circle in a max performance turn; the Bubble should not be confused with the 500 ft bubble that Wing needs to maintain from Lead at all times during dynamic maneuvering. The average Bubble of the T-45 is represented by a circle with a radius of 3,000 ft. You will draw it on the white board prior to your brief along with the Attack Window, Control Zone, Post, and the Bandit.

Post:

The Post is the center point of a turn circle. This is the same Post we encounter during TACAN rendezvous, but is not restricted to turn circles in the horizontal plane. The Post does not define pursuit curves, but is used in the discussion of the Bubble, Attack Window entry, etc.

Control Zone (CZ):

The Control Zone is a truncated cone extending from 2000 ft to 4000 ft behind the defending aircraft, and along its flight path. The volume is defined along this length expanding from 20 degrees wide at the front, to 40 degrees wide at the back. The practical application of the Control Zone is such that should an attacking aircraft arrive within a defending aircraft's Control Zone, ***with range, angles and closure under control***, the defending aircraft has little chance of forcing the attacking aircraft out of the Control Zone.

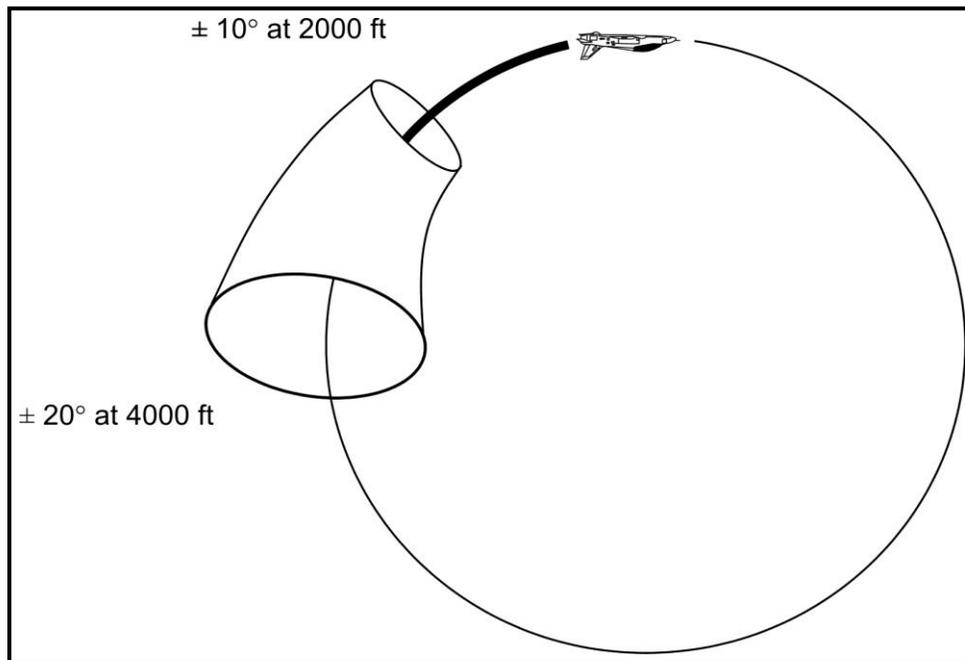


Figure 1-7 Control Zone

Attack Window:

The Attack Window is the point in the sky where, if an attacking aircraft executes a max performance turn, it will arrive in the defensive aircraft's Control Zone (with the aforementioned range, angles and closure under control). *The most useful cue for the Attack Window Entry is a sudden decrease in the Bandit's aspect change, accompanied by a sudden increase in the Bandit's LOS rate.* In practical terms, the Bandit's aircraft appears to stop pivoting and begins to rapidly move aft in your canopy.

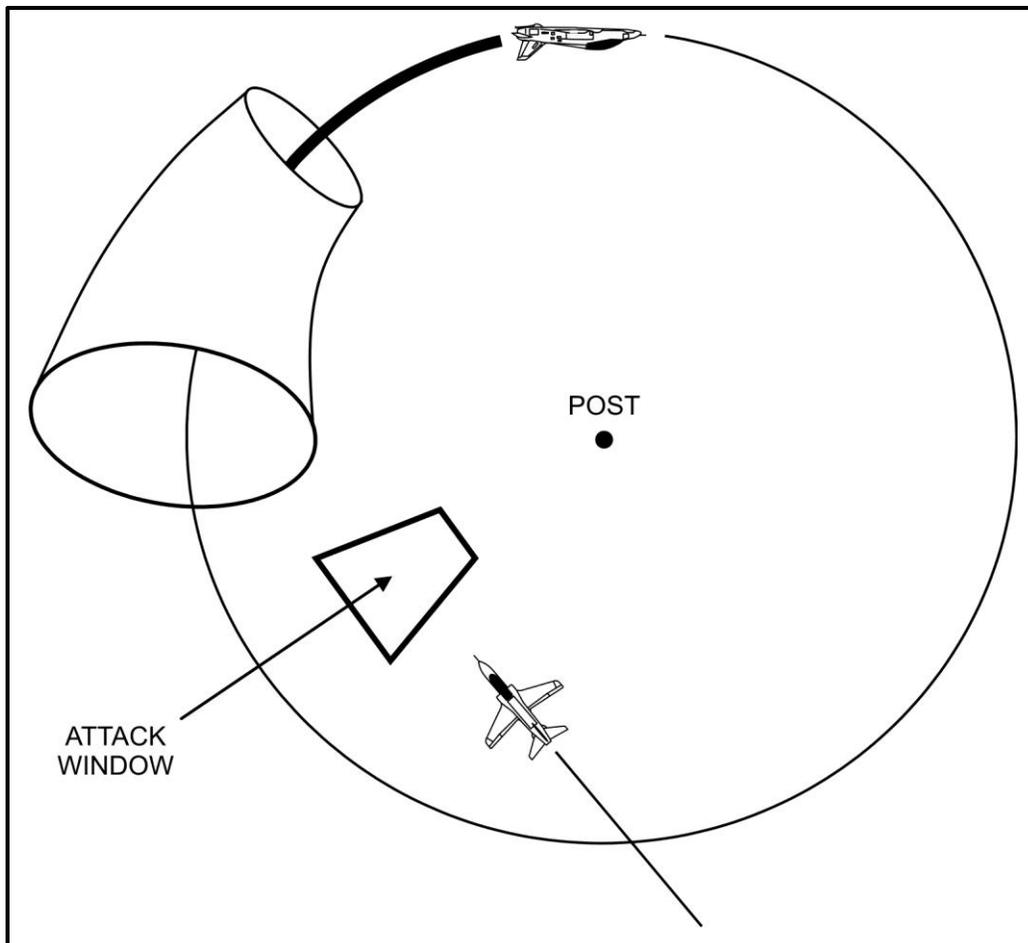


Figure 1-8 Attack Window

Misaligned Turn Circles (MATC):

MATCs are created due to the fact that each aircraft's bubble is displaced over a different geographic point in space. Given the same exact turn performance, the geometry of MATCs will enable an attacker's nose to eventually come to bear on the defender through pure geometry without having to perform an energy excursion.

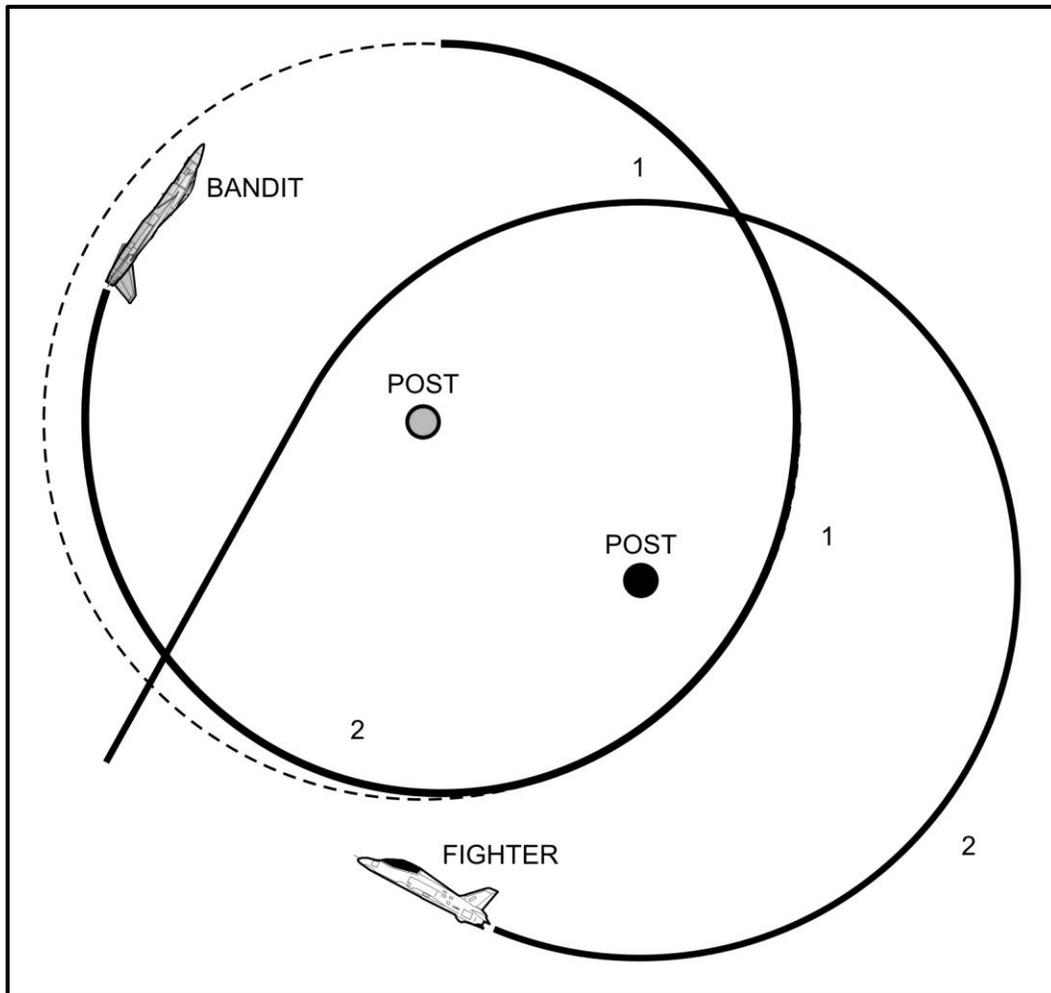


Figure 1-9 Misaligned Turn Circles

Low Yo-Yo

The Low Yo-Yo is a nose-low (and possibly out-of-plane) maneuver used to decrease nose-to-tail separation.

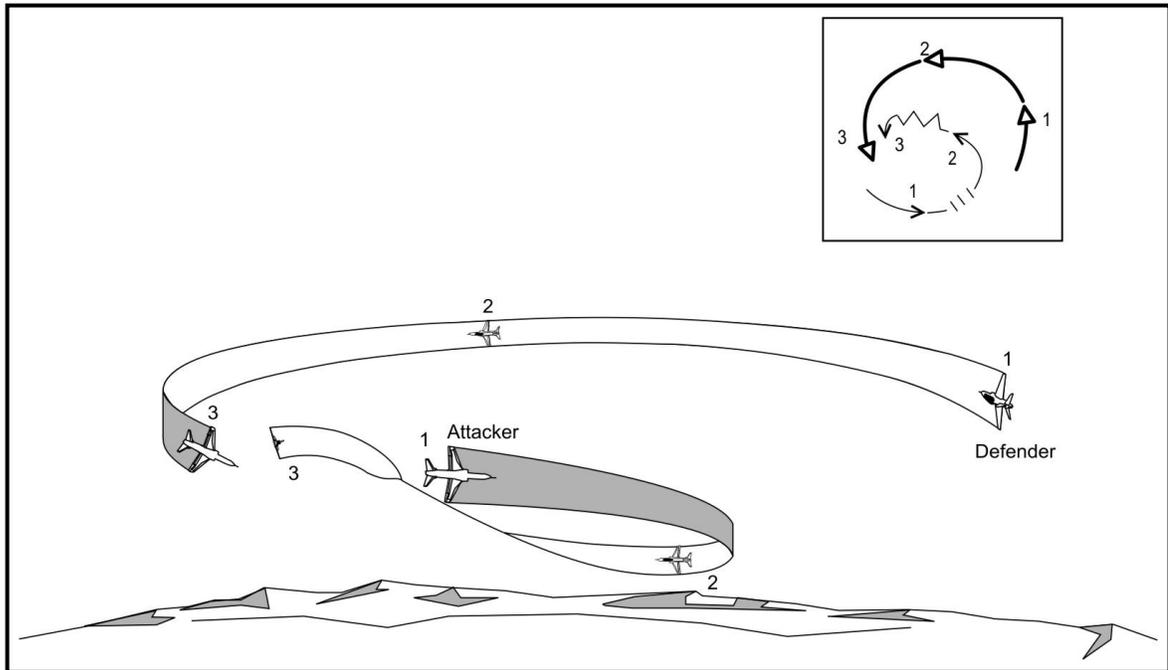


Figure 1-10 Low Yo-Yo

High Yo-Yo

The High Yo-Yo is a nose-high (and again, possibly out-of-plane) maneuver to slow or stop closure and/or increase nose-to-tail separation.

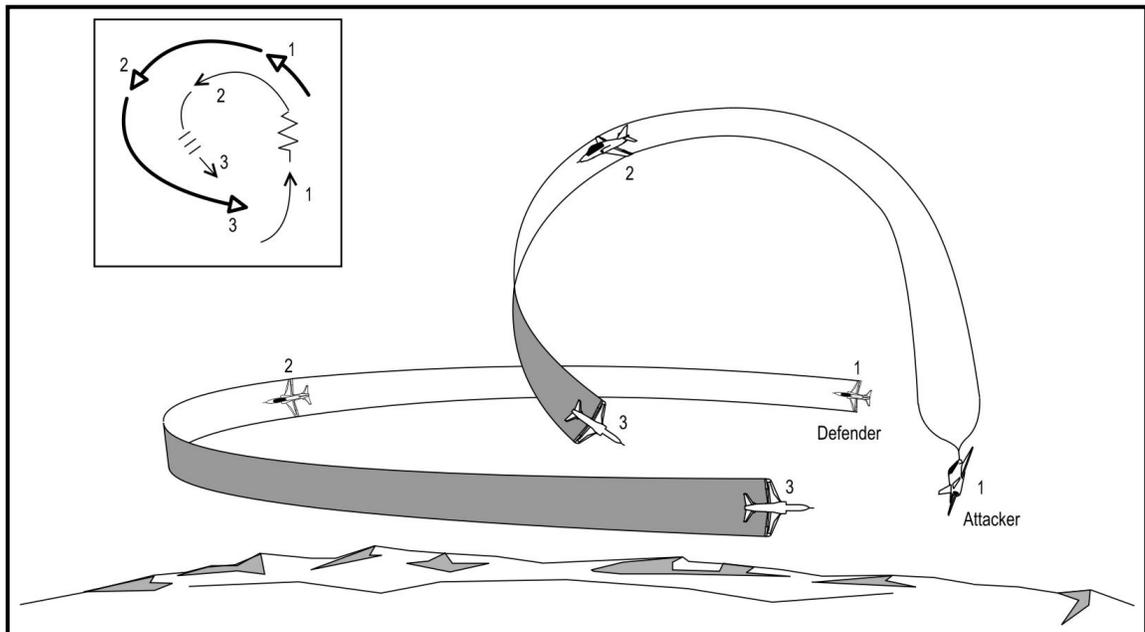


Figure 1-11 High Yo-Yo

Three Overshoots:

1. Flight path overshoot – flying through the adversary's flight path. Ensure the flight path overshoot occurs within or aft of the confines of the CZ. This will deny a reversal opportunity.

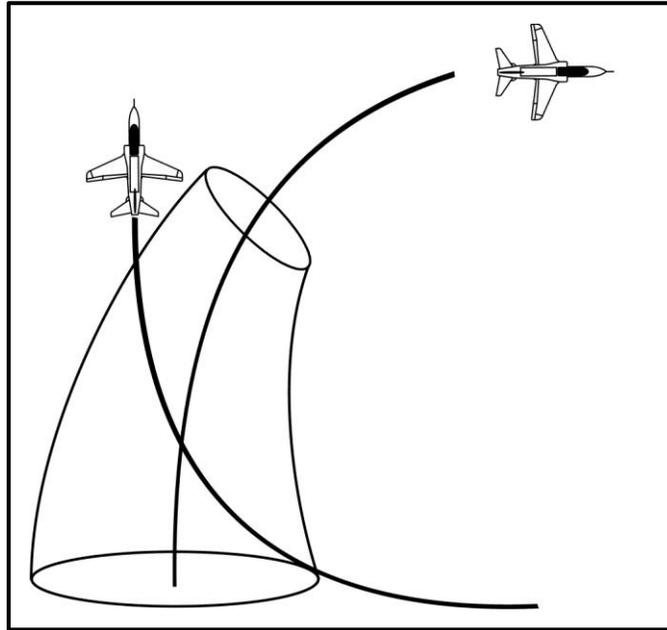


Figure 1-12 Flight Path Overshoot

2. In-close overshoot – a flight path overshoot that occurs inside the near portion of the defender's CZ, within 2,000 ft aft of the defender.

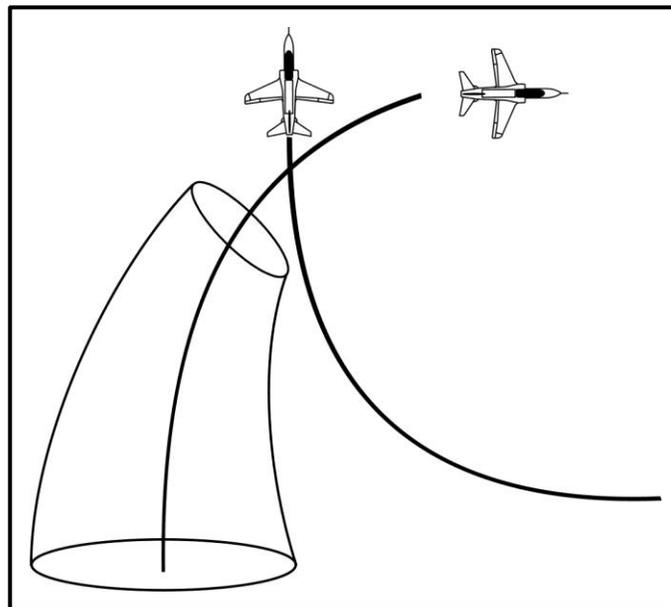


Figure 1-13 In-Close Overshoot

3. 3/9-line overshoot – an overshoot of the defender's 3/9-line that results in a positional role reversal (i.e. passing from behind the adversary to in front of him.)

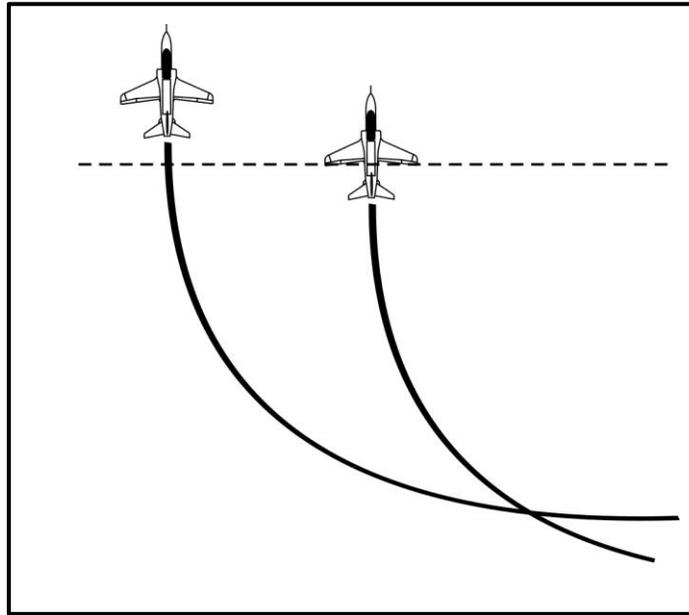


Figure 1-14 3/9-Line Overshoot

CNATRA Weapons Envelope

A weapons envelope is a graphical depiction of the limits of a particular weapon, centered on the target. A weapons envelope is at best a rule of thumb taking into account shooter and target airspeed, altitude, G, and weapon capability. Firing from within the envelope greatly increases the Probability of Kill (P_k). The CNATRA Weapons Envelope approximates both an infrared (IR) seeking (Fox-2) AIM-9 Sidewinder missile, and the 20 mm Vulcan cannon. Valid shots will require meeting appropriate wickets. For an IR Missile shot to be valid, it has to be taken with the defender in the HUD FOV, and the Shooter within the CNATRA Sidewinder Envelope. For a Tracking Gun Shot to be valid, it has to occur with the shooter in the Tracking Gun Envelope, and the trigger pulled with the pipper on the target. For a Snap Gun Shot to be valid, it has to occur with the shooter in the Snap Gun Envelope, trigger pulled early (>1 sec. prior) to establish bullets downrange at target distance, and the target must pass through the pipper.

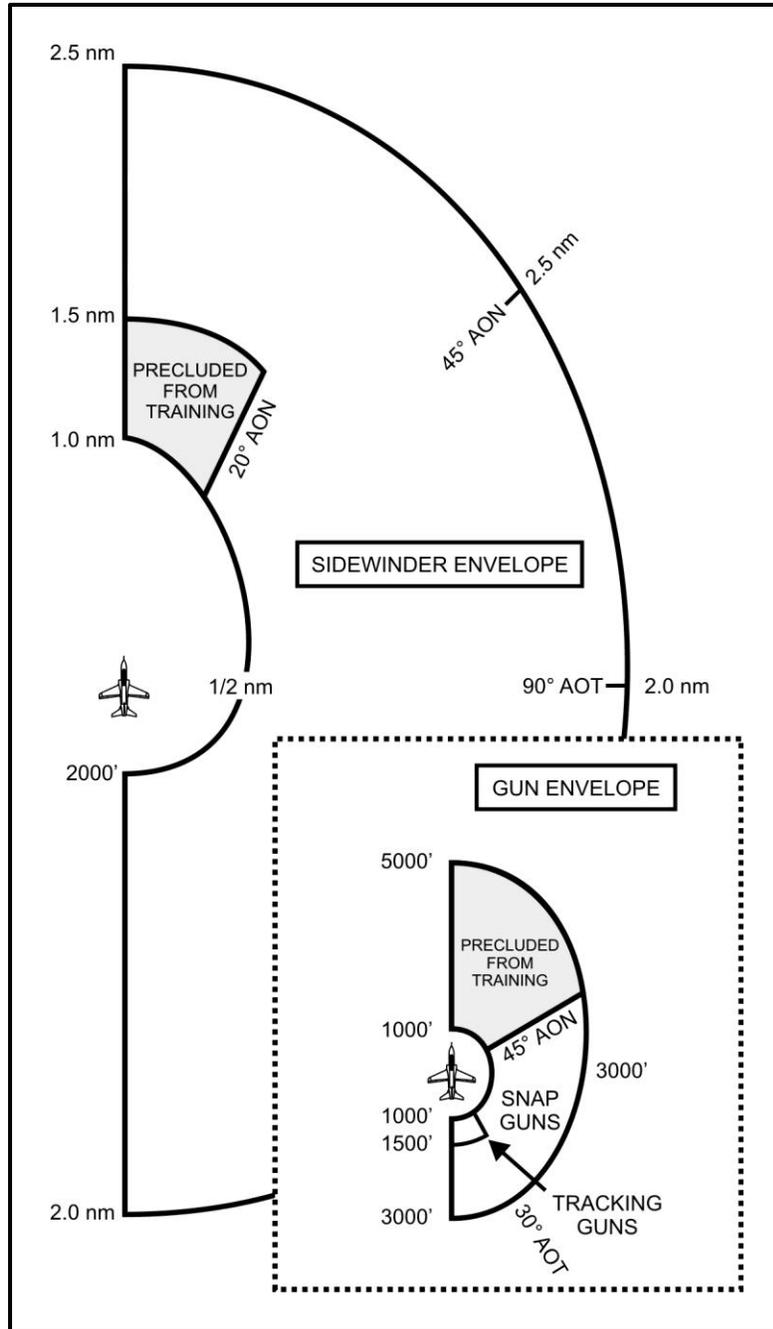


Figure 1-15 CNATRA Weapons Envelope

“Fence(d) In/Out”:

FENCE is an acronym for *F*ire control, *E*CM (Electronic Countermeasures), *N*avigation, *C*ommunication, *E*mitters. To FENCE In means that administrative functions (to include G-warm) and setting of cockpit switchology have been completed prior to entering the combat area, and/or tactical portion of the flight; FENCE(d) Out means just the opposite, weapons switchology has been returned to a non-employment mode, and you are ready to return to a non-tactical portion of the flight.

Yardstick:

Yardstick is the term for air-to-air (A/A) TACAN ranging. Yardstick gives DME ranging to the nearest aircraft transmitting 63 channels apart from the TACAN channel you have in your system. For example, 29X A/A gives ranging for an aircraft with 92X A/A. This is usually assigned in the brief, but may be modified as required in flight. You will only have it displayed in the HUD if TACAN is boxed.

PADS:

PADS is an acronym for the starting parameters of an engagement or maneuver: *P*osition, *A*ltitude, *D*istance, *S*peed.

OPS CHECKS (Fuel and G):

This is a call initiated by the Lead and echoed by the Wingman after the ‘Fenced In/Out’ call and after every KIO stating the current fuel state and “good G” if within limits (fuel state in thousands of pounds, alibis by exception). If G is not within limits, say the actual max G. Do not delay *aviating* and *navigating* your jet back to Spread just to *communicate* your ‘fuel and G’ call.

“Speed and Angels”:

This is a call initiated by Lead and echoed by Wing when in position (that is, on your PADS) for the next maneuver set and it *implies that you are visual*. Lead should initiate this call when he feels you are in a good position. If Lead calls it and you are not in position yet, call “standby.” Being in position is being within +/- 200 ft, +/- 10 kts, and +/- .1 nm. Reference the TACSOP for execution. The maneuver will not begin until all aircraft have called Speed and Angels.

“Pipper On, Tracking”/“Pipper Off”:

Due to the low AOT of Tracking shots, closure is much easier to control, and you may find yourself able to hold the ‘pipper’ (HUD gun reticle) on the target for long periods of time. Keep in mind that you will only have between 6 and 9 seconds worth of ammunition in the gun. A two second burst at most is recommended for each shot. With the pipper on and the trigger depressed call “pipper on, tracking....” As you pull the pipper off for whatever reason, call “pipper off.”

“Trigger Down”:

“Trigger down” is used in conjunction with an attempted Snap Gun shot where you are unable to hold the piper on the target due to high track crossing rates. Pull the trigger as the target reaches the canopy bow and call “Trigger down.”

“Snap”:

The “snap” call is made when the shooter assesses the bullets are at target range (e.g. as the target passes through the reticle), and is followed by the assessment of where the piper actually was as it passed the target. If you assess that the bullet would have impacted the target, a “looks good” call would be appropriate following the “snap” call. It also implies that you are off the trigger. If you assess your shot did not hit your target, again make an assessment to follow the “snap” call. Examples of the full call could include “Trigger down...Snap...looks good” or “Trigger down...Snap...miss low.”

“Knock It Off” (KIO):

This is a call made by anyone in the flight to end an engaged maneuvering set (eg Tail Chase, Gunsight Tracking, or Loose Deuce). The KIO call is acknowledged by Lead, then by Wing. The KIO procedures are described in detail in the TACTICAL ADMINISTRATION section. ***Disciplined KIO comm and procedures are paramount for safety as the post-KIO portions of flights have historically been where most incidents occur.***

“Joker/Bingo” Fuel:

Joker fuel is a pre-briefed fuel state above Bingo intended to advise Lead of the flight’s fuel status.

Bingo fuel is the fuel state at which maneuvers must be terminated to rejoin the flight and comply with local course rules to the destination airfield in order to preserve sufficient fuel for approach(es) and landing(s). Be aware that this term also represents an emergency fuel state when briefed as such. Refer to local SOP regarding fuel management.

Forced Cockpit Loading:

Forced cockpit loading, first seen in your Advanced TACFORM flights, is for training emphasis and encompasses non-cooperative flight maneuvering and any administrative or tactical tasks that may be directed by your IP or Flight Lead. These tasks may include making manual frequency changes, inserting waypoints, a sequence string, or other tasks.

CHAPTER TWO ADMIN

200. INTRODUCTION

ADMIN encompasses the non-tactical portions of the brief and flight. The following paragraphs describe the major portions of ADMIN.

201. PREFLIGHT/START/MARSHAL/TAXI/TAKEOFF

These procedures are identical to two-plane formation operations. Reference the SOP/TACSOP for further guidance.

202. INITIAL RENDEZVOUS

Join all the way to Parade position utilizing whatever rendezvous method Lead briefs. Work hard and be precise on your join-up remembering all the basics. Lead may clear you to Cruise position right away; however, you as the Wingman are responsible for being in Parade as appropriate for weather.

203. TACTICAL REJOIN

The Tactical Rejoin gets the Fighters back into Parade formation prior to returning to base. It will be used following the initiation of the "Fence-out" comm as a final rendezvous. Whether executing from Combat Spread or not, turn the rendezvous into something you recognize. There are several ways to make the geometry work out; your instructors will give you different techniques. It is very important to keep sight of Lead. In general, as long as you are well clear of Lead you may maneuver your jet as you see fit to make this join happen. ***Within a half mile, never go 'belly up' for obvious safety reasons.*** As you are rendezvousing you can expect Lead to be at no less than 80% N₂. If you find yourself in a CV rendezvous situation, execute the fundamentals (Altitude, Bearing and Closure), and use your speed brakes if necessary to avoid an underrun; this will be a safety issue in follow-on stages. If you find yourself in a Running Rendezvous but fail to execute the basics, you may find yourself in an 'overrun.' An overrun occurs when the Wingman flies past bearing line, ending up acute. If you find yourself driving to bearing line too fast, you may have to use the speed brakes to try and capture bearing line. If you are unable to stop on bearing line, simply take a slight cut away from Lead while you decelerate. From a slightly stepped out position, slide back to bearing line and continue to join.

In all Tactical Rejoin situations, join all the way to Parade position. Pass Lead a thumb's up if his jet looks good, and expect to execute Battle Damage Checks per the TACSOP.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER THREE TACADMIN (TACTICAL ADMINISTRATION)

300. INTRODUCTION

TACADMIN encompasses anything concerned with tactical employment (brief items, flight maneuvers, etc.), and starts with the push to Spread, and ends after all have fenced out.

301. CALL SIGNS

A tactical call sign (tac. call sign) will be used for all intra-flight communications. For your tac. call signs, pick a word (not a personal call sign) of no more than two syllables that you can say five times very fast. This may sound silly, but you'll get the point later in the jet if you don't. All comm will reference your *full* tactical call sign (i.e., 'Hammer 12') and not just '2'. You will maintain your tactical call sign regardless of if you changed positions from Wing to Lead.

302. WEAPONS SYSTEMS

Review "NATOPS, PART VIII: WEAPONS SYSTEM, A/A MASTER MODE" for information regarding A/A modes and HUD symbology.

The most notable difference between the Navigation and Air-to-Air master modes is the lack of bank angle display. (When maneuvering in relation to other aircraft, specific bank angle is less important.) The selected sub-mode of Air-to-Air is indicated by LAC (Lead Angle Computing), or RTGS (Real Time Gun Sight), displayed just above GUN on the right center of the HUD. An "X" over GUN indicates that the Master Armament switch on the Weapons Selector Panel is set to SAFE. The "X" is removed when the Master Armament switch is set to ARMED.

The wingspan setting entered (31 ft default for T-45) sets the diameter of the reticle in both LAC and RTGS. With the Bandit's wingspan set, the reticle can be used to estimate range. At 1,000 ft, the Bandit's wings fill the inside diameter of the reticle. The center of the A/A aiming reticle (the 'pipper') indicates the computed impact point. The reticle flashes if it reaches the edge of the HUD field of view, and any shots are invalid until the reticle is brought back into the field of view (steady, not flashing).

1. LAC. In LAC, the pipper indicates the impact point of the round at 1,000 ft, but you need to track the target for at least 1 second to get a valid aiming solution. LAC is used for a non-maneuvering or mildly maneuvering target.
2. RTGS. In RTGS, the pipper indicates the instantaneous impact point of the round at 1,000 ft. Since it will take 1/3 of a second for the round to travel 1,000 ft, you need to place the pipper ahead of your target's flight path with an offset distance that accounts for this 1/3 of a second time of flight. RTGS is used for a hard-maneuvering target and will be the mode you use during your TACF and BFM flights. The technique for using the HUD is basically a matter of experience. As you maneuver your aircraft, the reticle will move in the HUD as it compensates

for G and yaw. For this reason, the more smoothly you maneuver your aircraft while tracking, the more accurate the aiming solution.

303. COMBAT CHECKLIST

All combat checks should be accomplished either on deck or enroute to the area, short of selecting MASTER ARM switch to ARMED. This way you have only one action to accomplish following the G-warm. Combat checks for the T-45 are as follows:

Cockpit – Secure.

STORES page – A/A, GUN, RTGS all boxed.

VCR Switch – ON.

Environmentals – Note.

MASTER ARM switch – ARMED (Post G-Warm).

Personal technique or local SOP will dictate when you turn your VCR tape on. You could turn your tape on while on deck, and leave it on until taxiing back at the end of the flight; at a minimum, it should be on before calling “fenced-in” and stay on until you are ‘fenced-out’ on the RTB.

304. PUSHING TO SPREAD

Lead will brief you on when to expect the ‘push-out’ signal to Spread from Cruise. Lead will give this signal by pushing his palm out and away towards the canopy. Give Lead a head nod and add a sufficient amount of power. As you drive forward to the bearing line, take a cut away from Lead to establish a 10 to 20 degree heading differential, setting attitude (if in a climb), and resetting power as necessary to maintain 10 kts of excess airspeed for every 10 degrees of heading differential. Hold this heading differential until achieving a lateral separation of 0.8 to 1.0 nm, then turn to parallel Lead. Anticipate bleeding the excess airspeed as you turn to parallel Lead’s heading. Your primary position-keeping reference is your eyeball. As a visual cross-check, if you can read the white or black letter on the tail of Lead, you are .7 nm or closer. If you see a character on the orange tail but cannot tell exactly what it is, you are about .8 nm. If you see only an orange tail with no white/black character, you are outside .9 nm; these distances are environmentally dependent, so get used to looking at the size of Lead as well and cross-check what you are seeing outside with what the A/A TACAN reads if you are using it.

NOTE

The sight picture from a good Combat Spread position will force you to turn your head somewhat uncomfortably while you look down your shoulder.

Common errors:

1. Taking too aggressive a cut away, resulting in a sucked position.

3-2 TACADMIN (TACTICAL ADMINISTRATION)

2. Taking too little of a cut away for the excess airspeed, and either going acute or never getting out to the appropriate abeam distance.

305. G-WARM

A G-Warm shall be executed prior to beginning any TACFORM maneuvering. A G-Warm requires a minimum of 180 degrees of turn. Normally, the flight will conduct two 90-degree turns in opposite directions such that the flight ends up on the original heading. The turn will be executed to achieve 4 Gs for the first 90 degrees, and then a peak to 6 Gs, easing to 4 Gs, for the second 90 degrees of turn. This allows for the flight to efficiently complete a G-Warm while transiting to the working area. The G-Warm will be initiated with the wingman in DCS or as close to it as local course rule altitudes allow. Reference the TACSOP for specific instructions on how the G-Warm will be executed.

You will lose sight of Lead in a G-Warm if it is initiated into you, so don't call "blind" when Lead goes into trail. If the G-Warm is initiated away from you and you lose sight of Lead, call "blind" *immediately* and *execute all of the turns as directed!* The trailing aircraft should strive to be at the leading aircraft's dead 6 o'clock after the first turn.

It is essential that both aircraft strictly adhere to the airspeed and G requirements outlined in the TACSOP, as there is a potential for a mid-air if the trail Fighter floats the second turn.

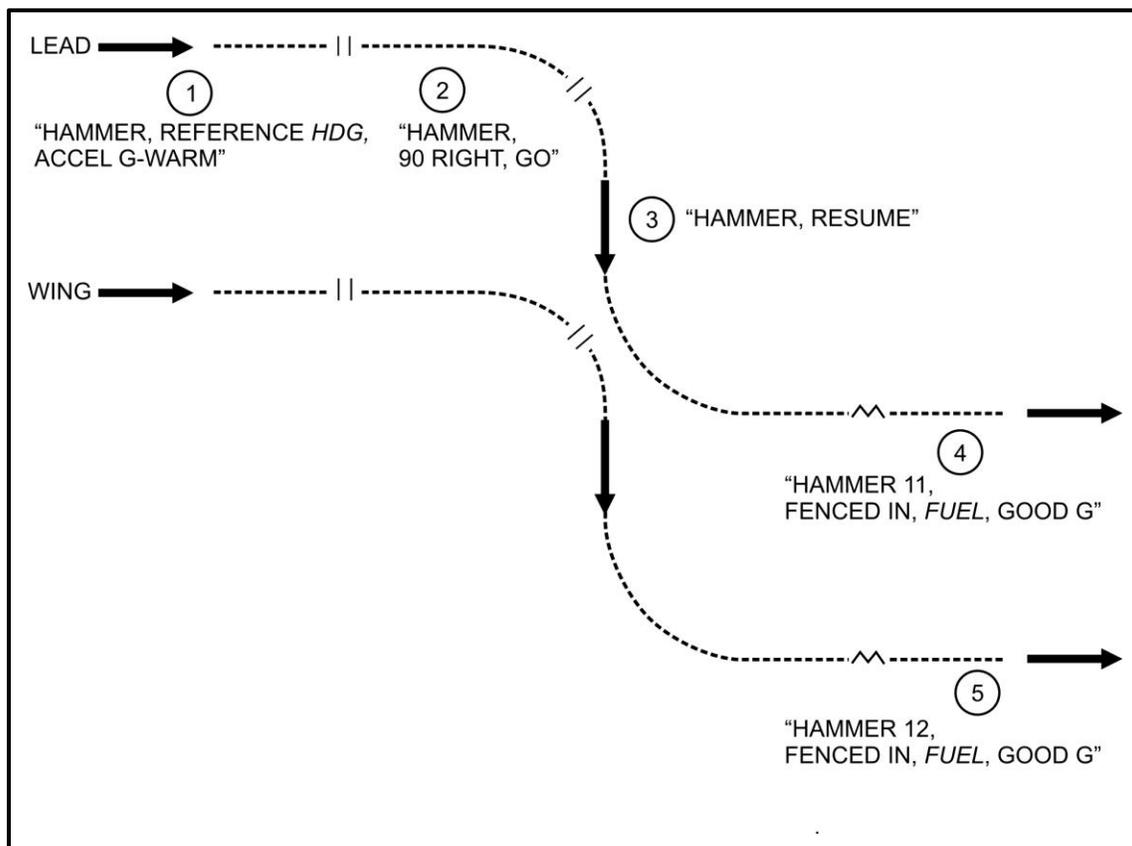


Figure 3-1 G-Warm (Into Wing)

Common errors:

1. Pulling for greater or less than 90 degrees on the first turn, resulting in skewed geometry. This is more readily apparent when Wing does not end up at Lead's six o'clock during initial G-Warms away from Wing.
2. Poor Lift Vector and/or nose placement during the first turn and getting too fast (>400 KIAS) or too slow (<380 KIAS) prior to the second turn.
3. Not pulling right to 6 Gs in the second turn, or not maintaining at least 4 Gs thereafter.
4. *Not getting the nose up quickly enough for the climb back to Spread, resulting in getting fast and going acute.*
5. Post G-Warm – not intercepting Lead's bearing line and 300 KIAS.

306. FENCE IN

Most of the items in the Combat Checklist may be done at any time prior to fencing-in; however, the **MASTER ARM switch may only be moved to ARM post G-Warm**. During the climb post G-Warm, set the MASTER ARM switch to ARM and double check that your VCR tape is on. The "Fenced In" call indicates that all members are ready for the combat phase and have completed an assessment of themselves, the environment, their aircraft, weapons, and systems. Reference the TACSOP for execution.

307. "KNOCK-IT-OFF" (KIO)

The last training objective during your Intermediate TACFORM flights will typically be Tail Chase. During your Advanced TACFORM flights it will be Loose Deuce, or Gunsight Tracking Exercise (GST). We will terminate these engaged maneuvering sets with a Knock-It-Off. It is very important to respect and understand the KIO as it is a tool to ensure safety-of-flight. Thus, anyone in the flight (even the Flight Surgeon in Lead's trunk) can call a KIO. Upon the KIO call, regardless of who called it, cease maneuvering, listen, and wait for Lead to initiate the follow-on comm sequence. The Wingman is responsible for flight path de-confliction unless he is blind and makes a 'blind' call. In this case, Lead, if visual, will have primary flight path de-confliction. If Lead is also blind, he will call blind with altitude; for example, "Hammer 11 blind, *altitude*." Wing will echo this call, "Hammer 12, *altitude*." Lead will dictate an altitude separation plan as applicable. The priorities following the KIO are:

Stand up the throttle (if applicable), stop fighting, and maintain sight and/or SA throughout the maneuver. Post KIO cadence, use pull and power as required to the called flow heading to arrive in Combat Spread; sometimes this will be a 17-unit pull at MRT, other times it will be different. During this process, avoid going belly up inside of a ½ mile from Lead. If you find yourself in this scenario, maintain sight of Lead and flow to the outside of the turn. Lead determined the heading such that you should end up in Combat Spread, so you'll have a good idea where to look. Then, get back to bearing line while capturing

3-4 TACADMIN (TACTICAL ADMINISTRATION)

300 KIAS. Once you've gotten back to bearing, you can start fixing abeam distance and altitude. Lead will then initiate a '(Fuel) and (G)' call. Again, the initial 'Knock-It-Off, Knock-It-Off' call can be made by anyone. Reference the TACSOP for execution.

Common errors:

1. Delaying the turn to the called heading.
2. Not adjusting pull and/or power to arrive in Combat Spread in a timely manner.
3. Being well below DCS altitude, and out of position following the KIO, yet pulling power prior to initiating corrections back to Spread.
4. Going 'belly up' to Lead inside ½ mile.

308. FENCE OUT

Post KIO, your contract is still to maneuver back to Combat Spread. At some point, Lead will initiate the fence-out. Set the MASTER ARM switch to SAFE, VCR tapes – as required, TACAN – mode as briefed, and select HUD – Nav. master mode. Reference the TACSOP for execution.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER FOUR BASIC POSITION-KEEPING AND CORRECTIONS

400. INTRODUCTION

The following section gives basic procedures for maintaining and regaining position. These are not specific maneuvers to perform, but rather tools to reference while performing various maneuvers or correcting for deviations that arise while flying TACFORM.

401. MAINTAINING POSITION

The laws of physics that affect your position-keeping when flying in Combat Spread are the same laws that affect your position-keeping while flying in Parade. The only major difference is your ability to discern deviations due to the relatively large separation between you and your Flight Lead. A disciplined inside/outside scan is crucial to seeing deviations, but *the real key to staying in position is basic air work*; how long do you think you could stay in Parade position with five more knots than Lead, or two degrees difference in heading? While Spread is much farther from Lead than is Parade, the same principles of position-keeping apply.

Scanning your fuel flow as much as your airspeed will pay dividends in keeping airspeed under control while attempting to maintain proper TACFORM positioning. 1,800 to 1,900 PPH is a good reference point for maintaining 300 KIAS in level flight. For heading control in your early TACFORM flights, try setting the course line/CDI or heading bug to the section's downrange heading, as early flights typically involve turns that occur in 90 or 180 degree increments. In later TACFORM flights, you will not have the benefit of using the course line or even knowing what exact heading Lead is on or turning to, so you must develop the ability to look at Lead's jet and determine what will be a parallel heading. Finally, altitude and changes in altitude are fairly easy to see, either with the altimeter or by comparing Lead's jet to the horizon.

402. POSITION CORRECTIONS

There are three variables you must solve to correct and maintain position in Spread. TACFORM positioning order of priorities is:

1. Bearing line.
2. Abeam distance.
3. Altitude.

A rapid inside-outside scan will be required to maintain the proper bearing, abeam distance, and altitude. The right combination of airspeed, heading, and power will control the proper Combat Spread position, so remember what each of these controls; airspeed controls bearing, heading controls distance, and power controls altitude. Any deviation in just one of these parameters will cause a deviation to the accepted Combat Spread position. It is possible, and preferred, to apply multiple corrections simultaneously to control your Combat Spread position.

We are going to apply a few rules to our corrections while trying to fix the above variables:

1. *Always lead acute or altitude corrections*; be accelerating back to 300 KIAS before you hit bearing line while fixing an acute, and/or starting level-offs before you blow through altitudes.
2. *Never lead sucked or abeam distance corrections*; wait until you drive all the way up to the bearing line from a sucked position before you climb to decelerate, and don't turn to parallel Lead before you've driven in or out to the abeam distance that you need.

Now is a good time to introduce the concept of *energy conversion*. Getting proficient at trading altitude for airspeed, and vice versa, will pay dividends in making smooth, expeditious, and efficient corrections while attempting to maintain Combat Spread.

Maneuvers and corrections need to be timely and smooth. It is important to note that erratic and/or abrupt control inputs will just aggravate all involved. Learn to make smooth and controlled, yet aggressive corrections; sometimes a 7 unit AOA pushover will be required. Other times, rolling upside down and pulling will achieve the same result. Going up on a wing might also be used if applicable; whichever technique is used, be aware of what you are trying to achieve with the jet, and do it smoothly.

403. CORRECTING FOR A SUCKED POSITION

Correcting for a sucked position is simply a matter of trading altitude (potential energy) for airspeed (kinetic energy) to start the correction, and reversing the trade to stop the correction. If you find yourself sucked, simply push the nose over (up to 7 units AOA) to gather airspeed as you come downhill. Take your extra airspeed 'along the bottom' and drive forward to the bearing line. Only when you hit bearing line (never lead a sucked), smoothly and aggressively pull 2 to 3 Gs until the nose is up, and climb back to your desired altitude. This significant pull up and nose-high attitude will rapidly start you climbing, while concurrently decelerating. As a useful rule of thumb, every 1,000 ft of altitude that you climb or descend will lose or gain about 30 knots respectively. This correction can be accomplished with little to no throttle modulation, but for a large deviation you may need to add power to further expedite the correction. Adjust the climb attitude to arrive back on bearing, at altitude, and 300 KIAS with about 1,800 PPH fuel flow. This is simplified, but the premise works for all variations of sucked corrections as long as you tailor your application of the above method for the magnitude of correction to be made.

404. CORRECTING FOR AN ACUTE POSITION

There are many ways to decrease downrange travel with respect to Lead, and work off an acute. Listen to your instructors to develop techniques to get the desired result. Remember, you must spend a majority of your time looking outside, referencing Lead, to build the sight pictures necessary to become skilled at fixing geometry problems. Use the following procedures to help build your own techniques.

4-2 BASIC POSITION-KEEPING AND CORRECTIONS

For *slightly acute* positions, you can simply make level turns, or climb and slow down. Making level turns can correct bearing line, but may bleed energy, so power may be needed to maintain airspeed (which uses more fuel).

Climbing and slowing down is more fuel efficient. Simply climb to trade airspeed for altitude and start a drift aft towards bearing line. Before arriving on bearing (always lead an acute) push the nose over and descend back to altitude. You will continue to drift aft to the bearing line as you accelerate in the descent. Adjust power as necessary to arrive on bearing as you reach 300 KIAS. As in the sucked correction, this method can be utilized with little to no throttle modulation.

For *full acute* positions, the above methods will work but you can get back to bearing line more expeditiously by coupling turns with an altitude excursion and power adjustment. ***It is very important to make your corrections smooth and precise. Abrupt and erratic turns will only result in a loss of SA, and potential for RADAR gimbal in fleet aircraft.*** Use nose position and power as required to arrest downrange travel. This might involve greater pure level deviations or by combining turns with power and altitude adjustments. There are many techniques your instructors will talk through that you can use. Regardless of the techniques used, accelerate and correct back to capture bearing line, abeam distance, altitude, and airspeed prior to going sucked.

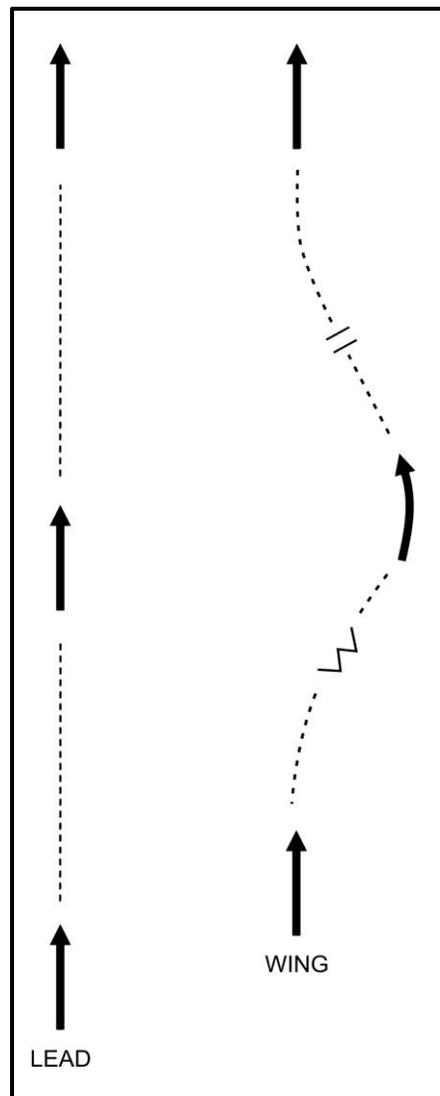


Figure 4-1 Acute Correction

405. ABEAM DISTANCE CORRECTIONS

Abeam distance corrections are simple, add a few knots of airspeed and take a cut into or away from Lead. As a rule of thumb, add as many knots as you add degrees of heading change.

406. ALTITUDE CORRECTIONS

With all other variables solved, add power and set nose attitude to maintain 300 KIAS for a climb. For a descent, you can pull power and/or partially extend the speed brakes so as not to accelerate too much. For an even more rapid descent, you can add a turn to help control your downrange travel (DRT).

4-4 BASIC POSITION-KEEPING AND CORRECTIONS

CHAPTER FIVE TACFORM PROCEDURES

500. INTRODUCTION

The following information is presented in the general order of flow for each of your TACFORM flights, along with procedures for each portion. Your Advanced Tactical Formation flights will include maneuvers that you will read about in the Chapter titled “Advanced Tactical Formation Procedures and Maneuvering.” Refer to your Master Curriculum Guide for specific flight block requirements.

501. CHECK TURNS

A Check Turn is used to turn the section 30 degrees or less. Lead will roll into a 30-degree AOB turn for 30 degrees or less of heading change at 300 KIAS. Think of these turns as putting you *instantly* acute or sucked, requiring smooth and aggressive bearing line corrections. As will be the case for all the turns in your TACFORM flights, Lead will not start maneuvering until Wing acknowledges the Lead’s comm:

Lead: “Hammer, Check left, 250”

Wing: “Hammer 12, 250”

502. CHECK TURNS INTO WING

You will see Check Turns used to get Wing back into position in order to expedite setting up for the next maneuver later in your training. This will happen when applying cooperative maneuvering. While in the Tactical Formation stage of training we will use them to create an acute so you gain an understanding of geometry and fixes required. In the case of the latter, Check Turns into the wingman require corrections that basically mirror what you would use for an acute position described earlier in this text. There are many ways to achieve the same goal, even more than are listed here. We will reference three options that you can pull from to build your own technique for fixing an acute. Some of these steps are deliberately vague so the focus is on looking outside and assessing, vice concentrating inside on rigidly achieving specific parameters. Tactical Formation is an art that you will continue to perfect throughout your career.

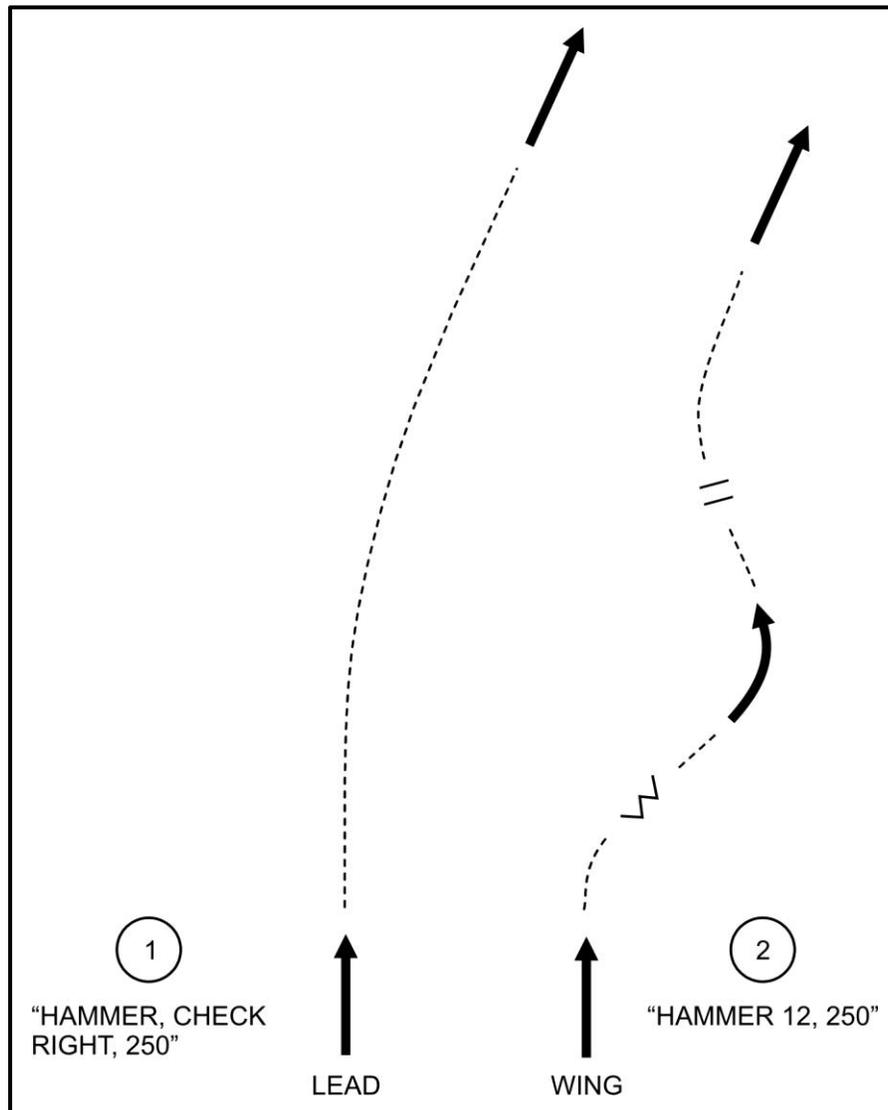


Figure 5-1 Check Turn Into Wing

- Option 1, *Turn with a climb*: turn to the new heading, referencing Lead in the turn. Manage your nose position and power to decrease downrange travel (increase nose attitude, reduce power). Watch bearing line as it approaches from behind and be in a correction to capture bearing line, abeam distance and altitude. Continue to assess and manage power to capture and maintain airspeed (300 KIAS) out of the maneuver. Your IP's will have many techniques to include gouge power settings, nose attitudes and timing for success. Bottom line, look outside and continue to assess for corrections and re-corrections to be in position expeditiously.

- Option 2, *Pure level maneuvering*: use a series of hard level turns away from and into Lead to slow your downrange travel using pure geometry. Be aware of excessive abeam distance errors, as this makes your judging of position more challenging; allow your jet to displace for a while to decrease down range travel, then re-assess. A good rule of thumb is to take a mental snapshot of how much correction is required, and reverse your turn back towards Lead when 50% of that correction has been made.
- Option 3, *Oblique maneuvering with S turns*: a climbing turn past the flow heading, then turning down and into Lead, is another way to quickly slow downrange travel. The power should remain constant during this maneuver to eliminate variables, unless needed due to resultant geometry. Large vertical and lateral errors should be avoided as this makes it harder to judge where you are in relation to Lead. As a technique, avoid maneuvering further away than 2.0 nm, climbing more than 2,000 feet, and decelerating more than 50 knots.

It will not be obvious reading this text, but you will soon realize that check turns into Wing can be one of the most difficult corrections to master.

Common Errors:

1. Floating (less than 2 Gs) the cuts away and into Lead.
2. Not looking back at Lead, and not continuing to quickly adjust for desired results.

503. CHECK TURNS AWAY FROM WING

A Check Turn away from Wing will induce a sucked position. The goal is to accelerate quickly so that you reduce your positional error as expeditiously as possible. For a Check Turn away from you, make a turn to the new heading while aggressively lowering the nose to gain airspeed (descending below Lead is acceptable and encouraged). This is one situation where you can justify bringing the throttle up to expedite acceleration. Once you have a healthy excess of airspeed, reset your fuel flow, and keep the extra airspeed gained to drive forward to the bearing line. Abeam distance errors can be fixed as you approach bearing line. Once you hit the bearing line, aggressively climb back to altitude and recapture 300 KIAS.

504. SHACKLES

Shackle Turns allow the Lead to re-dress the section (get Wing back into position), or to have the jets maneuver to opposite sides of the formation. If Lead desires to keep the section on the current heading, both aircraft begin a level 14-unit turn toward each other for approximately 45 degrees of heading change, adjusting power as necessary to maintain 300 KIAS. Both aircraft will roll out with the new heading on the appropriate 45-degree benchmark and wait for the pass. The wingman is responsible for altitude deconfliction, and should keep Lead in sight throughout the Shackle. If both aircraft cross over each other and reverse back to the flow heading *at the same time* (roughly 2 sec after the pass), you should come out of the turn on bearing line at the appropriate abeam distance.

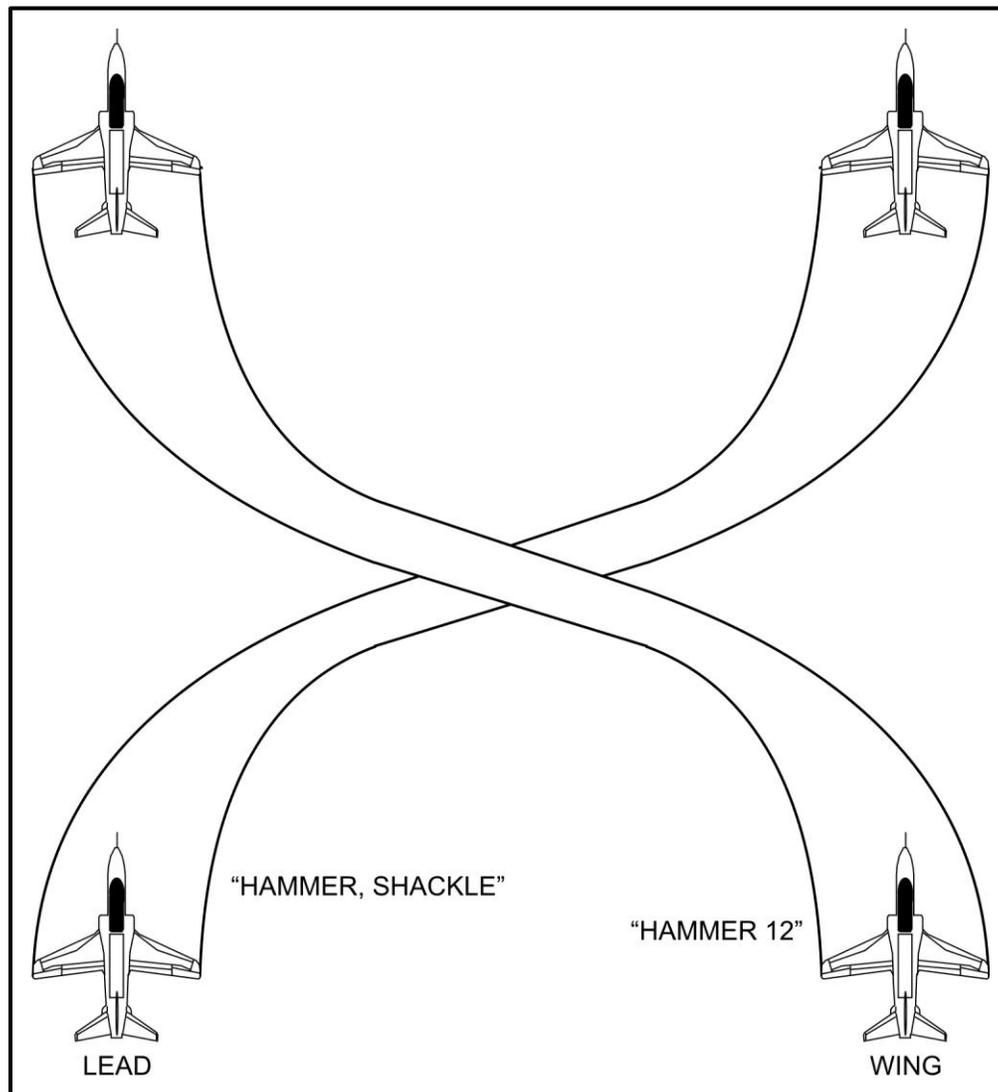


Figure 5-2 Shackle

A Shackle can be used to help the wingman regain bearing line from either a sucked or an acute position. If the wingman starts out slightly sucked, he/she may elect to turn 45 degrees, and reverse earlier after the pass, back to the flow heading. If the wingman is excessively sucked, he/she may turn less than 45 degrees, or not at all in the worst instances. If the Wing starts out slightly acute, he/she may turn 45 degrees, and wait longer after the pass to reverse back to the flow heading. If the wingman is excessively acute, he/she can turn greater than 45 degrees initially before turning back to the flow heading. Any of these techniques may be used, and are situation-dependent, so adjust accordingly.

Since a Shackle is a somewhat cooperative maneuver, don't blindly initiate a correction without assessing what Lead may be trying to accomplish with the Shackle. Mentally note whether you

were in position or out of position to begin with, and tailor your correction according to what Lead is trying to accomplish.

Common Errors:

1. When in position and Shackling straight ahead, Wing turns all the way to the pass (greater than 45 degrees), instead of rolling out on the 45-degree benchmark.
2. Not pulling 14 units in either turn.
3. Not scanning airspeed and getting either too fast or too slow.

505. OFF-HEADING SHACKLES

Lead will call an Off-Heading Shackle to a new heading of 30 degrees or less from the original flow heading. Each jet will turn towards the other at 14 units and 300 KIAS until the new flow heading reaches the first 45-degree benchmark on the HSI. One jet will turn *a lot* (~75 degrees of turn), while the other jet will turn only *a little* (~15 degrees of turn), to put the new flow heading on the appropriate benchmark.

Unlike straight-ahead Shackles, the section will not pass directly over and under each other; the jet turning *a little* will tend to pass slightly in front of the jet that turned *a lot*. After the pass, look over your shoulder at Lead's jet. When Lead gets to an angle behind your wing line that roughly equals how many degrees you have left to turn to the new flow heading (usually 45 degrees), start your turn. This should put Lead on your bearing line, which equates to you being on Lead's bearing line. A good rule of thumb is that the jet turning *a lot* normally dictates the reversal timing. As long as Wing passes close to above Lead, with approximately 90 degrees of heading differential, and reverses at the same time as Lead, Wing will come out of the turn on bearing (first priority), and can make a simple correction for abeam distance as necessary.

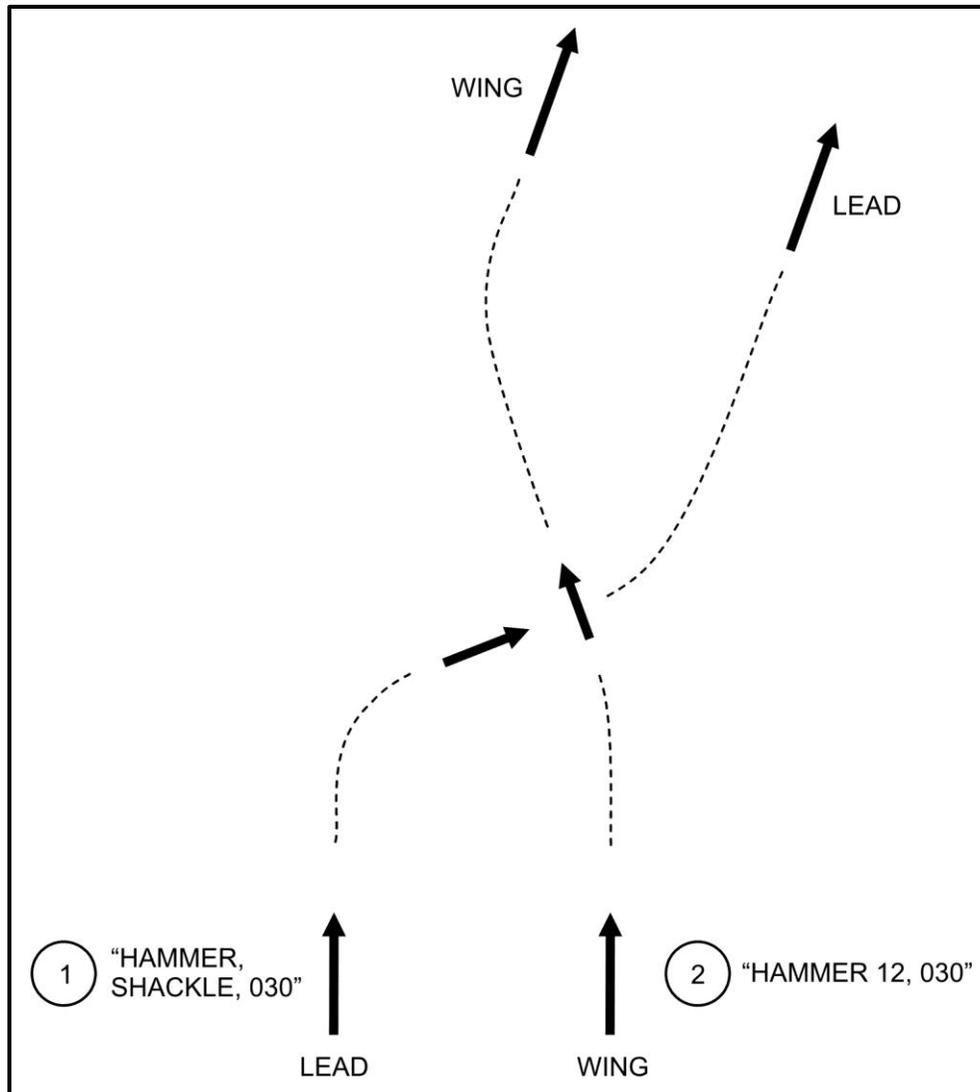


Figure 5-3 Off-Heading Shackle

Common errors in Off-Heading Shackles include those of the straight-ahead Shackle, plus the addition of potentially turning too far by putting the new flow heading past the HSI 45-degree benchmark.


506. CRUISE TURNS

Cruise Turns are used to turn the section through 90 degrees of heading change, and are designed to develop bearing line recognition in a non-dynamic environment. Lead will call for the turn by transmitting "Hammer, Right/Left 90" and begin the turn when Wing responds "Hammer 12" by rolling into a 30-degree AOB turn for 90 degrees of heading change at 300 KIAS. Cruise Turns develop slowly and allow plenty of time to see impending errors and make corrections during the turn. Cruise Turns will not be executed in your Advanced TACFORM flights.

5-6 TACFORM PROCEDURES

507. CRUISE TURNS INTO WING

On a Cruise Turn into Wing, you will need to begin with a shallow (10-20 deg AOB) turn away from Lead in order to pass roughly 2,000 ft in front of Lead. As Lead disappears below and behind your wing line, increase AOB to approximately 45 degrees. Now take a mental snapshot at the geometry thus far; Lead's heading should be ahead of yours by 20 degrees or so with an associated amount of drift to the inside of your turn. Look for Lead to reappear low and aft of your wing line on the inside of your turn, and anticipate the bearing line sweeping up towards you. Wing will descend after flight path crossing to expeditiously capture bearing line and climb as required to arrive in Combat Spread on the outside of the turn. If wing descends, a climb will be required to decelerate back to 300 KIAS in Combat Spread. Adjust your AOB to arrive in Spread as Lead rolls wings level. The key to success is to develop an ability to judge Lead's heading in order to compare his turn remaining against how far the bearing line needs to move up toward you.

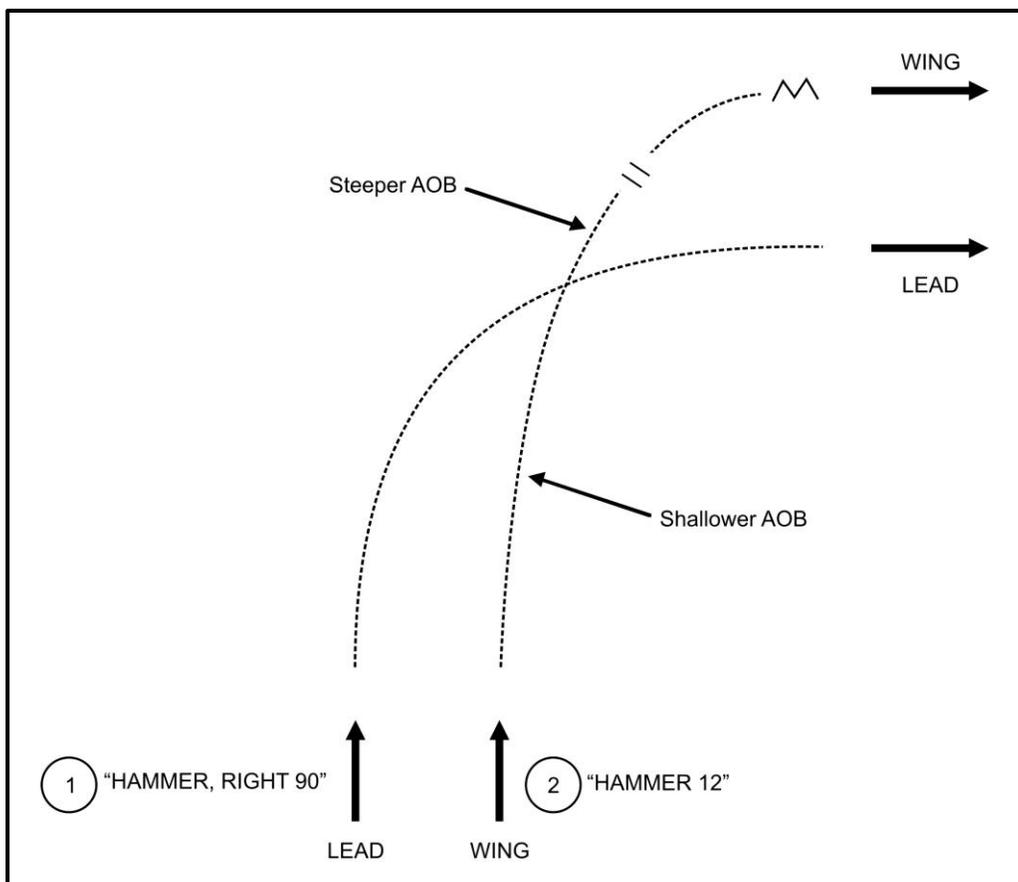**Figure 5-4 Cruise Turn into Wing**

508. CRUISE TURNS AWAY FROM WING

Cruise Turns away from Wing are basically the opposite of Cruise Turns into Wing. Begin with a steeper AOB turn into Lead (45-60 deg AOB) and lower your nose slightly to accelerate, in order to pass roughly 2,000 ft aft and slightly below Lead with a 25-30 knot speed advantage. As you approach Lead's flight path, start decreasing AOB to approximately 10-20 degrees, and raise the nose to begin a decelerating climb back to your original altitude. Take another mental snapshot of the flight path geometry. Lead's heading should now be lagging yours by 20 degrees or so, with a drift rate to the outside of your turn. Anticipate the bearing line sweeping back towards you and adjust your AOB to arrive in Spread as Lead rolls wings level. Again, compare how much turn Lead has remaining with how far the bearing line needs to move back toward you.

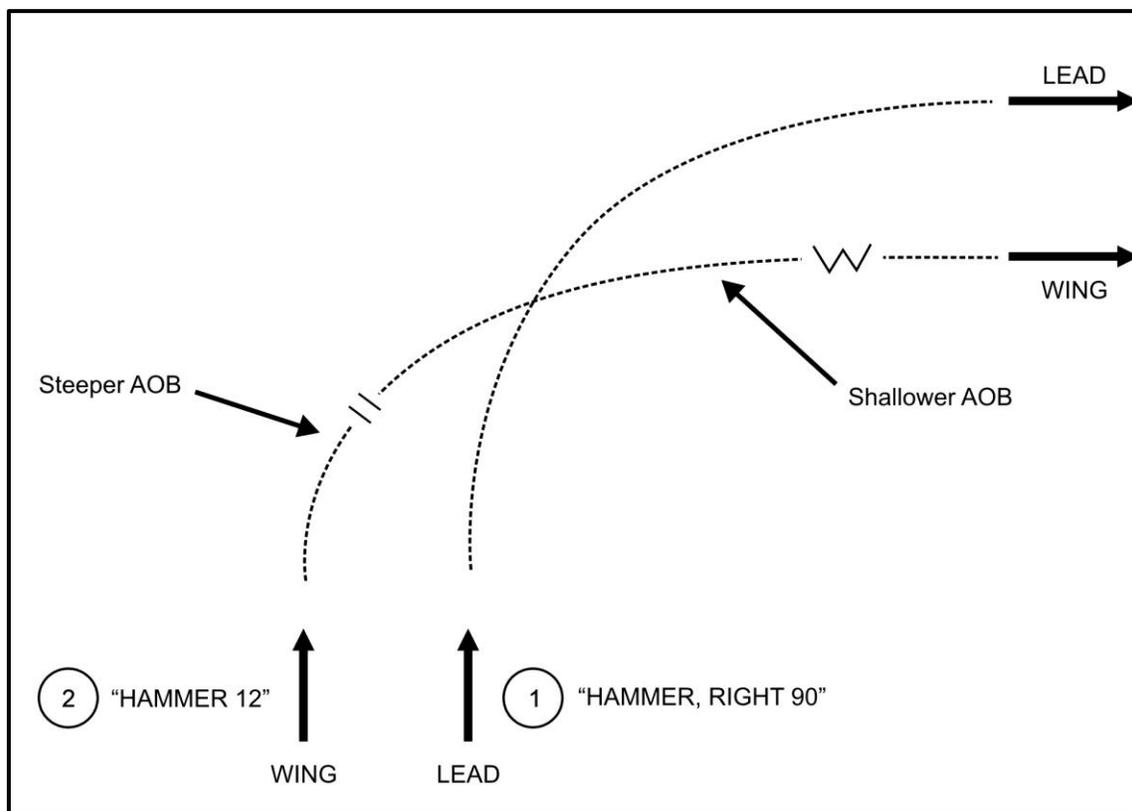


Figure 5-5 Cruise Turn Away from Wing

509. CRUISE TURN CORRECTIONS

A wingman can, in theory, execute a Cruise Turn either into, or away, while level at 300 KIAS. As a wingman you are not constrained to being level at 300 KIAS, and may use altitude and airspeed changes throughout the maneuver. The key to all of this is to judge where the bearing line currently is, and anticipate where the bearing line will be. If it does not look like you will reach the bearing before Lead rolls out, aggressively lower the nose and accelerate to begin

fixing the sucked error while still in the turn. If you hit bearing early, raise the nose and slow down to stay on bearing until Lead rolls out.

510. TAC TURNS

The Tac Turn is an engaging turn in which flow heading changes by 90 degrees, and the Fighters swap sides of the formation. A Tac Turn allows the section to maneuver rapidly to engage a threat on the beam. Tac Turns will be performed at 14 units, using power as necessary to maintain 300 KIAS. At the completion of the turn, you should be back in Spread on the opposite side at 300 KIAS. The turn begins immediately following Wing's acknowledgement of Lead's comm:

Lead: "Hammer, Tac left"
Wing: "Hammer 12"

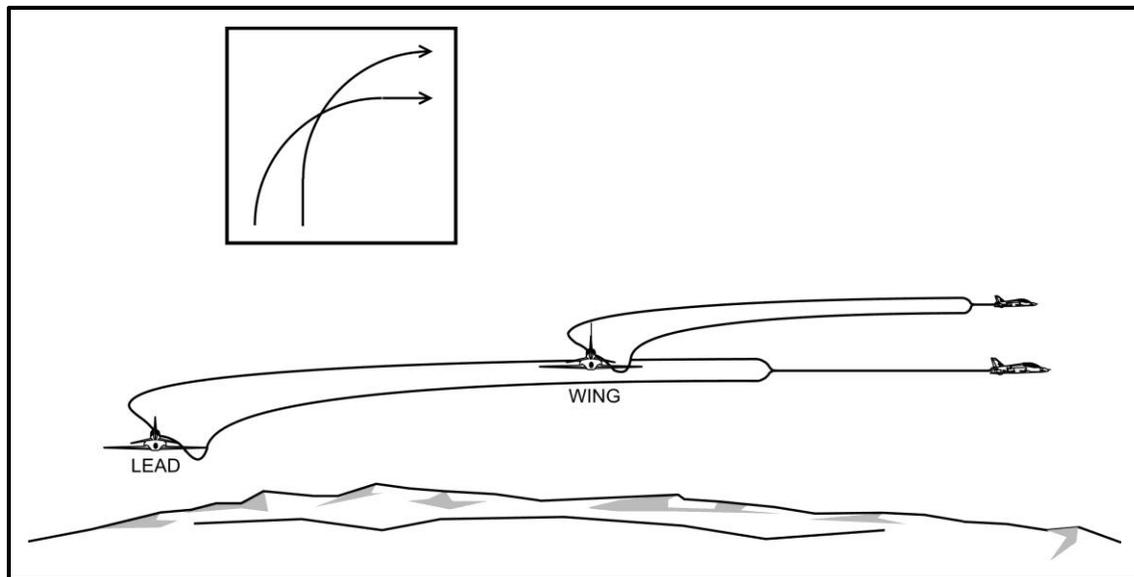


Figure 5-6 Tac Turn into Wing

511. TAC TURNS INTO WING

Initially you will drive straight and do nothing as Lead starts his turn into you. Begin your turn in the called direction just prior to being able to look down Lead's intakes. About halfway through your turn you should pick up Lead over your shoulder as he rolls wings level, with you on bearing line. Expect most of Lead's turns to be into Wing as this allows you to get the most training on timing and corrections. Realize that if you are out of position to start the maneuver you can adjust your timing so as to come out of the turn in position. If you start out acute, you will come out acute if using the same sight picture to begin your turn, so wait slightly longer to begin your turn; this will help fix bearing line (first priority) out of the turn, but will induce some abeam distance errors. To fix abeam distance errors, simply put in a correction to fix the wide coming out of the turn, as appropriate. If you start out sucked, you will come out sucked if no

adjustment is made. Starting from a sucked position, you will need to turn slightly sooner in order to arrive on bearing line at the completion of the maneuver; this will induce an abeam distance error (close abeam), and a correction can be made out of the turn, as appropriate.

512. TAC TURNS AWAY FROM WING

Immediately begin your turn into Lead. Lead will maintain heading waiting for your jet to approach nose-on. At the appropriate time, Lead will start his turn. You should arrive at the new heading, on bearing, as Lead is about halfway through his turn.

513. IN-PLACE TURNS

The In-Place Turn is an engaging turn that changes flow heading by 180 degrees, and causes the Fighters to swap sides of the formation. Both Fighters should begin and finish their turn at the same time. Realize that if you are out of position at the start it will require adjustments to your AOA and nose position in order to arrive in position out of the turn. An In-Place Turn is used to engage a bandit that is in the section's rear quarter, in the direction of the turn. The turn begins immediately following Wing's acknowledgement of Lead's comm:

Lead: "Hammer, In-Place right"
 Wing: "Hammer 12"

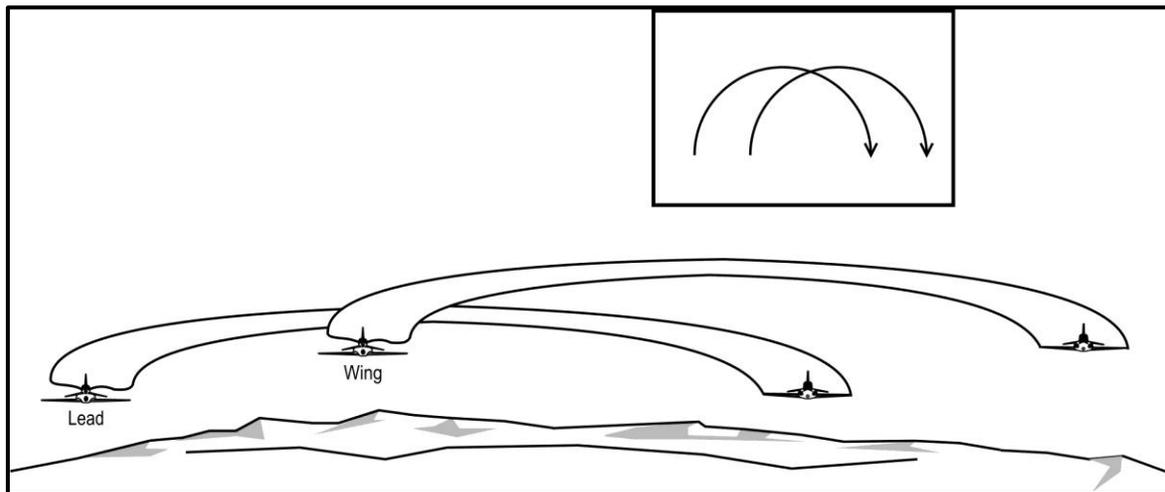


Figure 5-7 In-Place Turn into Wing

Common Errors:

1. Not maintaining 14 units AOA and 300 KIAS during the turn.
2. Not assessing corrections needed during the turn.
3. Not maintaining altitude while blind in the turn.

514. IN-PLACE TURNS INTO WING

Upon responding to the initiating comm, immediately begin your turn away from Lead adding power as required to maintain 300 KIAS. After roughly 135 degrees of turn look for Lead to appear over your shoulder, and assess the bearing line. Since In-Place Turns take twice as long to accomplish as Tac Turns, bad airwork from Wing will result in amplified deviations after the turn is complete, so think ahead as the maneuver is progressing, and assess your airwork; adjust AOA as soon as you recognize deviations. Thinking ahead, and making early or mid-maneuver corrections, may save you from having to make bigger corrections at the end of the maneuver.

515. IN-PLACE TURNS AWAY FROM WING

Upon responding to the initiating comm, immediately begin your turn into Lead adding power as required to maintain 300 KIAS. Your first check point in the turn will be after 90 degrees of heading change. You need to assess if you are leading or lagging Lead's turn rate, and whether or not you are offset to what would appear to be outside or inside Lead's turn. If you are lagging Lead's turn rate, or appear to be outside of his/her turn, you need to wrap up the turn using an extra unit or two of AOA to catch up. If you are leading Lead's turn rate, or appear to be inside of his/her turn, then you need to float the turn a comparable amount. Be mindful that when you wrap up or float the turn, you are going to induce abeam distance errors; anticipate abeam distance errors, and start planning a correction out of turn to correct geometry deviations. *As a safety note, descending out of altitude during an In-Place Turn away from Wing should only be done with situational awareness to Lead's position.*

516. CROSS TURNS

The Cross Turn is a 17 unit, 300 KIAS hard turn into each other at MRT, where the Fighters cross each others' flight path and change flow heading by 180 degrees. Out of Cross Turns, the Fighters are on the same relative side of the formation (if you start on the left, you finish on the left); additional comm is needed for safety of flight de-confliction because Fighters are going to make a relatively close pass.

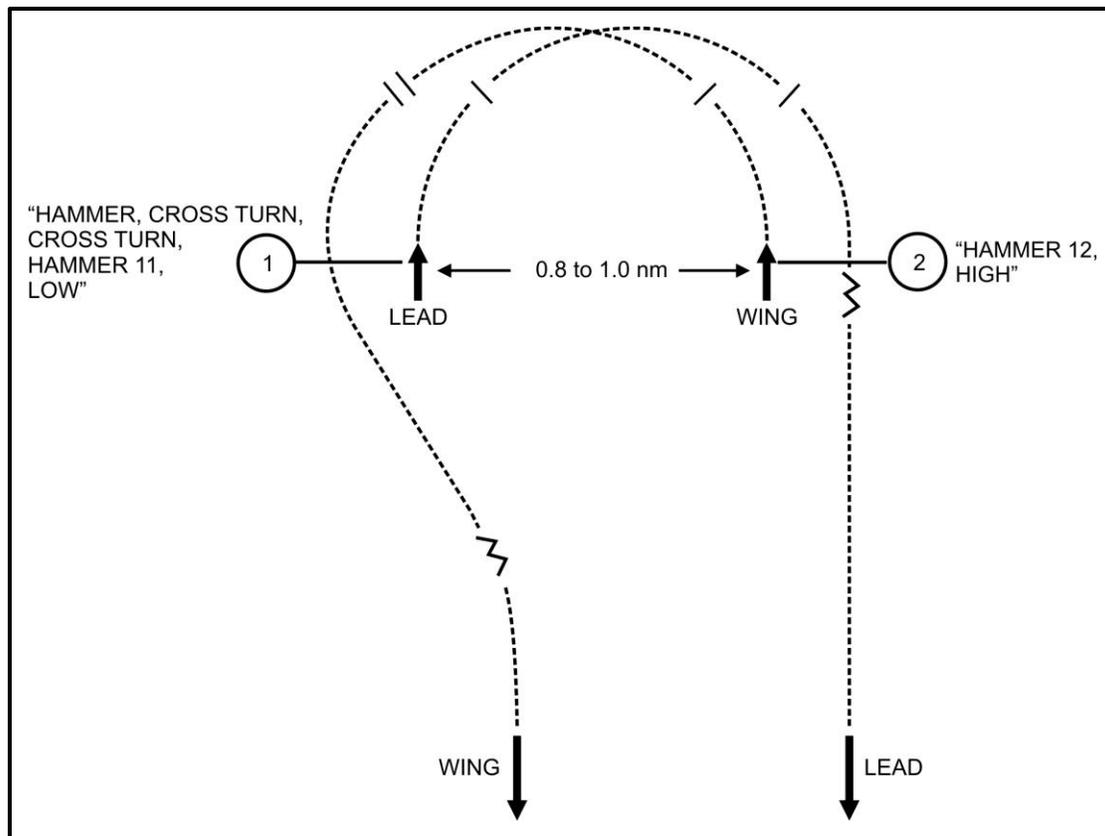


Figure 5-8 Cross Turn

Lead will initiate the Cross Turn, “Hammer, Cross Turn, Cross Turn, Hammer 11 low.” In early TACFORM flights, Wing will be the high Fighter, so he/she will respond “Hammer 12 high.” As Wing begins to transmit “Hammer,” he/she should select MRT and be rolling to execute a 17 unit, slightly nose-low (just like the min radius turn in FAMs), hard turn into Lead. Lead will execute an identical turn into the wingman. Both Fighters will end up turning for 180 degrees to the new flow heading. The pass will occur just prior to either jet achieving 90 degrees of turn. Wing should be right above Lead, to slightly inside of Lead’s radius of turn. The degree to which Wing goes nose-low is predicated on being *no closer than 500 ft* above Lead at the pass.

Once the pass is safely assured, Wing should overbank briefly, maintaining 17 units, allowing the jet to accelerate past 300 KIAS in the nose-low slicing turn. As the section started out at 0.8 to 1.0 nm separation prior to the Cross Turn, the wingman should end up on bearing, wider than usual (due to radius of turn at 17 units, ≥ 300 KIAS). Wing will tend to be wide out of the Cross Turn, and should continue 30 degrees or so past the new flow heading into Lead, using excess airspeed to collapse and achieve the correct abeam distance. Wing can then parallel the new flow heading while simultaneously correcting back to altitude and 300 KIAS.

If Wing is blind out of the Cross Turn, he should only turn 180 degrees to parallel the new flow heading, **but cannot climb**; once the wingman is visual, he can proceed with correcting back to the proper abeam distance and altitude.

The preceding paragraph assumed that Wing was on bearing after 180 degrees of turn. Typically, Wing ends up slightly sucked, so he/she will also have to drive forward to bearing line after correcting for abeam distance. Once you hit the bearing line with proper abeam distance, climb back up to altitude. Should Wing show up acute after 180 degrees of turn, assuming visual, Wing will need to incorporate an acute fix while collapsing the abeam distance.

Common Errors:

1. Not talking while turning at the start, resulting in Wing being outside Lead's turn.
2. Not selecting MRT early enough or maintaining 17 units throughout the turn.
3. Overbanking too much and/or too early, resulting in a close pass with Lead.
4. Overbanking late, resulting in a lack of excess airspeed to correct for bearing line and abeam distance deviations.
5. Going belly-up to Lead to correct heading/abeam distance, while climbing through Lead's altitude.

517. TAIL CHASE EXERCISE

Tail Chase exercise is flown to demonstrate the effects of lead, pure, and lag pursuit on nose-to-tail distance. The goal of this exercise is Control Zone management, and it teaches how to maneuver your aircraft to stay offensive. Wing will utilize lead, pure, and lag pursuit to maintain the Control Zone, 2,000–4,000 feet in trail of Lead. Wing should make sure he does not get any closer than 500 ft to the Lead during these maneuvers (500-foot bubble). If nose-to-tail becomes greater than 4,000 ft, maneuver to the inside of your interval's turns (lead pursuit) in order to reduce the nose-to-tail. Conversely, if nose-to-tail decreases, maneuver to the outside of your interval's turns (lag pursuit) until 2,000 ft is obtained, and then continue to follow your interval's flight path (pure pursuit). Using the A/A TACAN ranges in the HUD, manage your range between approximately .3–.6 nm. Wing will not take shots during Tail Chase. This exercise will be completed with a Tactical Rejoin.

The set-up for Tail Chase is as follows:

From Combat Spread, Lead will initiate the set-up/re-join, "Hammer 12, take port/starboard Parade"; **this is Wing's opportunity to practice rejoining from Spread**. The rejoin will be accomplished with a hard pull toward Lead's 6 o'clock, then a reversal of turn prior to crossing Lead's 6 o'clock, to set up a Running Rendezvous sight picture on the same side of formation. Using Military power during the hard pull will aid in an expeditious rejoin. It is very important to keep sight of Lead. Once Wing is in Parade, Lead will give Wing the cocked gun signal

followed by the kiss off signal. Lead will break away for 180 degrees, and Wing will break to follow after 4 seconds. After 5–10 seconds straight and level, Lead will set 92–94% and pull level across the horizon to slightly nose low. Generally, Lead will use between 12–14 units and maneuver to keep Wing Offensive. At the trunk IP's discretion he will then tell Lead, "cleared to maneuver." Lead's maneuvers will be no more than 17 units, and will not include pure-vertical maneuvering.

Once training objectives have been met or BINGO fuel is reached, standard KIO comm applies per the TACSOP (trunk IP initiates KIO for training objectives, the student or Flight Lead will initiate the KIO for BINGO fuel). Execute a Tactical Rejoin after the 'fence out' call.

CHAPTER SIX ADVANCED TACFORM PROCEDURES AND MANEUVERING

600. INTRODUCTION

In your later TACFORM flights you will be given a chance to practice position-keeping and to hone eyeball calibration in a more realistic setting. During these flights, free-flowing maneuvers will force you to maintain proper Combat Spread in spite of non-standard turns or other internal/external factors, such as forced cockpit loading.

If it sounds like this advanced TACFORM maneuvering is set up to challenge you as a wingman, that's correct. You will find these flights challenging and enjoyable, and they will give you a good look at what to expect during your follow-on Advanced Strike stages in the Training Command and in the Fleet.

601. FORCED COCKPIT LOADING

'Forced cockpit loading' is a training tool which requires additional internal tasks to be completed while continuing to fly TACFORM, further adding to the level of difficulty found within the stage. These tasks may include making manual frequency changes, inserting waypoints, creating a sequence string, or other administrative tasks.

602. RANDOM TACFORM MANEUVERING

As mentioned previously, some turns that Lead calls will not be for 30, 90, or 180 degrees of heading change; even when called turns conform to these benchmarks, Lead may vary airspeed and/or AOA to create a higher degree of difficulty for the wingman. In short, this 'non-cooperative' maneuvering will create the need to evaluate and make continuous corrections from one turn to the next, while taking care of other Admin or Tac Admin related items. For any of the turns (with the exception of Cruise Turns, which are only done during previous block TACFORM flights), Lead may elect to maneuver within +/- 30 degrees of standard parameter heading changes. The corrections during random maneuvering can be confusing if some significant preparation isn't made; spend time thinking about the geometry and the corrections required to maintain appropriate positioning.

In-Place Turns to 150 or 210 degrees from the original heading will be executed. You have to think about In-Place Turns with respect to which side of the formation you start from; look at the HSI and determine the outcome (will I be ahead or behind Lead out of the In-Place Turn if I turn at the same time as Lead), and this will help you understand if you need to start your turn early or late.

- ***In-Place Turns < 180 degrees away from Wing*** will result in Wing being well-sucked out of the turn if no adjustment is made. In this case, Wing must begin the turn right away while responding with the comm. Use increased power as required, and increase the AOA slightly, so as to come out of the turn as close to in position (bearing line first priority) as possible, and make fine-tuned corrections as soon as

bearing line deviations are noted. With this In-Place geometry setup, expect to have to make a sucked correction, and begin this correction while coming out of the turn.

- ***In-Place turns executed < 180 degrees into Wing*** will result in Wing being well-acute out of the turn, if no adjustment is made. In this case, Wing must begin the turn later than normal. With this setup, expect to have to make an acute correction, so work your geometry as appropriate coming out of the turn to achieve appropriate positioning.

Tac Turns to 60 or 120 degrees from the original heading will be executed. A Tac Turn into Wing will force Wing to do all the work (expect most Tac Turns to be into Wing). Again, look at your HSI and determine the outcome (will I be ahead or behind Lead out of the Tac Turn if I turn with Lead intakes on), and this will help you understand if you need to start your turn early or late.

- ***Tac Turns into Wing <90*** will result in Wing being well-acute out of the turn if no adjustment is made. Wing must begin his/her turn later than normal. Judge your timing throughout the turn, and be making a correction as you are coming out of the turn (bearing line is the priority).
- ***Tac Turns into Wing >90*** will result in Wing being well-sucked out of the turn if no adjustment is made. Wing must begin his/her turn later than normal. Judge your timing throughout the turn, and be making a correction as you are coming out of the turn.

603. OFFENSIVE COMBAT SPREAD

During later block TACFORM flights, the concept of Offensive Combat Spread (OCS) will be introduced. This will require different eyeball calibration and timing to execute turns effectively. The OCS position will be abeam Lead at 1.2 to 1.5 nm, within +/- 3,000 ft of Lead's altitude. These parameters may vary with environmental factors, or simply at Lead's discretion. Lead will perform only called turns to standard multiples of headings while in OCS. Wing should expect check turns, Tac Turns, In-Place Turns, Shackles, and Cross Turns while in OCS. Any of these turns may be executed with Wing as the high or low Fighter. Some differences you will see while maneuvering in OCS are as follows:

1. ***Check Turns.*** Check Turns are executed the same as in DCS, but the magnitude of correction will be greater, as you have more downrange travel than in DCS, in order to get back to bearing line.
2. ***Tac Turns.*** Tac Turns into Wing require slightly different timing than in DCS – instead of waiting to look down Lead's intakes, Wing should wait slightly longer (until Lead reaches the 5 or 7 o'clock position) before starting a 14-unit turn.
3. ***In-Place Turns.*** There is no difference between DCS or OCS for In-Place Turns.

6-2 ADVANCED TACFORM PROCEDURES AND MANEUVERING

4. **Shackles.** Shackles will require longer timing, after the pass, before reversing to the flow heading. Methods for making corrections in OCS are the same as those in DCS.
5. **Cross Turns.** Cross Turns that started at 1.0 nm in DCS normally end up about 1.5 nm abeam out of the Cross Turn. Conversely, Cross Turns from OCS that started at 1.5 nm abeam normally end up at about 1.0 nm. Cross Turns may be used by Lead to set OCS formation, or to return to DCS.

604. UNCALLED TURNS

Uncalled turns are used to simulate maneuvering in a comm-out environment. They will be either Tac or In-Place Turns. Lead will give an exaggerated wing flash in the direction the turn is to be executed, then roll back to wings level. Only after Lead is wings level will either jet maneuver. If you are unable to discern which way Lead gave the wing flash, assume a Tac Turn away from you. If you are wrong, it will be readily apparent (when Lead begins a Tac Turn into you), and you can quickly reverse to where you need to be. If you incorrectly assume that the uncalled turn is into you, you stand the chance of losing sight.

An uncalled In-Place Turn will only be performed away from the wingman. Tac Turns may be performed either into or away from Wing. Since an uncalled turn away from Wing could mean either a Tac Turn or an In-Place Turn, again, always assume an uncalled Tac Turn away. The realization that it's an In-Place Turn occurs when Wing rolls into what is assumed to be a Tac Turn away, but observes Lead also turning in the same direction.

605. LOOSE DEUCE EXERCISE

The Loose Deuce exercise gives the wingman practice at 'talking and flying' while utilizing pursuit geometry to support Lead in a notional engagement against a single bandit. Wing will utilize High and Low Yo-Yo geometry, execute reversals to include the Displacement Roll, and exercise role swaps throughout the exercise. This canned scenario is designed to introduce the student to various maneuvers that will be used later in the air-to-air arena. Wing will learn to execute a break turn, provide cover for Lead who may be engaged with a bandit, how to react to a bandit reversal, and how to swap roles with Lead in the event of a weapon malfunction.

The drill starts with a Tac Turn into Wing. Halfway through the turn, Lead detects a notional bandit rolling in at Wing's 5 or 7 o'clock (from high and outside the formation). Lead then directs Wing to break defensively into the Bandit while aggressively maneuvering his own jet to shoot the Bandit off Wing's tail. This defensive break turn is executed up and into the Bandit. The roles are now initially set with Wing as the Engaged Fighter, and Lead as the Free Fighter. The Bandit will however overshoot Wing, and will reverse defensively in front of Lead, as Lead's nose comes to bear on him.

The threat to you is now removed, so Lead directs you to reverse back into the section. The bandit, in effect, has swapped the Free/Engaged roles for the section. Lead is now engaged offensively, and you as Wing are the Free Fighter. You are now using lead, pure, and lag pursuit geometries to maintain mutual support of Lead while he maneuvers for a shot. Lead eventually

attempts a gun shot, but suffers a jammed gun. Lead calls you in to engage and kill the Bandit. You swap roles but are also unable to get a shot due to a gun jam, and call Lead back in to engage. This time Lead is able to get a shot and splash the Bandit, ending the exercise. This exercise will develop your ability to simultaneously maneuver the jet and talk on the radio. Power should be advanced at the break turn and left at a higher power setting through the maneuver; because of this restriction, you must learn to use lead, pure, and lag pursuit curves appropriately to keep yourself no further than 4,000 ft, but no closer than 1,000 ft, behind Lead. If you are unable to manage this range with pursuit geometry, adjust your power as necessary.

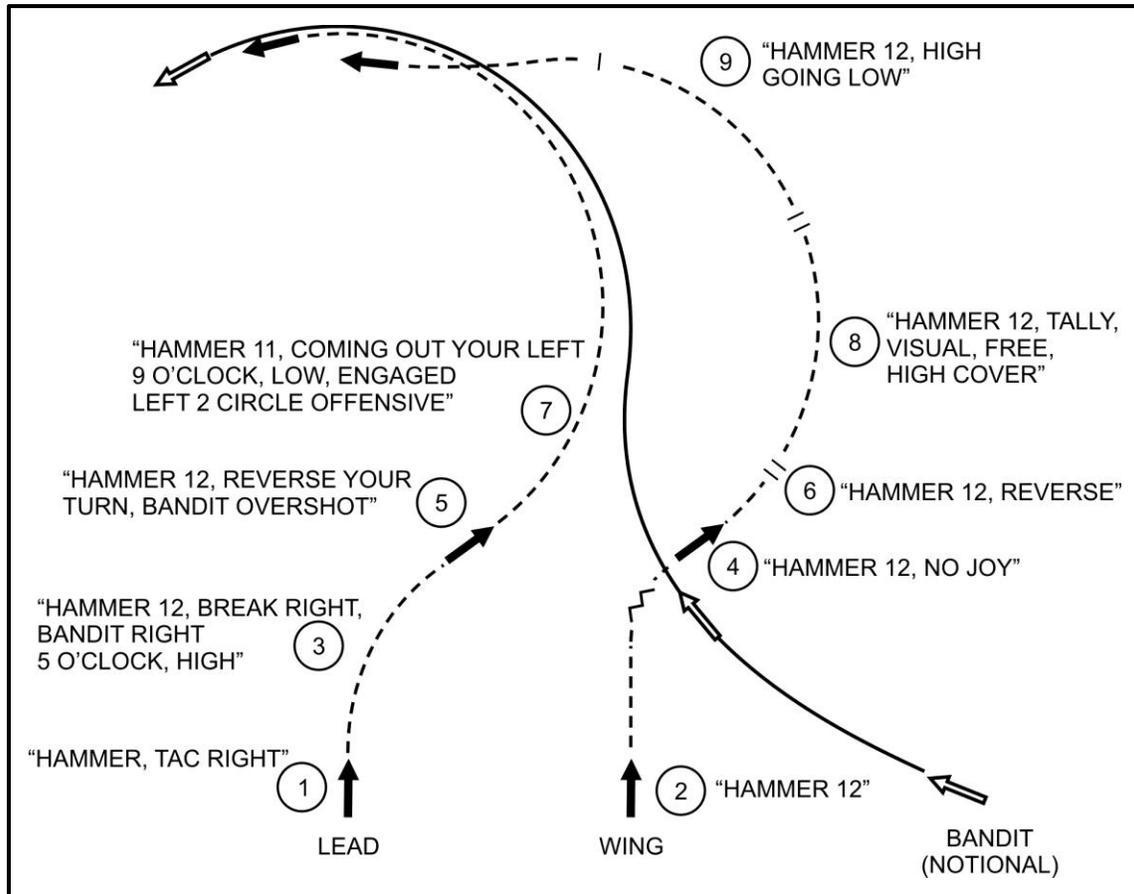


Figure 6-1 Loose Deuce Entry

Initial Loose Deuce comm (Wing on the right):

- Lead: "Hammer, Tac right"
- Wing: "Hammer 12"
- Lead: "Hammer 12, break right, bandit right 5 o'clock, high"
- Wing: "Hammer 12, no joy"
- Lead: "Hammer 12, reverse your turn, bandit overshot"
- Wing: "Hammer 12, reverse"
- Lead: "Hammer 11 coming out your left 9 o'clock low, engaged left 2 circle offensive"

Wing: "Hammer 12, tally, visual, free, high cover"
Wing: "Hammer 12, high going low"

606. HIGH COVER

If Wing executed the entry maneuvers aggressively, he/she should be near the aft limit of High Cover. High Cover exists outside the Engaged Fighter's turn circle, stepped up no higher than 2,000 ft above the Engaged Fighter, no further forward than Cruise bearing line, and no further aft than 4,000 ft behind the Engaged Fighter. If Wing doesn't execute the reversal when Lead directs it, Wing may end up well aft of High Cover.

High Cover allows the Free Fighter to have a higher energy state than the Engaged Fighter, and yet still be able to arrest closure or open separation. The constraints of High Cover exist so that the Free Fighter doesn't get too far from, or too fuselage-misaligned with, the Engaged Fighter such that he/she is unable to take over the engagement if required.

607. LOW COVER

Low Cover exists inside the Engaged Fighter's turn (on a smaller turn radius), up to 1,000 ft below the Engaged Fighter's altitude, no further forward than Cruise bearing line, and no further aft than 4,000 ft behind the Engaged Fighter. While maneuvering to Low Cover, the Free Fighter will have closure available and a higher overall energy state relative to the Engaged Fighter, by maneuvering to inside and below the Engaged Fighter's turn circle.

608. TRANSITIONING BETWEEN HIGH AND LOW COVER

After the initial break turn and nose-high reversal, you will probably be in a kinetic energy (airspeed) deficit, and may have to immediately transition to Low Cover. As you reach the aft limit of High Cover, overbank to point your lift vector to the inside of the turn. Slide just below and behind Lead's flight path to the Low Cover position (a Low Yo-Yo). As you reach the forward limit of Low Cover, reduce AOB and execute a High Yo-Yo to the High Cover position; because Wing is at a relatively constant power setting, expect to spend much less time in Low Cover than in High Cover.

The following comm is a single iteration of the high-to-low-to-high transition, and may be repeated numerous times:

Wing: "Hammer 12, high going low"
"Hammer 12, low going high"

609. REVERSALS

At some point the notional Bandit is going to try and force a mistake out of the Engaged Fighter by reversing his turn. Bandit reversals will be initiated by the Wing trunk IP (or Lead during solos):

Trunk IP: “Reverse, reverse, bandit reversed”
Wing: “Hammer 12, reverse”

Only after Wing responds to the reverse call will the notional Bandit, and hence the Engaged Fighter, reverse. Wing will continue working the Free Fighter role, going back and forth from High Cover to Low Cover as appropriate.

610. REVERSALS IN LOW COVER

If the Bandit and the Engaged Fighter reverse while you are in Low Cover, you can simply reverse with them. As a result of being slightly inside the Engaged Fighter's turn in Low Cover, you will be outside of the turn after the reversal, so pull back to the inside to re-establish Low Cover.

611. REVERSALS IN HIGH COVER

If the Bandit and the Engaged Fighter reverse while you are in High Cover, do not simply reverse, as you may end up being high, inside the turn, and belly-up to the Engaged Fighter. The Free Fighter has two options when the reversal is called while in High Cover:

- Option one is to execute an Upright Reversal. When the Bandit reverses, keep your turn in towards what is now outside the Engaged Fighter's new turn circle. When you are just about to cross the Engaged Fighter's new turn circle, reverse.
- Option two is a Displacement Roll. When the Bandit reverses, keep your turn in towards what is now outside the engaged fighter's new turn circle but reduce AOB slightly and raise the nose about five to ten degrees nose-high. When you are just about to cross outside the Engaged Fighter's new turn circle, execute a slightly unloaded roll to the outside, *without losing any altitude*. Stop the roll so as to be turning in the same direction as the Engaged Fighter. The advantage to this maneuver is that you should be able to keep the Engaged Fighter in sight the entire time.

Regardless of the reversal type, the Free Fighter should end up in High Cover in a turn to the opposite direction, compared with the turn direction before the reversal (same direction that Lead and the Bandit are now turning).

612. ROLE SWAPS

Role swaps are used to simulate the engaged Fighter experiencing a gun malfunction that prevents a gun shot on the Bandit. Role swaps will be initiated by either the Trunk IP or Lead:

Trunk IP: “Swap it”
Lead: “Hammer 12, my gun is jammed, can you engage?”

613. ROLE SWAP WITH WING IN HIGH COVER

Do not engage from High Cover. Immediately transition from High to Low Cover, then proceed with role swap comm from Low Cover:

Wing: "Hammer 12, high going low"

614. ROLE SWAP WITH WING IN LOW COVER

Once in Low Cover, immediately engage the Bandit, providing directive and descriptive comm to get Lead to the Free Fighter position as described previously:

Wing: "Hammer 11, level your wings, get your nose up. Bring it back to the left/right. Hammer 12 coming out your left 9 o'clock/right 3 o'clock, low, Hammer 12 Engaged left/right two-circle offensive"

Lead: "Hammer 11, tally, visual, Free, High Cover"

Once Lead establishes him/herself in Low Cover, or as directed by the trunk IP:

Wing: "Hammer 11, my gun is jammed, can you engage?"

Lead: "Hammer 12, Level your wings, get your nose up. Bring it back to the left/right, Hammer 11 coming out your left 9 o'clock/right 3 o'clock, low, Hammer 11 Engaged left/right two-circle, offensive"

Wing: "Hammer 12, tally, visual, Free, High Cover"

Trunk IP will call for the Bandit to be 'splashed':

Trunk IP: "Splash the Bandit"

Lead: "Hammer 11, Fox-2, Bandit in a left/right-hand turn"

Lead will then call a KIO.

Common Errors:

1. Not 'talking and turning' while executing the initial break turn.
2. Not continuing to fly the jet in response to Lead's directive comm.
3. Descending into Lead during the Displacement Roll.

615. GUNSIGHT TRACKING EXERCISE

The Gunsight Tracking (GST) exercise introduces the basic concepts of the Bubble, Attack Window, and Control Zone. You must understand both the Training Command Sidewinder Missile and gun envelopes (CNATRA weapon envelopes) completely prior to your first TACFORM flight. We will explore the process by which a pilot can control range, angles, and closure to effectively employ a particular weapon system against a target. This exercise is not BFM, but a part-task trainer used only to explore the concepts above. In keeping with traditional air-to-air training terms, we will refer to the terms ‘Fighter’ and ‘Bandit’ in the following discussion. Lead will be representing the ‘Bandit’ and Wing will be representing the ‘Fighter.’ Lead will be maneuvering to allow you to achieve a tracking solution fairly quickly (180 to 270 degrees of turn), yet hard enough to simulate a realistic scenario.

The goal of the GST is to recognize the Attack Window, execute an OBT to arrive in the Control Zone with range, angles, and closure under control, and to employ follow-on tracking gun shots on the Bandit. You will need to use lead to employ shots, and lag to stay offensive and manage the forward portion of the Control Zone. You will be just forward of the Control Zone for a tracking gun shot at the Bandit’s 0-30 deg AOT cone, at a distance of 1,000 to 1,500 ft. ***During the GST maneuver, the throttle should be advanced to MRT at the “Fox-2” call and kept there through the break turn execution.*** After the break turn, with stabilized AOA, the throttle may be modulated as required by the Fighter as to maintain closure in the Control Zone, and to manage pipper placement for a tracking gun shot. You may also use a High Yo-Yo maneuver to slow/stop closure, and/or increase nose-to-tail separation, or a Low Yo-Yo maneuver to decrease nose-to-tail separation, as applicable.

616. GST ENTRY AND EXECUTION

The set up for entry into the GST exercise will involve some three-dimensional geometry and communication to get both Lead and Wing at 16,000 ft and 350 KIAS. This procedure is listed below:

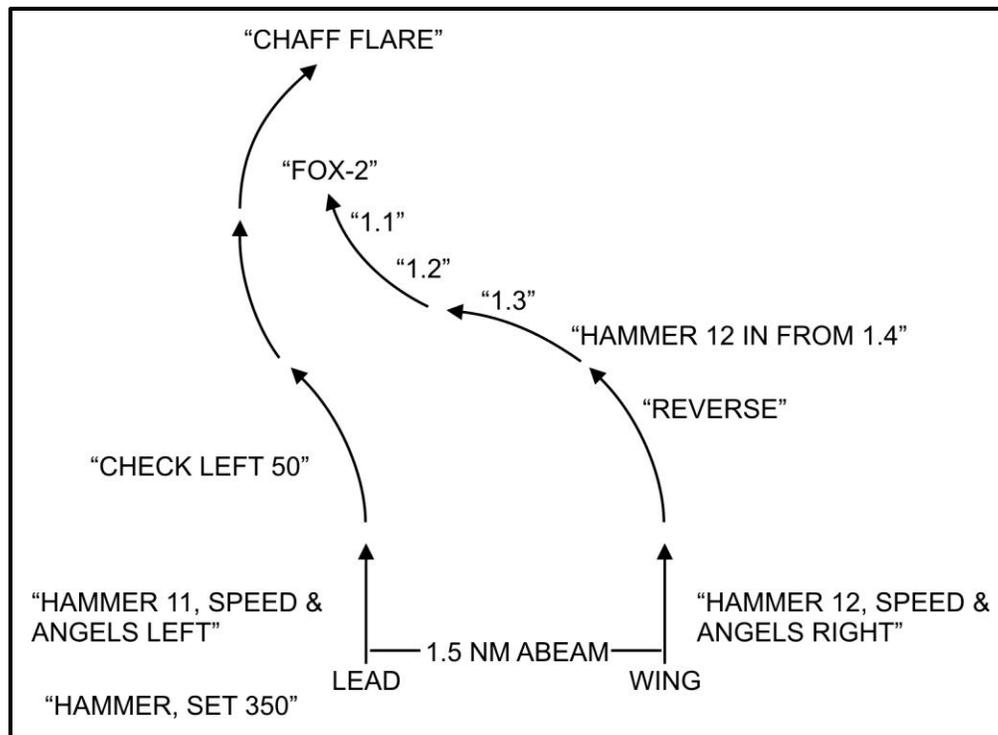


Figure 6-2 Set-up for GST

The set-up will be initiated by Lead:

Lead: "Hammer, setting up for GST"

Both Lead and Wing maneuver to assume 16,000 ft and 1.5 nm abeam. Once both aircraft are at 16,000 ft, 300 KIAS, and Wing is 1.5 nm abeam:

Lead: "Hammer, set 350"

Both aircraft will select MRT and execute a level acceleration, resetting power as required to establish 350 KIAS. Lead will initiate the Speed and Angels call, echoed by Wing:

Lead: "Hammer 11, Speed and Angels left"

Wing: "Hammer 12, Speed and Angels right"

Lead will then Check the flight 50 degrees away from the Fighter:

Lead: "Check left/right 50"

The Fighter will continue to turn toward the Bandit and direct a "reverse" when the Bandit is at the Fighter's canopy bow. The Fighter will reverse the turn and fly a pure pursuit curve,

maintaining airspeed and altitude, and putting the Bandit between the airspeed and altitude boxes in the HUD. The Fighter will then call:

Wing: “Hammer 12 in from X.X (A/A TACAN DME)”

The Fighter will count down the range to the Bandit in tenths of miles, while directing the Bandit to either tighten or ease the turn to maintain 40° AOT. At 1.0 DME, the Fighter will call:

Wing: “Fox-2”

At the Fox-2 call, both aircraft will select MRT. Lead will then attempt to defeat the Sidewinder shot by calling:

Lead: “Chaff Flare”

At the Chaff Flare call, the Bandit will execute a defensive break turn, placing his lift vector on to slightly below the attacker for approximately 180 degrees of turn, bleeding down to 300 KIAS. Lead will then set power to 94–96%. At the Fox-2 call, Wing will drive to the Bandit’s point of departure. A good technique is to use a geo-reference point to drive to the Bandit’s departure point (e.g. a cloud, ground ref, etc.). When aspect stops changing and the line of sight (LOS) rate rapidly increases, you are inside the Bubble, and have arrived at the Attack Window; realize that you might be able to notice the aspect change stabilizing more than a large LOS rate increase when flying the T-45.

Upon Bubble entry, you need to execute an OBT. Roll to place your lift vector on to slightly below the Bandit, and max perform to stabilize the Bandit in your canopy (about 1 fist above the canopy bow). Analyze the Attack Window Entry (AWE) and subsequent defender maneuvering. Wing will then use lead, lag, and pure pursuit to arrive in the Control Zone while managing range, angles and closure. The student should look to initially take a tracking gunshot (1000 – 1500 ft) on a non-maneuvering, cooperative target. After several successful tracking gunshots, the Bandit should be cleared to maneuver by the Wing trunk IP calling “cleared to maneuver.” The Bandit will leave the throttle set and use no more than 17 units while maneuvering. Wing should look to employ snapshots by squeezing the trigger with the piper 1 – 2 plane lengths in front of the Bandit, then lagging to the Control Zone.

This is not BFM, so Bandits should not be trying to create overshoots or closure problems. Lead may flash a wing into the Wing to indicate poorly managed range, angle, or closure problems, to simulate where a reversal would normally have neutralized the fight, but the Bandit will not maneuver to create BFM merge mechanics. A KIO call may be initiated by any member of the flight when any aircraft is Bingo fuel, but is normally initiated by the Wing IP when learning objectives are met, per the TACSOP.

For amplifying information regarding follow-on BFM training refer to Appendix B and your BFM/SEM FTI.

617. GETTING TO THE CONTROL ZONE AND ATTACK WINDOW ENTRY

After the shot, roll wings-level and watch the Bandit go across the horizon for approximately 2 to 3 seconds. About this time you should be near the point where the Bandit began his break turn (Attack Window Entry). With the Bandit at approximately the 11 or 1 o'clock position (roughly the canopy bow), execute your own OBT to arrive in the Bandit's Control Zone with range, angles, and closure under control. Getting to the Control Zone with angles and closure under control comes from executing a max performance break turn toward the right piece of sky at just the right time.

618. MISSING THE CONTROL ZONE

There are a few reasons why the Engaged Fighter may ultimately arrive outside the Bandit's Control Zone after the initial OBT. If Wing does not max perform the jet, the Bandit will initially establish a greater turn rate, such that Wing will have to work longer and harder to make up the angles to achieve Control Zone management.

If Wing executes a late break turn (after passing beyond the Attack Window), the flight path created may result in passing aft of or outside of the Bandit's Control Zone (or both). If Wing breaks early (before the Attack Window), the chance of turning in front of the Post, resulting in an in-close overshoot of the Bandit with high AOT, may exist. This subsequent in-close overshoot often gives the Bandit an opportunity to reverse and possibly neutralize the fight.

It should be noted again that your TACFORM flights are not BFM, so the Bandit will only acknowledge a recognized overshoot or missed Control Zone/Attack Window Entry with a wing flash; after the wing flash, the Bandit will cooperatively roll back to the original direction of turn for continued training.

619. STAYING OFFENSIVE

The objective is to maneuver inside the Bandit's 0–30 deg AOT cone at a distance of 1,000 to 1,500 ft for a tracking guns shot. Proper Attack Window Entry is the first key to getting to a gun solution; however, management of the pipper can also be difficult to achieve. Control of the jet and steady pipper placement will require smooth and precise control inputs required for valid shots.

620. MISALIGNED TURN CIRCLES (MATC)

When we discussed the Attack Window, the notion of 'near the point where the Bandit began his break turn' was used to mean just that – 'near' where the Bandit broke, not 'exactly' where the Bandit broke. Assuming similarly performing aircraft, if Wing executes an OBT at exactly the point in space as where the Bandit executed, theoretically Wing will end up on the same turn circle as the Bandit, but with Wing's nose stuck in lag. Breaking 'near' where the Bandit broke (or in the Attack Window), will establish what's needed for 'misaligned turn circles.'

Misaligning your turn circle ever so slightly with respect to the Bandit's is essential in being able to get your nose on the Bandit, given you don't have too many angles to make up. When turn circles are misaligned appropriately, you will initially notice your flight path drift slightly to the outside with the feeling you are going further into lag; however, as the fight continues, the Engaged Fighter will eventually observe his flight path crossing back inside the Bandit's turn circle, with the nose inching towards pure or lead pursuit. When misaligned properly, the Engaged Fighter will achieve the desired effect while remaining inside the Control Zone the entire time. Excessively misaligning turn circles will lead to flying too far outside the Bandit's turn circle and eventually, out of the Control Zone. Excessively misaligned turn circles are most commonly attributed to late Attack Window Entries.

621. EXCESSIVE RANGE OR STUCK IN LAG

After a poorly performed OBT, Wing may become stuck in lag and/or stuck outside of gun range. Executing some form of a Low Yo-Yo, as previously described, will probably be the solution to overcome excessive range or lag problems. With the Low Yo-Yo, if the Bandit has not maneuvered all the way down to the deck then you may be able to trade altitude below you for airspeed, enabling more G (and turn rate) available to make up the remaining angles and closure on the Bandit. If getting stuck in lag was the result of aligned turn circles, then a Low Yo-Yo will tend to force some misalignment and allow for future shot opportunities.

622. EXCESSIVE CLOSURE OR TOO LITTLE RANGE

If Wing is able to get the nose on the Bandit and take a shot, some amount of closure on the Bandit may have been generated. A little closure can be manageable if Wing is still within the Control Zone; too much closure can be a problem if it results in Wing flushing out in front of the Control Zone. Some form of a High Yo-Yo should at least allow Wing to slow closure, or if aggressive enough, even allow for some range opening.

Some may wonder why pulling power and decelerating isn't a solution to excessive closure, or too little range. Pulling power and reducing Wing's overall energy state may work, if the Bandit is not in a position or energy state to capitalize on Wing's reduced energy. An obvious advantage to pulling power is that it saves gas; however, the disadvantage of pulling power is a depleted energy state. Wing may later need to utilize or call upon lost energy if the Bandit decides to do something different than simply continuing current flow, and the self-induced energy loss from Wing may later show itself as an error in the air-to-air arena.

623. METHODS FOR TAKING GUNSHOTS

Taking the shot is not difficult in theory – put the pippet on the Bandit and pull the trigger. Sounds easy enough, but you will probably find that getting the pippet to settle down on the target takes much finer control inputs than you might think. Below are a couple methods for getting bullets to hit your target:

- **Saddling In.** By adjusting power, you may be able to settle comfortably 'in the saddle' (the Control Zone) with the pippet stationary on your target. It can be

difficult to get the pipper on the target, and equally difficult to hold it there. A disadvantage to this method may crop up if the Fighter excessively decreases power to maintain ranging during pure pursuit, and ends up at an energy deficit with respect to the Bandit.

- **Pilot Controlled Error Technique.** In essence the pilot controlled error technique is accomplished by placing the pipper slightly in front of the Bandit (e.g., a half pipper's width), and pulling the trigger while letting the pipper drift back through the target. The spread of bullets from this technique forces the target to fly through a string of bullets, increasing the probability of a successful engagement. If the Bandit survives, Wing should be able to execute a Low Yo-Yo, placing the nose back out in front of the Bandit for another quick shot. This method has a couple of advantages: first, pipper control is easier since the Engaging Fighter is not trying to steadily hold the pipper on a target; second, allowing the pipper to drift aft to the target briefly puts Wing's nose into a slight lag, allowing for a slightly higher energy state throughout the maneuver.

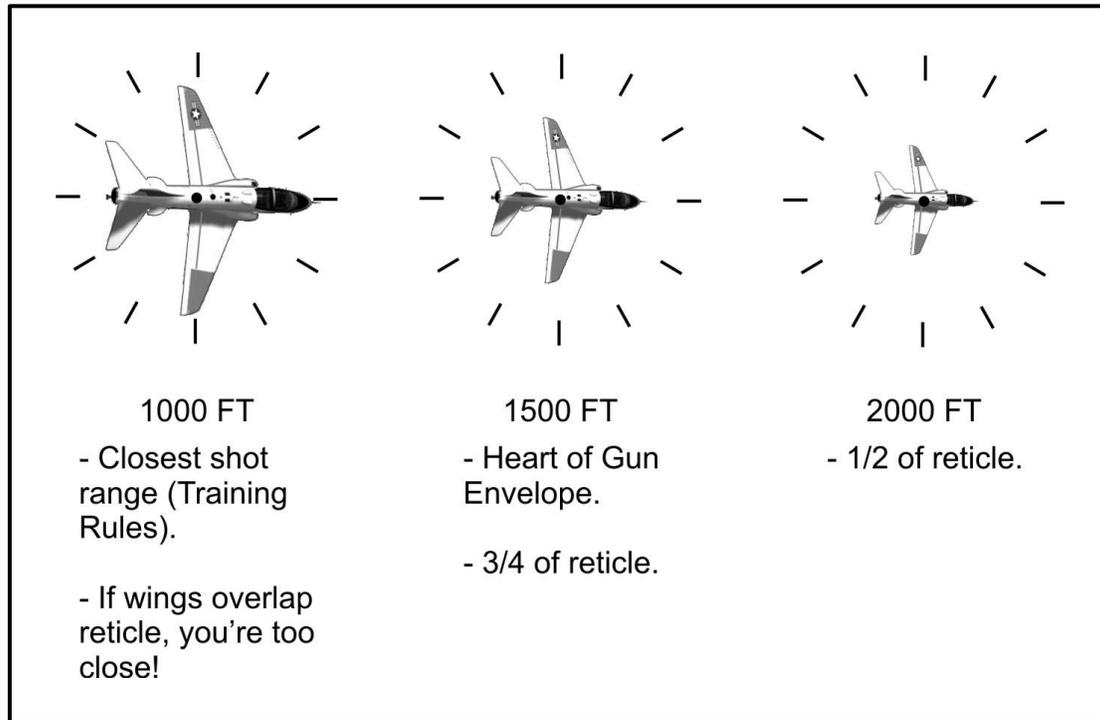


Figure 6-3 The Gun Reticle and Associated Ranges

Common Errors:

1. Poor timing on the Fighter's OBT.
2. Inadequate/floated OBT.
3. Leaving the piper on the target for too long and generating excessive closure, leading to an in-close overshoot.
4. Bleeding past turn rate numbers accidentally, and not allowing MATC geometry to work for you.

CHAPTER SEVEN SAFETY/EMERGENCY SITUATIONS

700. EMERGENCY

Oil Pressure Warning Light. This typically occurs following an overly aggressive unload to gain energy prior to an Attack Window Entry. Negative G followed by a positive onset of G may cause a momentary OIL PRESS Warning according to NATOPS. Knock-off the fight and go through the Emergency Procedures. It is acceptable to continue training after both Fighters reset following a momentary illumination of this light after this kind of maneuver.

701. RELATIVE MOTION/EXCESSIVE CLOSURE

In maneuvering flight, own aircraft motion is evaluated by detecting motion with relation to the other aircraft. As a pilot in a maneuvering environment, we need to be able to realize how our aircraft motion and the other aircraft's motion combine for overall perceived closure. This requires a high level of proficiency, as well as a disciplined internal and external scan. The key is to be able to keep 90% of our scan outside the cockpit and on the other aircraft, while scanning 10% inside to obtain our own aircraft performance information. To achieve this scan balance, we need to know where the critical flight instruments are that will paint a picture of our energy state, and then be able to evaluate what we are seeing quickly. An example of this is the scan during a Cross Turn, where we need to scan inside quickly to check airspeed, AOA, and altitude while maintaining situational awareness with respect to the other aircraft. Since our jet is moving in relation to the other, what he does will greatly influence what we need to do with our jet. Excessive closure can happen during any maneuver and we need to assess the information we are seeing and react accordingly. The two maneuvers where this is likely to happen are the Loose Deuce and Gunsight Tracking exercises. There are many scenarios and reasons why you may see excessive closure. If you realize that you are in this situation, you need to get your lift vector and/or velocity vector off of the other aircraft, and assume lag pursuit while maintaining sight, for safety of flight. In managing excessive closure, what we don't want is a belly-up turn away! If you are belly-up at close range, you lose sight of the other aircraft and cannot judge closure. ***Remember, your aircraft has momentum that will not change instantaneously!***

702. SPATIAL AWARENESS

This concept deals with the notion of knowing your energy state and the position of your aircraft in relation to the deck, the working area, and the other jets you're fighting with or against. You need to know where both aircraft are in relation to the deck and understand what you can do with the airspeed, altitude, and lateral/vertical separation that you have at that moment in time. A snapshot of your energy state, and of how both your jet and the other jet are positioned in relation to each other, will enable you to make sound maneuvering decisions. Spatial awareness is paramount to maneuvering effectively in the air-to-air arena, and it takes time and experience to develop. We're all a work in progress so don't get frustrated – keep working hard!

703. LOST SIGHT/LOOKOUT

Lookout doctrine has been discussed thoroughly in previous sections of this FTI. Your scan needs to be divided appropriately in order to monitor your own aircraft parameters while staying in position and sanitizing the airspace around the section. Any breakdown in your visual scan will seriously jeopardize section integrity and, in the operational world, could get you or Lead killed.

As a tactical pilot, you need to be disciplined in your scan pattern and concentrate on your areas of responsibility. Lookout discipline is not just for flying in Spread. During maneuvers, we need to keep sight of the other aircraft while maneuvering our jet. It is not possible to keep sight all of the time during many of the maneuvers, but if we have spatial awareness, we will be able to know where to look and when we should have sight. This is a concept that all tactical pilots use. We know when we should have sight and when we should not. Spatial awareness can fill in the picture to give us an idea of where to look when we have the opportunity to regain sight. To be able to do this, you need to have sight just before the other aircraft enters your blind cone. This will enable you to see and evaluate his aspect, track crossing rate, and separation. From this information, you can assess, factoring in your own maneuvering, where he will be on the backside of the turn or maneuver.

If after a couple of seconds, you think you should have sight and you do not, you need to call “blind.” This call can be made to your trunk IP over the ICS during dual hops or to Lead over the radio. Lead will brief what he wants you to do, but it usually involves having the Wing trunk IP talk your eyes back on if he has sight; if he doesn’t have sight or doesn’t say anything, call it out over the radio, and then listen to Lead’s comm. The other aircraft will either talk your eyes on or direct you how to maneuver. If Lead doesn’t have sight of you either, there will be a KIO soon thereafter, followed by altitude splits and a flow heading for the section. You need to echo the KIO, altitudes, and headings. This will ensure both aircraft are de-conflicted laterally and vertically. Once de-confliction is assured, Lead will effect a rejoin through directive comm.

704. AIRSICKNESS

The air-to-air arena is extremely dynamic and the body is exposed to a myriad of physiological stress factors. You need to realize what your body is telling you and what you can do to help yourself. Airsickness is not uncommon early on, and it’s nothing to be ashamed of. Let your IP know as soon as you don’t feel right so a KIO or Training Timeout can be called. You can swap controls if you have an IP in your backseat or ask for the lead if you are solo. ***Bring an airsickness bag with you on all TACFORM flights.***

**APPENDIX A
GLOSSARY**

A100. GLOSSARY – N/A

THIS PAGE INTENTIONALLY LEFT BLANK

APPENDIX B FOLLOW-ON BFM DISCUSSION

B100. FOLLOW-ON BFM DISCUSSION

Following your OBT in your BFM flights, you will focus on some additional points and follow-on maneuvering that we don't refer to in the Gunsight Tracking exercise in TACFORM. This is because TACFORM it is not BFM. Included here is an expanded discussion with regards to those options. This discussion starts with analyzing the Attack Window Entry (AWE), and subsequent defender maneuvering:

- If you are early to the AW, it will be easy to pull the defender forward on your canopy, possibly to your HUD. Use a lag maneuver to prevent an in-close overshoot. You can ease your pull or roll 45° nose-up, and out of plane momentarily, then re-establish your pull or reorient your lift vector back on the Bandit. An early correction normally results in a slight flight path overshoot, similar to a slightly late AWE. If you break early (before the Attack Window) you stand the chance of turning in front of the Post to overshoot in-close to the Bandit, with high AOT.
- If late to the AW, you will be unable to stabilize the Bandit on your canopy while max performing. In this case, keep the pressure on the Bandit with your lift vector on, and maintain the pull to arrive in the rate band. Utilize an energy sustaining pull once in the rate band. Now it is time to be patient and utilize misaligned turn circles. Keep in mind the later your AWE, the more neutral the fight, and thus we are engaged in more of a turning rate war with the Bandit.
- With a 'nailed' AWE, and a properly executed OBT, you will be able to stabilize the Bandit on your canopy right above the canopy bow with only a small amount of movement aft (i.e. a small flight path overshoot within the confines of the Control Zone).

The Bandit will slide aft on your canopy slightly during the flight path overshoot due to misaligned turn circles. Be patient, and do not bleed excessively. After the flight path overshoot the Bandit will stabilize on your canopy, then start to move forward. This is the time to perform an energy excursion with lift vector on the Bandit and a nibble of buffet pull, trading airspeed for nose position.

The best way to recognize misaligned turn circles is to reference the Bandit's position off your canopy. If the Bandit is moving forward on your canopy, then misaligned turn circles are working for you. If the Bandit is moving aft on your canopy, then you will have to wait for the geometry of MATC to start working for you. The time to start your energy excursion is as soon as the Bandit starts to move forward on your canopy. Assess weapons separation, put your lift vector on the Bandit, and perform a lift-limit pull. Employ the appropriate weapon and immediately lag off to preserve your position in the Control Zone. Adjust your pull to preserve airspeed and look for another shot opportunity. Do not bleed your airspeed without a reason to do so!

Redefinition Follow-on Mechanics

When the Bandit assesses your nose becoming a threat, a nose-low ditch maneuver will be performed. By maneuvering nose-low, the Bandit is attempting to create angles and attempting to hold your nose in lag. Look to counter this by driving to the Bandit's point of departure. Max perform in the vertical to create turning room, if required. Check your altitude (6k required to follow pure nose-low), target 220 – 250 KIAS, and enter the AW in the vertical plane, keeping the Bandit on the canopy bow while adjusting your lift vector to align fuselages. As the deck becomes a factor, use the deck transition ten percent rule to prevent busting the deck (i.e. 4000 ft. above deck = 40 deg. nose low, 3000 ft. above deck = 30 deg. nose low, etc.). During this nose-low fight, if range or closure becomes a factor, modulate the throttle or reorient your lift vector to aid in controlling closure. Make sure you have turning room above the deck to follow the Bandit. If you do not have the altitude to perform a pure nose-low maneuver (6k above the deck) you need to maneuver in the oblique and intercept the 10% rule. Adjust your lift vector off of the vertical just enough to prevent busting the deck. You will learn more about the deck transition options in the discussion of defensive maneuvering. Most importantly, you need to maneuver aggressively and timely to counter the Bandit's nose-low maneuver.

On the Deck

Arriving on the deck, AON will increase due to the fuselage misalignment. The more the fuselages are misaligned, the more AON will be created. Be patient with your pull, using G to maintain airspeed on the deck until identifying a shot opportunity. The shot opportunity will come immediately following the deck transition with relatively aligned fuselages, or if the Bandit did not perform a proper deck transition. With a properly performed deck transition, or higher fuselage misalignment, the shot opportunity most likely will come in the form of misaligned turn circles with a timely energy excursion. The best way to recognize misaligned turn circles is to reference the Bandit's position off your canopy. If the Bandit is moving forward on your canopy, then misaligned turn circles are working for you. If the Bandit is moving aft on your canopy, then you will have to wait for the geometry of MATC to start working for you. The time to start your energy excursion is as soon as the Bandit starts to move forward on your canopy. Assess weapons separation, put your lift vector on the Bandit, and perform a lift-limit pull. Employ the appropriate weapon and immediately lag off to preserve your position in the Control Zone. Then adjust your pull to preserve airspeed and look for another shot opportunity. Do not bleed your airspeed without a reason to do so!

The overall objective is to arrive in the Control Zone with range, angles, and closure under control. Take shots of opportunity and apply follow-on BFM (e.g. a lag maneuver back to the Control Zone) to maintain your offensive advantage.

Conclusion

The key to mastering Offensive BFM is in understanding and solving the 3 BFM problems of range, angles, and closure. You must perform a timely and well executed offensive break turn, utilize proper redefinition follow-on mechanics, and intelligently perform an energy excursion to kill the Bandit in a timely manner. This takes solid knowledge of the concepts, sound execution, and aggressiveness.

B-2 FOLLOW-ON BFM DISCUSSION